

Flying the Star Wars Millennium Falcon

Flying the Millennium Falcon is fun and easy. Here are a few performance tips to help you fly like Han Solo, Captain of the most iconic ship in the galaxy:

- How do I **charge** my Falcon?
 1. Slide the vehicle's ON/OFF switch to OFF/CHA
 2. Lift the charging wire compartment cover and plug the vehicle in so that the words "UP" are facing each other.
 3. The Falcon is charging when the green charging light turns on. If it doesn't, check the batteries on the controller and check the connection on the charging plug.
 4. The Falcon is fully charged when the green light on the controller turns off.
 5. Slide the ON/OFF switch to ON for both the controller and Millennium Falcon when you're ready to fly!
- How do I best **take off** and get my Falcon to **hover**?

The best take-offs are performed by placing your Falcon on a flat surface in an open area. Remove any nearby obstacles and don't fly it near fans or lamps! Push the Flight Throttle (the lever on the left) all the way forward quickly to lift the Falcon into the air. After takeoff, reduce throttle slightly to maintain a consistent hover. **Don't forget to point the red IR sensor on the front of the controller at the Millennium Falcon at all times!**
- How do I **adjust the height** once my Falcon is hovering?

Easy! Adjust the height by pushing the Flight Throttle forward to go up and backward (towards you) to lower.
- How do I **steer** it once it's flying?

Push the Direction Throttle – located on the right side of the controller – to the right in order to steer right. To steer left, push the Direction Throttle to the left.
- How do I **keep the Falcon from spinning** in one direction?

The Millennium Falcon features special dual-rotor technology that allows it to safely fly in the confines of your room. This sometimes causes the Falcon to spin slightly in one direction. The Trim Control buttons are used to help eliminate extra spin. These are the small square buttons indicated "L" and "R" in the center of the controller. If your Falcon spins to the **left**, tap the right button (labeled "R") repeatedly until the Millennium Falcon straightens out. If it spins to the **right**, tap on the left button (labeled "L") repeatedly until the Millennium Falcon straightens out.
- How do I **land** the Falcon?

Slowly release the Flight Throttle and the Falcon will start to land; aim for your preferred landing destination with the Direction Throttle. Remember to choose a flat, open space for better landings.
- What happens when the Falcon **bumps into an obstacle** and stops flying?

The Millennium Falcon has an automatic shut-off feature in case of an unexpected landing. Reset the Falcon by simply turning the ON/OFF switch OFF and immediately back ON to resume play.
- My Falcon sometimes loses altitude. What's the best way to **keep it flying high**?

Be sure that the Falcon is fully charged in order to reach maximum height. Flying time on a full charge is roughly 5 minutes.