

## FCC STATEMENT

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**FurRealFriends.com**

Questions? Call 1-800-844-3733

Product and colors may vary.

© 2010 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

U.S. Pat. No. 6811461.

26912 Asst.

PN 714690000

**AGES 4+**

**FurReal**  
friends

**GoGo**  
my walkin' pup™

**GoGo's Walkin' Puppies™**



 
Puppy colors may vary.

**CARE  
GUIDE**

## x3 BATTERIES INCLUDED

Replace with 3 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.


The switch is currently in TRY ME position.  
Please slide to ON position to activate your toy's play features.



## Getting to Know Your Pet

### Back sensor


When you pet your toy puppy on his back, he really responds to your touch!

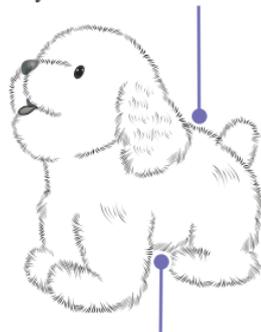

**TRY ME/OFF/ON**  
Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

## How to Play

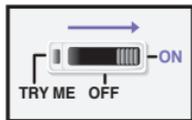

To activate your toy puppy, slide the TRY ME/OFF/ON switch on puppy's tummy to the ON position. Your puppy is now ready to play!

### Walking Mode

For walking action, position your puppy's front legs downward as shown.

When you pet his back, your toy puppy responds to your touch by walking around in circles. After a few seconds, he'll stop for more petting and encouragement, then he'll start walking again.



### Calm Mode

If you press and hold down your toy puppy's back for about a second, he'll make calm sounds and stop walking. When you pet him, he'll respond with more calm puppy sounds.

If you stop petting your puppy for about a minute, he'll go into Sleep Mode.

### Sleep Mode

If you stop petting your toy puppy for about a minute, he'll go to "sleep" and won't move or make any sounds. You can "wake" him up again and return to Walking Mode by petting his back!

**NOTE:** This toy uses battery power whenever its switch is in the ON position. When you're not playing with the toy, move its switch to the OFF position to help conserve battery life.

## Grooming Your Pet


Just like a real puppy, your toy puppy likes to stay clean. But make sure he doesn't get wet! Gently brush his fur with a cloth or soft brush to loosen any dirt. You can use a slightly damp cloth to remove stains, but don't use any cleaners on your toy puppy.

## Troubleshooting

If your pet doesn't seem to respond properly, first try sliding the TRY ME/OFF/OFF/ON switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.

## To Replace Batteries

1. Locate battery compartment on puppy's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 3 x 1.5V "AA" or LR6 size alkaline batteries.
5. Replace door and tighten screw.

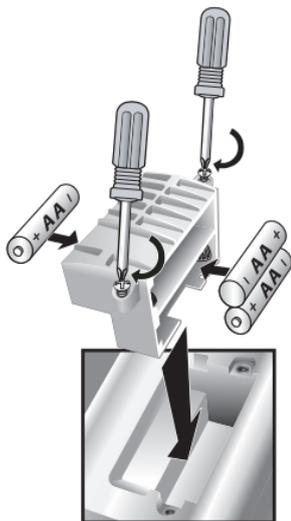

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.