




## RC Scootaloo on the Go!™

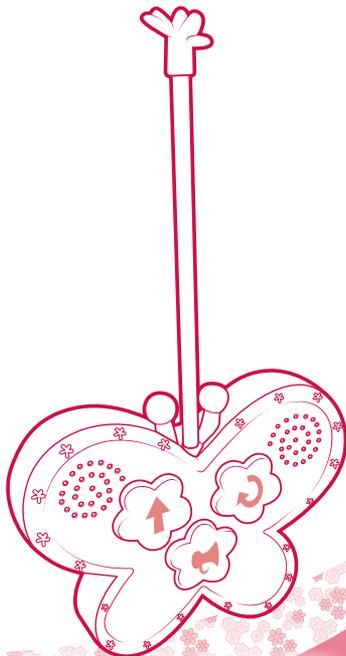

### SCOOTER

 **x3** 1.5VAA or R6 size  
**NOT INCLUDED**  
**BATTERIES REQUIRED**

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

### REMOTE CONTROL

POWERED BY  **x2**  
1.5V AA  
R6 size  
**BATTERIES INCLUDED**

Replace with 2 x 1.5V "AA" or R6 size batteries.  
Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.


**AGES 3+**

## GETTING STARTED

remote



scooter

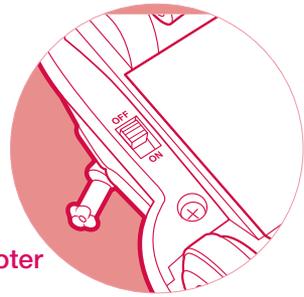

The remote control is packaged in “DEMO” mode. Activate its full range of features by moving the **PLAY/OFF/ DEMO** switch to the “PLAY” position. Switch is located on the back of the remote control. The scooter’s **ON/OFF** switch is located on the bottom of the scooter. Turn on the scooter by moving the switch to the “ON” position.



**TIP FOR PARENTS:** To turn off motor sounds in PLAY mode, press and hold the horn button for 5 seconds or until you hear a tone. Repeat step to turn the sound on again.


**NOTE:** The LED light indicates that the scooter’s turned on. The scooter and remote control use battery power whenever their switches are in the “ON” position. To help conserve battery life, move the switches to “OFF” when you’re not playing with the toy.

## PLAYING WITH THE TOY


Press button to move scooter forward

Press button to turn scooter

Press button for scooter sounds

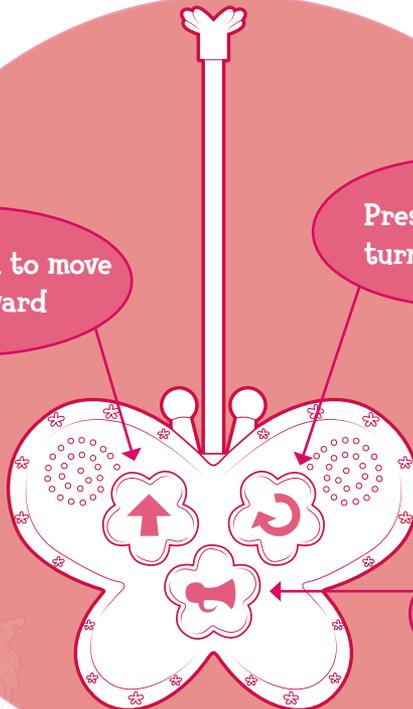


## BATTERIES

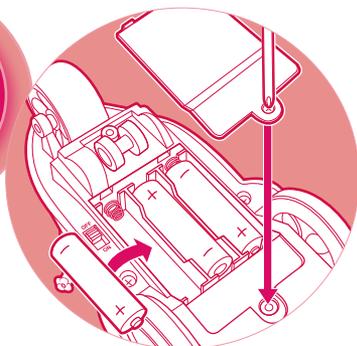

### TO INSTALL SCOOTER BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 3 x 1.5V "AA" or R6 size batteries. Replace cover and tighten screw. Alkaline batteries recommended.

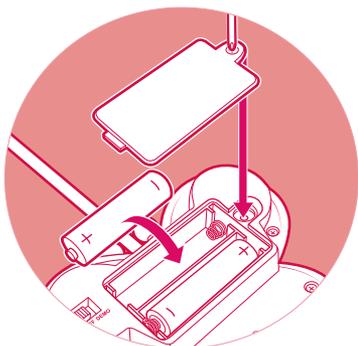

### TO REPLACE REMOTE CONTROL BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard old batteries. Replace with 2 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screw.

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## TROUBLESHOOTING

If your scooter does not respond, please switch OFF and back ON again or replace the batteries in the scooter and remote control.

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.



© 2009 Hasbro. All Rights Reserved.

TM & ® denote U.S Trademarks.

640680790

PN 6954150000



Questions? Call 1-800-327-8264