

**CAUTION:** Do not aim at eyes or face.

TO AVOID INJURY: Do not modify darts or dart blaster.

NOTE: Not for play in complete darkness. Know your surroundings


and clear the area of obstructions before each use.



#### **BATTERIES REQUIRED**


Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

## N-STRIKE MISSION KIT™ PINPOINT SIGHT™

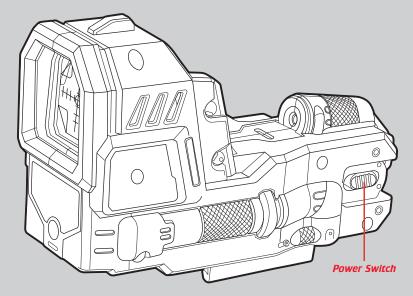

### TO INSTALL BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 2 x 1.5V "AAA" or R03 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

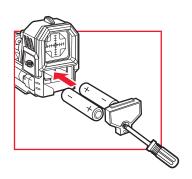

## IMPORTANT: BATTERY INFORMATION


# **CAUTION:**

- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
- 2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 4. Remove exhausted or dead batteries from the product.
- 5. Remove batteries if product is not to be played with for a long time.
- 6. Do not short-circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 8. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## USING THE N-STRIKE MISSION KIT™ PINPOINT SIGHT™

 Snap onto the Tactical Rail of most N-STRIKE® blasters (sold separately).

2. Slide power switch to the On position.

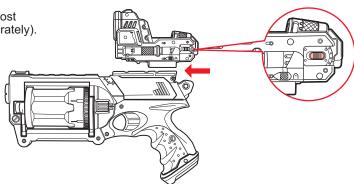



Product and colors may vary.
© 2009 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
92518/649150904 Asst.
PN 6951850000



