



AGES 8+

VORTEX

NITRON



CAUTION:

Do not aim at eyes or face. TO AVOID INJURY: Use only discs designed for this product. Do not modify discs or disc blaster.

CENTERFIRE TECH
ELECTRONIC SCOPE

MAGAZINE
RELEASE

DISC EJECT
SWITCH

BATTERY
COMPARTMENT

MAGAZINE
STORAGE

Additional magazine and
discs sold separately.

ACCELERATION
TRIGGER

LAUNCH
TRIGGER

20-DISC
MAGAZINE

Be sure to read and follow
all instructions carefully
before using this product.

Blaster:



x6

1.5V C or LR14 size
NOT INCLUDED

ALKALINE BATTERIES REQUIRED

Phillips/cross head screwdriver (not included)
needed to insert batteries.

Electronic Scope:



x2


1.5V AAA or R03 size
NOT INCLUDED

BATTERIES REQUIRED

Alkaline batteries recommended. Phillips/cross
head screwdriver (not included) needed to
insert batteries.


INSERTING THE BATTERIES IN THE BLASTER

1. Loosen screws in battery compartment door with a Phillips/ cross head screwdriver (not included). Remove door.
2. Insert 6 x 1.5V "C" or LR14 alkaline batteries.
3. Replace door, and tighten screws.

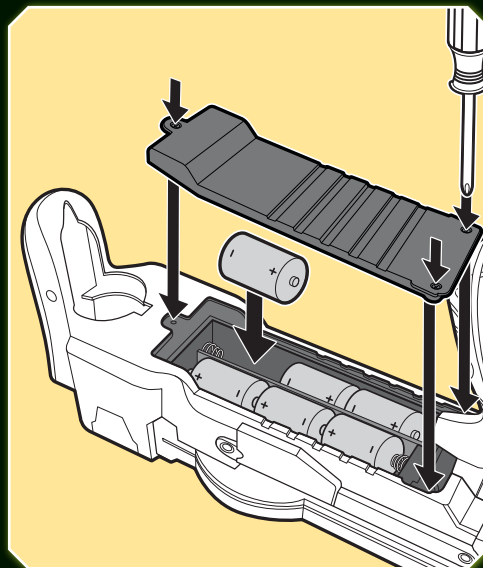


INSERTING THE BATTERIES IN THE SCOPE


1. Loosen screw in battery compartment door with a Phillips/cross head screwdriver (not included). Remove door.
2. Insert 2 x 1.5V "AAA" or R03 size batteries. Alkaline batteries recommended.
3. Replace door, and tighten screw.

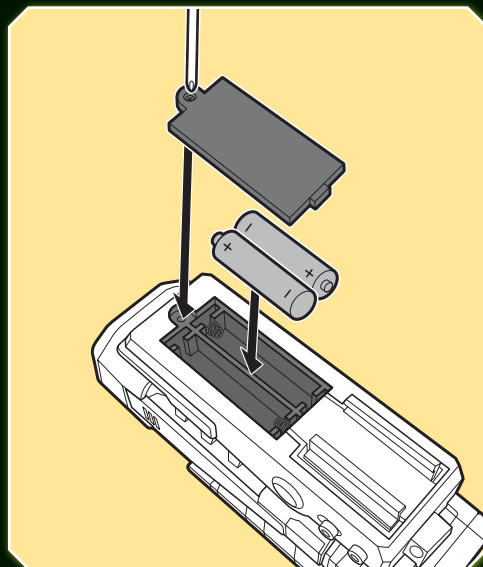


LOADING AND FIRING

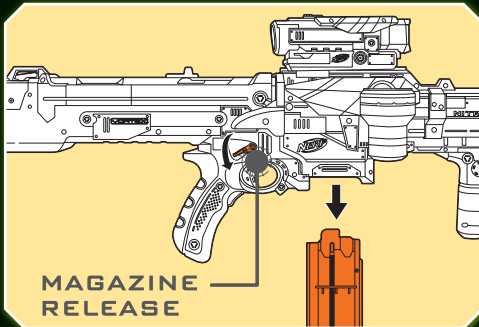


- (1) Push the MAGAZINE RELEASE down and pull out the 20-DISC MAGAZINE.

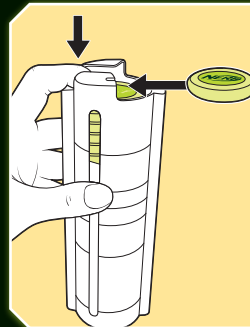


- (2) One at a time, load up to 20 DISCS into the 20-DISC MAGAZINE. Do not load more than 20 DISCS.

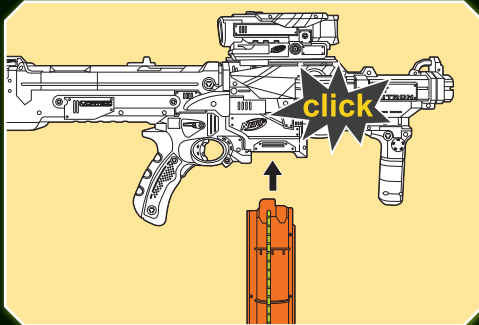


- (3) The 20-DISC MAGAZINE should slide easily into place. It only fits in one direction. Do not force it.

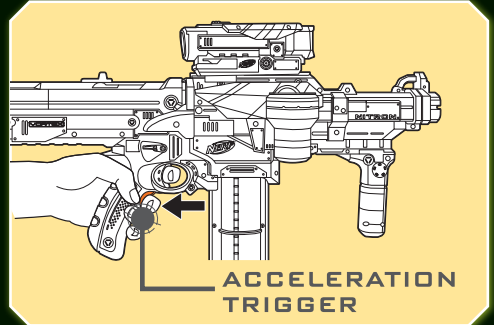


- (4) Press and hold the ACCELERATION TRIGGER to turn the accelerator motor on.

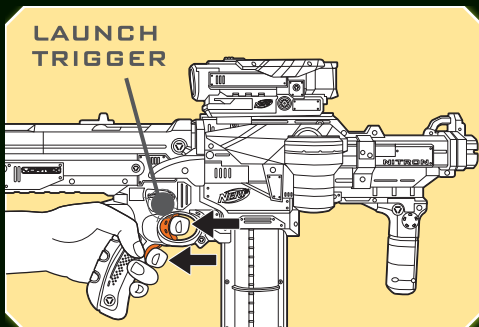



- (5) While holding the ACCELERATION TRIGGER, pull and hold the LAUNCH TRIGGER to fire.

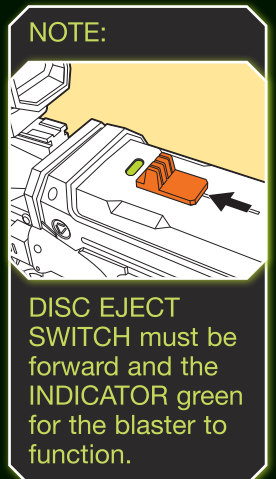

USING THE SCOPE

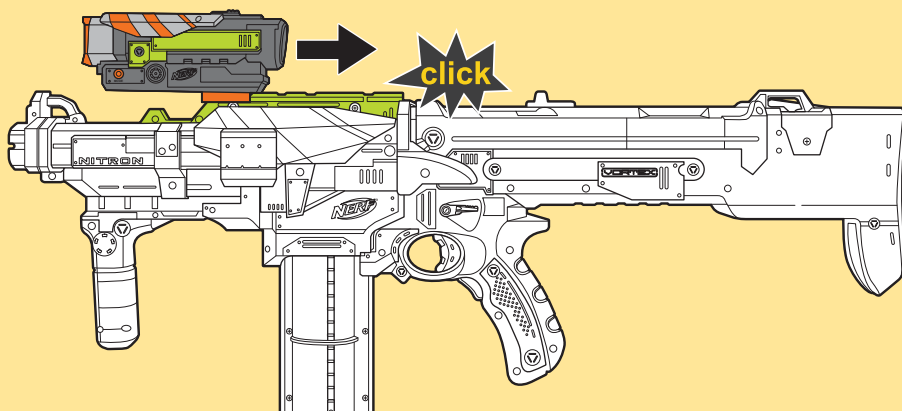

Slide SCOPE onto TACTICAL RAIL until it clicks into place.

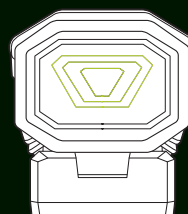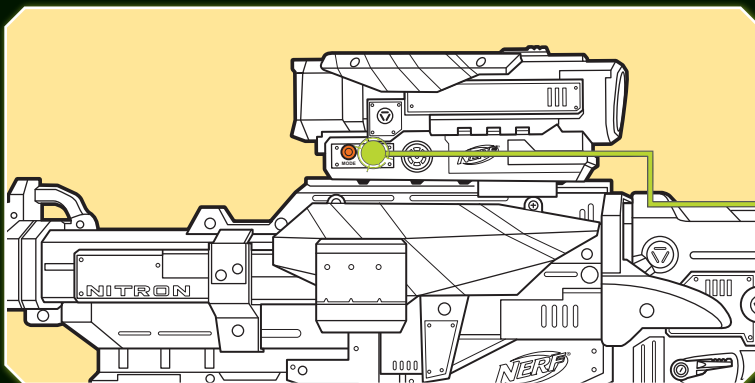


Press 1: Slow Tracking
Press 2: Fast Tracking
Press 3: All On
Press 4: Power Off

NOTE: Scope will automatically shut off after 10 minutes.

CLEARING A JAM

If the blaster is loaded but will not fire, it may be jammed.


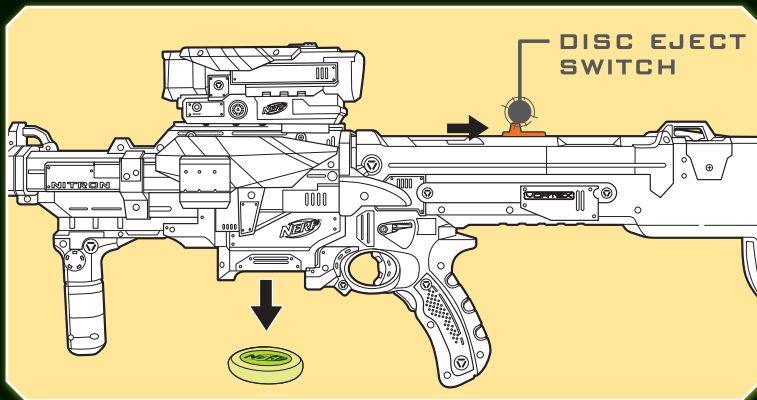


1 Remove the 20-DISC MAGAZINE following the loading instructions.

2 Slide and hold the DISC EJECT SWITCH backward. The jammed DISC should fall out of the MAGAZINE SLOT.

NOTE:

Be sure to return DISC EJECT SWITCH forward for normal operation

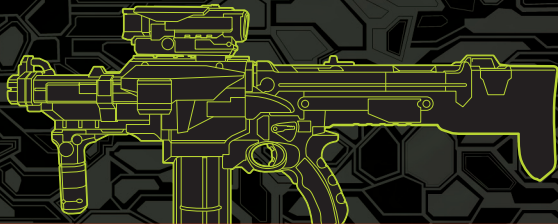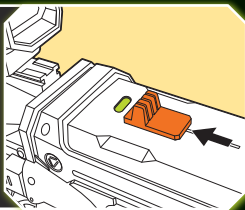

VORTEX™* Technology *The ultimate in long-range disc blasters!*



PRAXIS™ *



VIGILON™ *



PROTON™ *

Each sold separately.

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hey NERF Nation!

Join us online and keep up with the latest and greatest news from NERF!



Ask a parent before going online.

Product and colors may vary.



YouTube and the YouTube logo are trademarks of Google Inc. ®* and/or TM* & © 2011 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. US Patent Nos. 5471967, 5611322 and Patents pending.

Questions? Call 1-800-327-8264

32218 PN 7177510000