




# Hide and Seek Game

the card and sound concentration game

## INSTRUCTIONS

Rugrats Hide and Seek Memory Game is the electronic sound and card game for 1 to 4 players. Match the character or object on the card to the character's phrase that is directly related to that character or object. If you match correctly, you get to keep that card. The person with the most cards at the end of the game, wins.

- ON/START** Press to turn on the unit and start the game.
- OFF** Press to turn off the unit .
- SOUND BUTTONS** Press to hear a sound or phrase.
- CARD STORAGE** This handy storage area flips open and closed and will store each of the 16 playing cards.

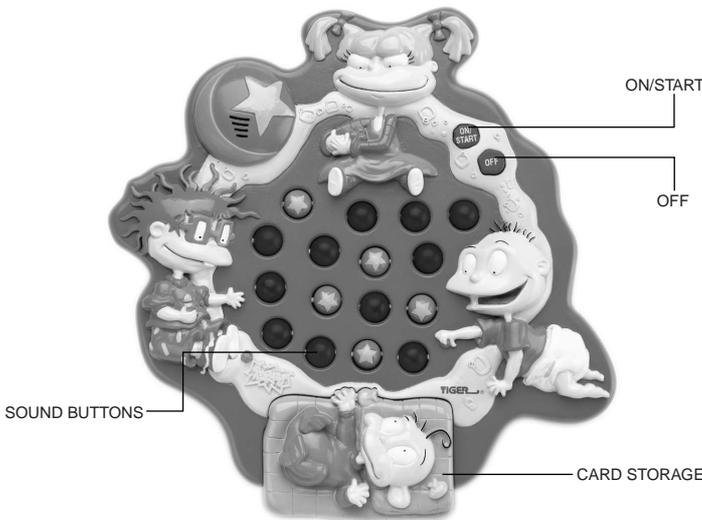

MODEL 09-717. Chuckie's glasses

Chuckie saying, "I don't know Tommy"

8. Chuckie's t-shirt

Chuckie saying, "You gotta help me Tommy!"

9. Angelica

Angelica saying, "Hiya babies!"

10. Charlotte Pickles

Angelica saying, "Mommy!"

11. Drew Pickles

Angelica saying, "Daddy!"

12. Cynthia Doll

Angelica saying, "Well, Cynthia"

13. Spike

Spike barking

14. Spike's bowl

Spike barking

15. Spike's bone


Spike barking

16. Reptar

Reptar roaring

### INSERTING THE BATTERIES

Open the battery compartment door on the bottom of the unit using a PHILIPS screwdriver. Insert 3 "AA"/LR6 batteries, or equivalent, making sure to align the "+" and "-" signs as indicated. Screw closed the battery door using a PHILIPS screwdriver.

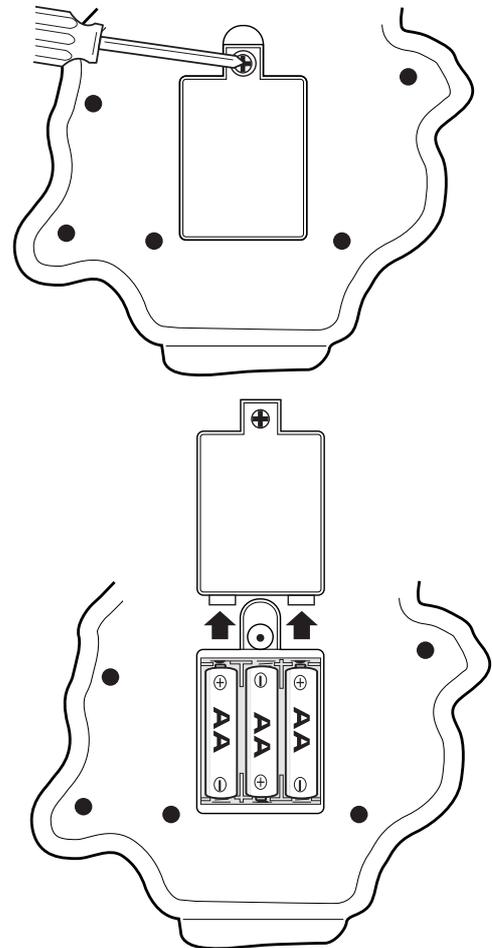

### CARDS

There should be 16 cards in the deck of cards included with the game. They are stored in Dil's storage area. You should have one of each of the following cards. The phrase that is supposed to match each card is also listed so that you will know what phrase goes with each card.

- 1. Stu Pickles Tommy saying, "My Daddy turned on the sprinkler"
- 2. Tommy Pickles Tommy saying, "C'mon guys, let's get started!"
- 3. Dil Pickles Tommy saying, "Look Dilly!"
- 4. Grandpa Tommy saying, "He's a pretty amazing Grandpa!"
- 5. Chuckie Chuckie saying, "Oh no!"
- 6. Charles Sr. Chuckie saying, "Just like my Daddy!"

To ensure proper function:

- Do not mix old and new batteries
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision. (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.

## OBJECT OF THE GAME

To collect as many cards as you can. The person with the most cards at the end of the game, wins.

## LET'S PLAY

1. Start by placing all the cards face down on the table or playing surface.
2. In the first game, the youngest player starts. After that the winner of the previous game goes first.
3. Push the ON/OFF button.
4. The first player should pick a card. Now they have to find the phrase that matches or relates to that card by pressing one of the 16 sound buttons. For example, if the player chooses CHARLOTTE PICKLES, who is Angelica's Mom, they have to find Angelica saying "Mommy!" (See the CARDS section of this manual for an answer index of which card goes with which phrase.)
5. If they find the phrase that matches their card, they get to keep that card! They also need to turn over the sound button that they pressed until they see the symbol on the other side. This means that that button cannot be pressed again during that game.
6. If they do not find the phrase that matches their card, they need to put their card back on the table, face down and it's the next player's turn.
7. The game continues with the other players taking turns.
8. When all the cards are gone and all the sound buttons are turned over, the game is over.
9. The person with the most cards wins the game!

## TROUBLESHOOTING

1. If the unit does not work, please check that the batteries have been inserted correctly.
2. If the volume is too low, please install new batteries.
3. Check the battery compartment cover to make certain it is securely shut.

If you are still having trouble after checking all of these things, please feel free to call our toll-free number at 1-888-TIGER SOS and a representative will be happy to help you.

## CARE AND MAINTENANCE

To protect the product, follow these instructions:

- Prevent spills of food and beverage on the product.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft cloth.
- Do not throw or kick the product and do not push sharp objects through the speaker opening.
- Do not put the product in direct sunlight or near any source of heat.
- Designed for children 4 and up.

## 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$6.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

**The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.**

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department  
1000 N. Butterfield Road, Unit 1023  
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.**

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our Web Site at: [www.tigertoys.com](http://www.tigertoys.com)

©, TM & © 1999 Tiger Electronics, Ltd.  
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.  
[www.tigertoys.com](http://www.tigertoys.com)

© 1999 VIACOM INTERNATIONAL INC. All Rights Reserved.  
NICKELODEON, RUGRATS and all related titles, logos and characters are trademarks of Viacom international Inc.  
Created by: Klasky/Csupo Inc.



PRINTED IN CHINA

097140001HWI-01