

PLAYSKOOL®

BIRTH +
06122

2-In-1 Tummy Time Gym™

Thank you for buying this PLAYSKOOL product!



- ⚠ CAUTION:** NEVER leave child unattended. To avoid injury and to prevent possible strangulation and entanglement injury, NEVER place gym in crib or playpen.
- NEVER add strings, ties or other products to gym.
Remove gym from the children's environment when they begin to stand up.
- ⚠ CAUTION:** This product contains small parts which are necessary for assembly. Prior to and during assembly of this product, keep small parts out of children's reach. Small parts pose a choking hazard to children under 3 years.

PLEASE NOTE: The toy is shipped in "demo" mode, with the switch set to "OFF." Move switch to any other setting to remove "demo" mode.

Includes electronic unit, 2 soft characters, 2 bases, 2 arms and 6 screws.

Includes 3 x 1.5V "AA"/R6 batteries.
Alkaline batteries recommended.
Phillips/crosshead screwdriver (not included) required for battery installation and assembly.


Adult assembly required.

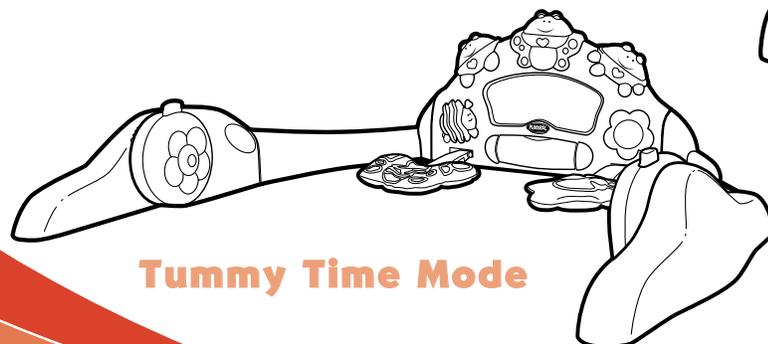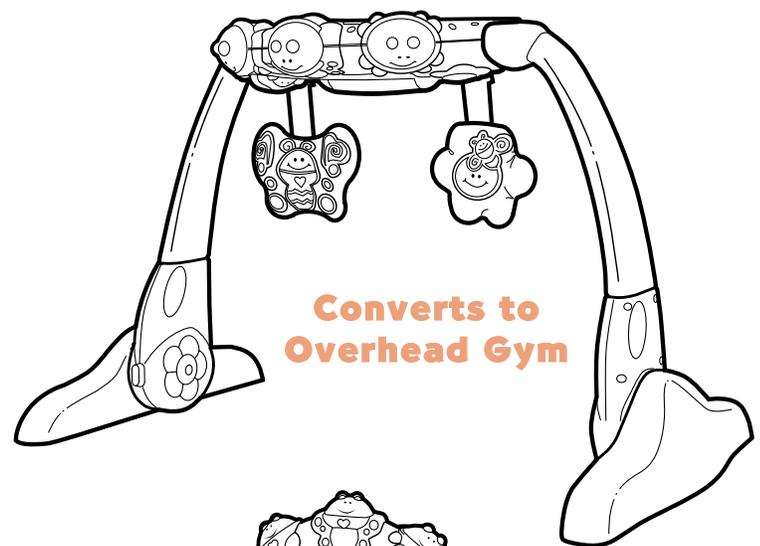

TO ASSEMBLE


1.

Match pivot piece on arm marked "RIGHT" with base marked "RIGHT." Tighten long screw (with washer head) into each pivot piece/base assembly. Repeat for pivot piece and base marked "LEFT."

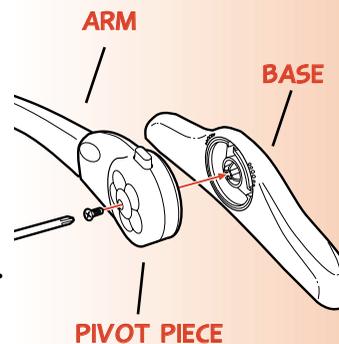


2.

Insert posts on arms all the way into openings on electronic unit. Tighten 2 short screws into each side of electronic unit to secure arms to unit.

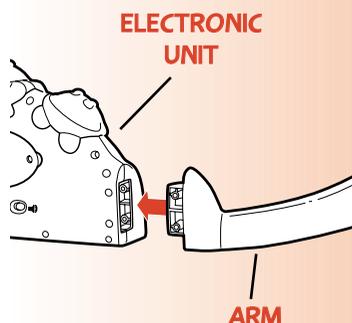

3.

Insert posts on soft bee and butterfly into slots on electronic unit (listen for snap).

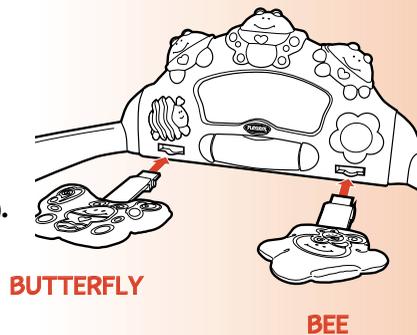

TO USE

The 2-In-1 TUMMY TIME GYM toy is a musical, light-up tummy-time toy that instantly converts to an overhead gym! This unique toy also features a colorful roller to spin and an angled mirror that lets babies see themselves!

 
2 WAYS TO PLAY!

Note: When the legs are in locked position, the word "LOCKED" will be visible on the side of the button. Check for this word each time you lock the legs in position.

Note: Be sure baby is clear of toy when adjusting to gym or tummy-time positions.


Tummy-Time Toy

As a tummy-time toy, baby can press the bee and butterfly or light-up characters to get musical and light-up rewards.



To adjust to tummy-time position:

Lay toy down so that bottom of electronic unit rests on the floor. Press button and rotate base down so that it lies flat on the floor. Repeat for other button and base.

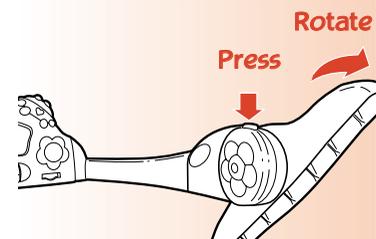


Gym Toy

When used as a gym, babies lie on their backs and bat the dangling bee and butterfly to activate lively melodies, fun sound effects and bright, light-up characters.



To adjust to gym position:

Lay toy down so that bottom of electronic unit rests on the floor. Press button and rotate base into "up" position (listen for snap). Repeat for other button and base. Lift electronic unit to stand up toy.

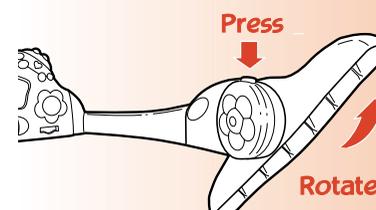

2 MUSIC SETTINGS!

Extended Play (switch set to 🎵)


Plays 10 full songs continuously for 10 minutes. Each time you press a light-up character or bat/press the soft bee or butterfly while a song is playing, the toy will change songs and play an additional 10 minutes.

Baby Activated (switch set to 🎵)

Plays a segment of a song each time baby bats or presses the soft bee or butterfly. Plays a full song each time light-up characters are pressed. While a full song is playing, press a light-up character or soft bee or butterfly to change songs.


Note: After a brief period of inactivity, the toy will prompt baby to play again before shutting off.

- Adjust sound level to HIGH (🔊) or LOW (🔇) using the volume switch.
- When storing the toy, move the operating switch to OFF to prevent accidental activation.

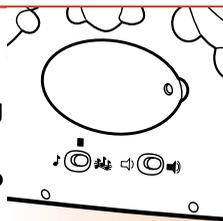

TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door. Remove and discard old batteries. Insert 3 x 1.5V "AA"/LR6 alkaline batteries. Replace door and tighten screws. **Note:** If you've changed batteries with the switch set to "OFF," you'll need to move switch to any other setting to remove "demo" mode.

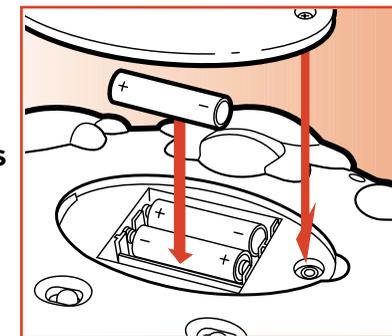

⚠️ CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

⚠️ CAUTION:

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by
National Campaign for Hearing Health
1050 17th Street NW, Suite 701
Washington, DC 20036



Talk to your doctor if you answer NO to any of these questions:

- | YES | NO | Birth to 3 Months |
|--------------------------|--------------------------|--|
| <input type="checkbox"/> | <input type="checkbox"/> | Reacts to loud sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Is soothed by your voice |
| <input type="checkbox"/> | <input type="checkbox"/> | Turns head to you when you speak |
| <input type="checkbox"/> | <input type="checkbox"/> | Seems to know your voice and quiets down if crying |

- | YES | NO | 3 to 6 Months |
|--------------------------|--------------------------|--|
| <input type="checkbox"/> | <input type="checkbox"/> | Looks upward or turns toward a new sound |
| <input type="checkbox"/> | <input type="checkbox"/> | Responds to "no" and changes in tone of voice |
| <input type="checkbox"/> | <input type="checkbox"/> | Enjoys rattles and other toys that make sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Becomes scared by a loud voice |

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at **1.800.535.3323** or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.

