

 
# VIRTUAL FISHING

## OPERATION MANUAL

### SPECIAL FEATURES

Use this instruction guide to help you get more fish!

- Multiple locations include lakes, rivers, and oceans.
- Multiple sites within each location
  - 10 kinds of fish.
  - 10 kinds of bait
  - 10 rods
- 2 skill levels: Beginner and Professional.
- Indicator light flashes when you land a fish.
- Multiple kinds of vibrating "pulls" when you have a fish on your line.
  - Multiple line lengths
  - Increase/Decrease drag feature
  - Weather/Water conditions
- Tournament or Freestyle game modes
  - Catch count
- Automatic power off after 5 minutes of no operation.

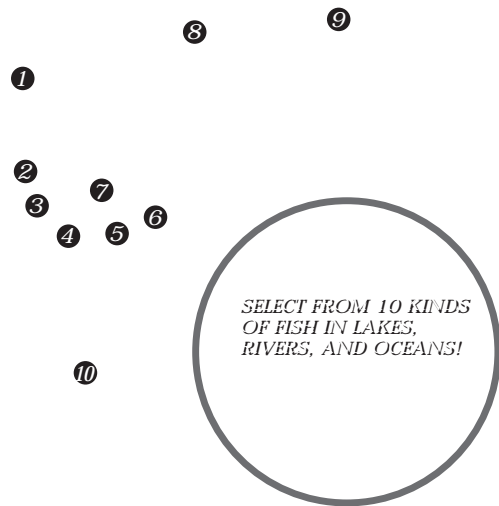


### SCREEN DISPLAY KEY

- |   |   |
|---|---|
| ① Switch to choose from BEGINNER or PROFESSIONAL level. | ⑤ To cancel                             |
| ② Selection of functions/Up for extension adjustment    | ⑥ Sound on/off                          |
| ③ Activating of functions/Down for extension adjustment | ⑦ Reset                                 |
| ④ On/Off & Casting                                      | ⑧ Flashing indicator lamps              |
|   | ⑨ Your handle for reeling in your catch |
|   | ⑩ List of 10 function icons             |

## SCREEN DESCRIPTION

 - ① Selection of fishing location
- ② Selection of fishing site within chosen location
- ③ Checking of existing Water/Weather conditions
- ④ Selection of the target fishes you intend to catch
- ⑤ Selection of baits
- ⑥ Selection of fishing rod
- ⑦ Selection of length of fishing line
- ⑧ Selection of extension adjustment (Drag)
- ⑨ Selection of Tournament or Freestyle fishing
- ⑩ Catch count

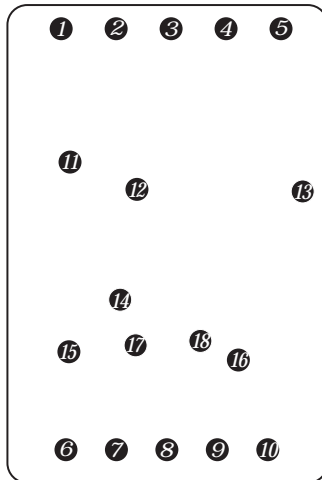

- ⑪ Depth of bait in water
- ⑫ Fish indicator
- ⑬ Line extension indicator
- ⑭ Length of the cast indicator
- ⑮ Fish caught
- ⑯ Time indicator (for Tournament mode)
- ⑰ Number of fish caught/minutes in Tournament
- ⑱ Weight of fish caught/seconds in Tournament

## HOW TO FISH

STEP 1

1. Press the ON/START/CAST button to start fishing!

PROFESSIONAL

BEGINNER

2. Turn the switch to choose BEGINNER or PROFESSIONAL levels. Switch UP for BEGINNER and DOWN for PROFESSIONAL. It's a good idea to begin as a BEGINNER!

3. Refer to the GENERAL GUIDE FOR FISHING to learn all you can about catching the most fish!

USE THE 10 FUNCTION ICONS TO HELP YOU:

### 1. LOCATION SELECTOR



Choose between lakes, rivers and oceans.



### 2. SITE SELECTOR



Choose between 3 sites for each location.



### 3. WEATHER/WATER CONDITIONS

Examine the existing weather and water conditions to aid you in your fishing.



### 4. FISH SELECTOR



There are 10 kinds of fish for you to choose. You can even select from ALL fish at once or just one kind if you wish!



Remember, don't forget to refer to the GENERAL GUIDE FOR FISHING to learn as much information as you can on how to catch the most fish!

### 5. BAIT SELECTOR



Choose from 10 baits.



### 6. ROD SELECTOR



Choose from 10 rods.

### 7. LINE LENGTH



Choose from 10 line lengths (in meters).

## 8. INCREASE/DECREASE DRAG



 
Choose from 5 levels of drag.



## 9. TOURNAMENT OR FREESTYLE





Please note that in TOURNAMENT mode, you cannot select your own location and type of fish.



## CASTING

STEP 2

  Hold down the START/ON/CAST button and actual swing your arm forward in an ACTUAL CASTING MOTION! Release the START/ON/ CAST button after your casting as illustrated. Check the marked area (shown in illustration) to see if your cast was successful. If not, cast again!




## REELING IN

You can control your bait's depth by reeling speed and by keeping at the same level as the fish (see illustration).



 STEP 3



pressing the UP or DOWN button to prevent your fish from breaking your line and swimming away!

## YOUR FISHING PERFORMANCE

STEP 6

Depending on the mode you selected, check your performance after you have caught a fish!



BEST CATCH



FREESTYLE MODE  
Top 5 fish caught are displayed.



TOURNAMENT MODE  
Top 5 fish caught are displayed.

## GETTING A BITE ON THE BAIT

STEP 4

 


When you get a fish biting at the bait, your unit will begin to shake and vibration to simulate the actual pulling of the fish! The 3 indicator lights will also flash simultaneously. Set the hook by quickly jerking your fishing unit backward!

## EXTENSION ADJUSTMENT (Drag)

STEP 5

If your fishing unit keeps shaking and a fish is shown on the screen, continue reeling him in! Adjust the extension by



## BATTERY REPLACEMENT

1. Loosen the screw and open the battery cover.
2. Insert 2 fresh "AA/LR6" size batteries into the compartment and make sure the polarity (+/-) is as indicated.
3. Close the cover and tighten the screw.
4. For longer life of battery, use alkaline ones.
5. DON'T USE RECHARGEABLE BATTERIES.

 


## CAUTION/DEFFECT AND DAMAGE

1. To ensure proper function:
2. Do not mix new & old batteries.
3. Do not mix alkaline, standard or rechargeable batteries.
4. Battery installation should be done by an adult.
5. Non-rechargeable batteries are not to be recharged.
6. Rechargeable batteries are to be removed from the toy before being charged (If removable).
7. Rechargeable batteries are only to be charged under adult supervision (If removable).
8. Only batteries of the same or equivalent type as recommended are to be used.
9. Batteries are to be inserted with the correct polarity.
10. Exhausted batteries are to be removed from the toy.
11. The supply terminals are not to be short circuited.

## RESET

On playing this game at the beginning or after changing batteries, press the RESET button to delete the memory in the computer.



## 90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$12.00. Payments must be by check or money order payable to Tiger Electronics, Inc.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at [www.tigertoys.com](http://www.tigertoys.com).



TM, ®, & © 1998 Tiger Electronics, Inc.  
All Rights Reserved  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061, U.S.A.  
[www.tigertoys.com](http://www.tigertoys.com)

660030001IWTIE-01