




Tonka[®]




Scot 'n Scoop 3-in-1 Ride-on[™] with Revvin' Beepin' Wheel[™]

Thank you for choosing this TONKA toy!


1 Push
(9+ months)

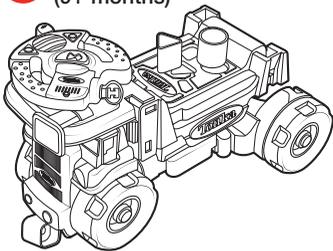

2 Walk
(12+ months)

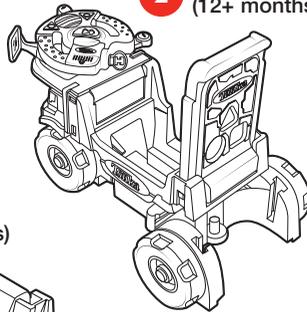

3 Ride
(18+ months)

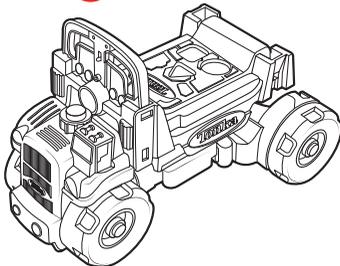

For children up to
42 pounds (19 kg).



WARNING:

TO AVOID SERIOUS INJURY: continuous adult supervision required; never use near motor vehicles, near streets, swimming pools, hills, steps, or sloped driveways. Always wear shoes. Allow only one rider.

OVER 9 months
to 3 years

91056

Adult supervision
required.

Includes REVVIN' BEEPIN' WHEEL, truck body, seat, gravel guard, rear axle assembly, 2 screws, 3 plastic blocks and instructions.

Adult assembly
and Phillips/
cross head
screwdriver
(not included)
required.



CAUTION:

This product contains small parts which are necessary for assembly. Prior to and during assembly of this product, keep small parts out of children's reach. Small parts pose a choking hazard to children under 3 years.



x3 1.5V AA or R6 size


BATTERIES INCLUDED

Replace with 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.


ASSEMBLY

Basic

Attach rear axle assembly to truck body with the 2 screws.

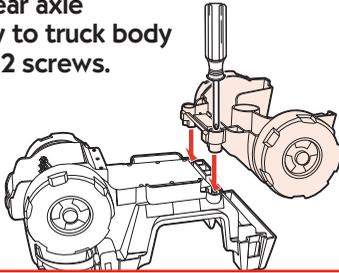


Push Mode

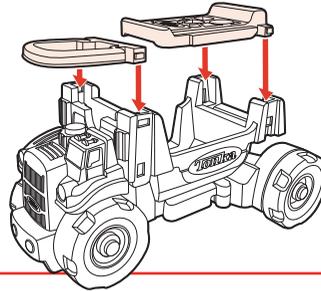


1. Make sure seat is locked in the "down" position.
2. Make sure gravel guard is locked in the "down" position.

Walk Mode

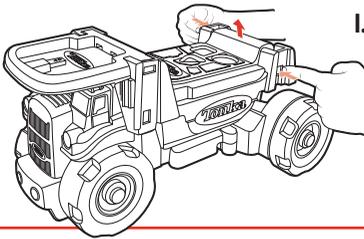

1. Remove seat by pressing both buttons at the same time and lifting the seat up.

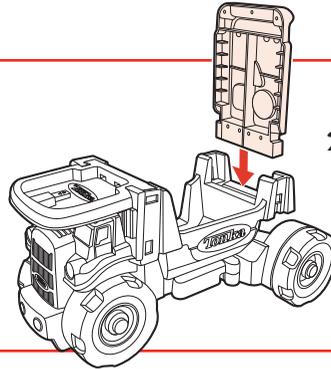


2. Attach seat in the "up" position. Push down until the buttons click to lock seat in place.


Ride-on Mode

NOTE: Seat must be in "down" position for child to ride on vehicle. Never allow child to sit or ride on gravel guard.

1. Remove seat by pressing both buttons at the same time and lifting the seat off the truck body.

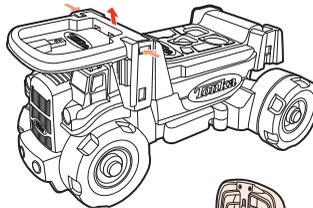

2. Attach seat in the "down" position. Push down until the buttons click to lock seat in place.


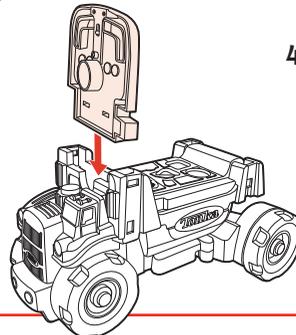


3. Remove gravel guard by pushing both buttons at the same time and lifting the gravel guard up.
4. Attach the gravel guard in the "up" position by pushing both buttons at the same time and inserting guard vertically into slot, then pushing down on the gravel guard until buttons click and guard is locked in place.

Revvin' Beepin' Wheel


To attach to SCOOT 'N SCOOP 3-IN-1 RIDE-ON:

1. **Make sure gravel guard is locked in the "down" position.** If it is in the "up" position, press both buttons at the same time and pull gravel guard up and off the truck body. Attach in the "down" position by pressing buttons and inserting guard horizontally into slot, then pushing down on the gravel guard until buttons click and guard is locked into place.

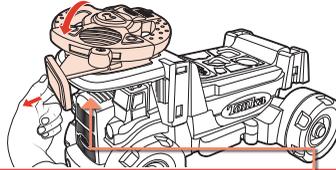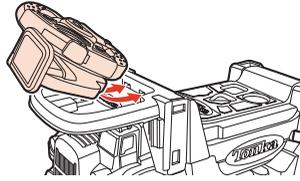


2. Align tabs on base of WHEEL with slots on top of gravel guard.
3. Slide button on underside of gravel guard away from truck body and lower WHEEL into gravel guard housing. Release button and pull up on WHEEL to make sure it is locked in place.

To detach WHEEL from SCOOT 'N SCOOP 3-IN-1 RIDE-ON: Slide button on underside of gravel guard away from truck body until you can lift the wheel up (you will initially only be able to pull on the side of the WHEEL closest to the front of the truck).

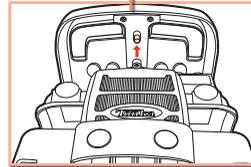


View of button on underside of gravel guard.

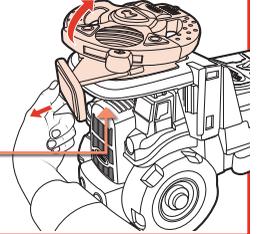

PLAY

Revvin' Beepin' Wheel

WHEEL shakes to imitate road vibrations!

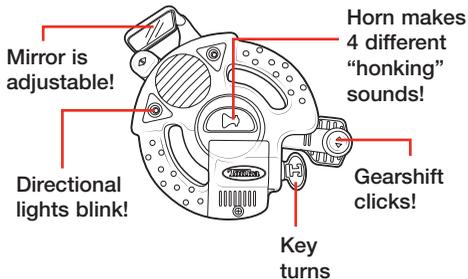


To operate:

- Turn key to activate electronic sounds.
- WHEEL can be used alone or attached to SCOOT 'N SCOOP 3-IN-1 RIDE-ON.


Scout 'n Scoop 3-in-1 Ride-on

Scoping action is powered by the forward motion of the truck; place blocks in front of truck, then push truck forward and over the blocks to scoop them up.

- Truck has 3 modes: push, walk and ride!
- Shape-blocks help sorting skills! Child can sort the shape-blocks into the slots on the truck seat.
- Scooping action picks up shape-blocks!

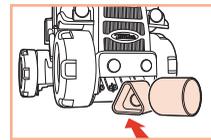


- REVVIN' BEEPIN' WHEEL and RUMBLIN' ROLLIN' CRANE (sold separately) can be attached to truck for more sounds, lights and towing fun!

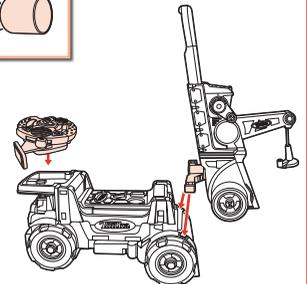

TO REPLACE BATTERIES

Locate battery compartment cover on top of REVVIN' BEEPIN' WHEEL. Use a Phillips/ cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove exhausted batteries and replace with 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screw.

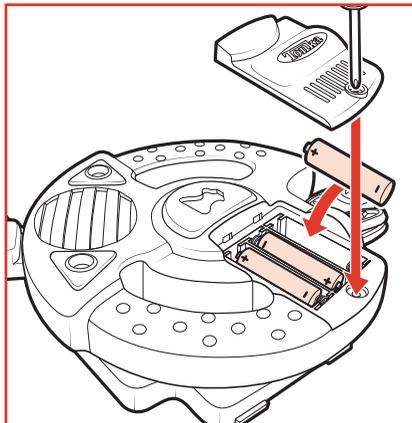

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.



© 2006 Hasbro.
All Rights Reserved.
TM & ® denote U.S.
Trademarks.



Questions? Call: 1-800-PLAYSKL