



OVER 9 months

6104

Air-tivity™

Ball Popper

Thank you for buying this Playskool® product!


Requires 4 "D"/LR20 (1.5V) batteries(not included). Phillips/crosshead screwdriver (not included) required for battery installation.

Adult assembly required.



TO ASSEMBLE


1. Snap track onto base.
2. Snap bowl onto tube (tab into slot).

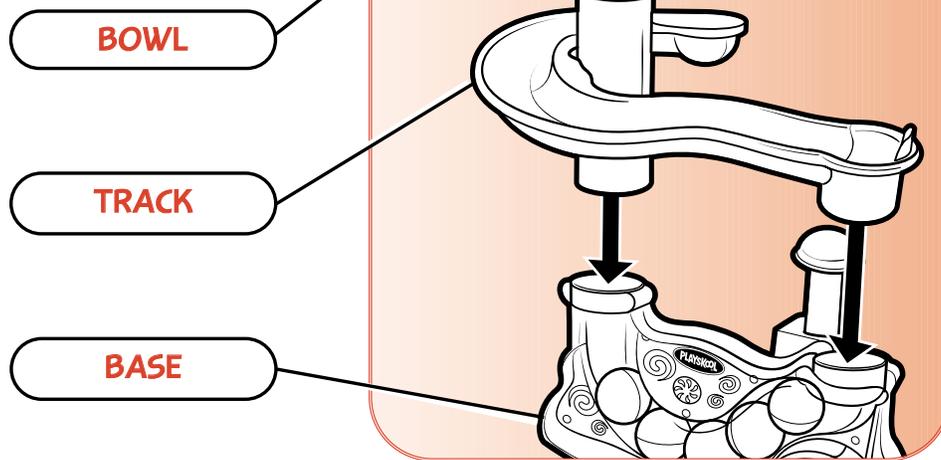

TO PLAY


The Air-tivity™ Ball Popper toy features air-powered poppin', droppin' fun!

1. Slide ON/OFF switch on rear side of toy to ON. Press the plunger to start the music and air power. Drop the balls on the track or down the tube and watch as they pop out of the top, roll down the track, then pop out all over again! Sometimes the balls spill over for even more put-and-take play.
2. Each time you press the plunger the toy activates for approximately 30 seconds, and a different song plays!

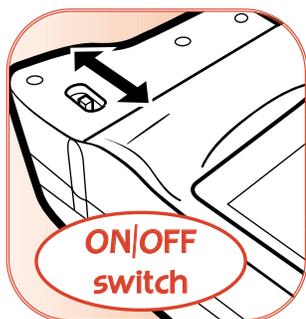


- 8 lively songs!
- Fun sound effects!

Note: When storing toy, turn the ON/OFF switch to OFF to prevent accidental activation.

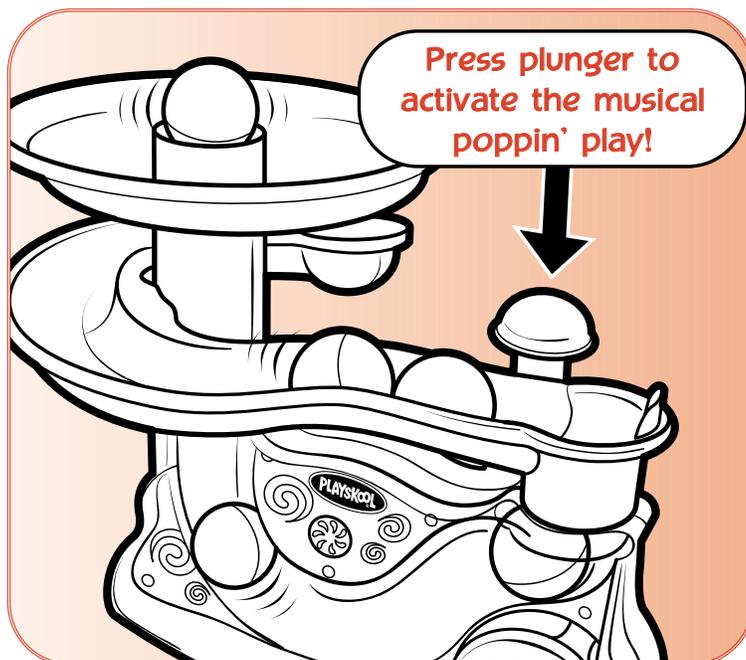

TO INSTALL BATTERIES

Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Slide door to the right and remove. Insert 4 fresh "D"/LR20 (1.5V) alkaline batteries. Fit door onto unit (tabs into notches), then slide door to the left. Tighten screw.

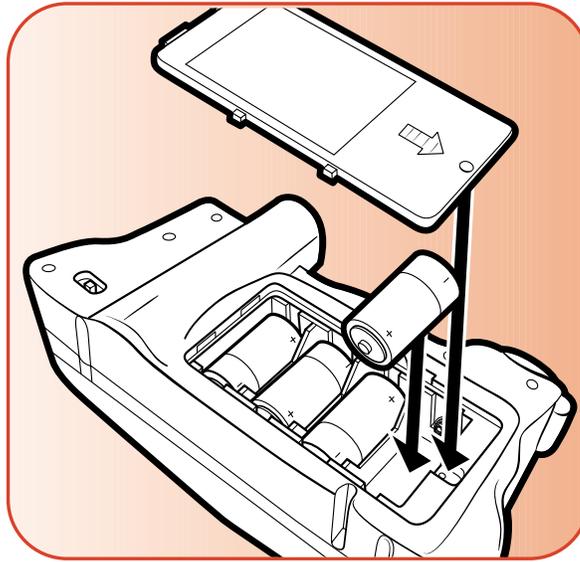

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

