



 
AGES 2+
6201



Big Mike Mower™


Thank you for buying this Playskool product!

2 "AA" batteries included. Phillips screwdriver (not included)
required for battery replacement.

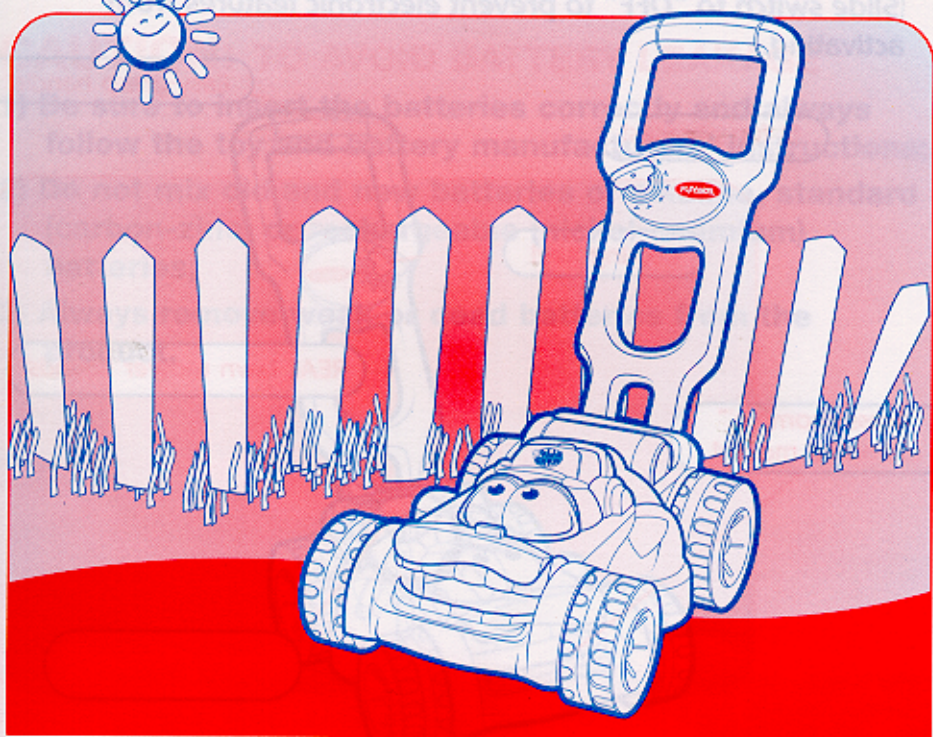

TO ASSEMBLE HANDLE

 Snap handle onto mower as shown.

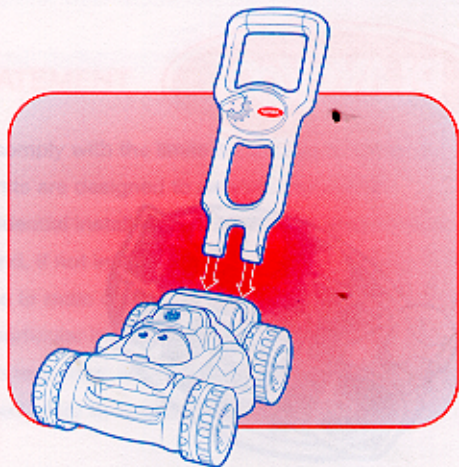


TO PLAY

Big Mike Mower™ is a talking backyard buddy who loves to cut grass!

- Be sure the switch on the bottom of the toy is in the "ON" position to enable the electronic features to work.
- Push Big Mike Mower toy along and he magically comes to life with funny phrases, lawn mower sounds, and delightful animated actions!

 (Slide switch to "OFF" to prevent electronic features from activating.)

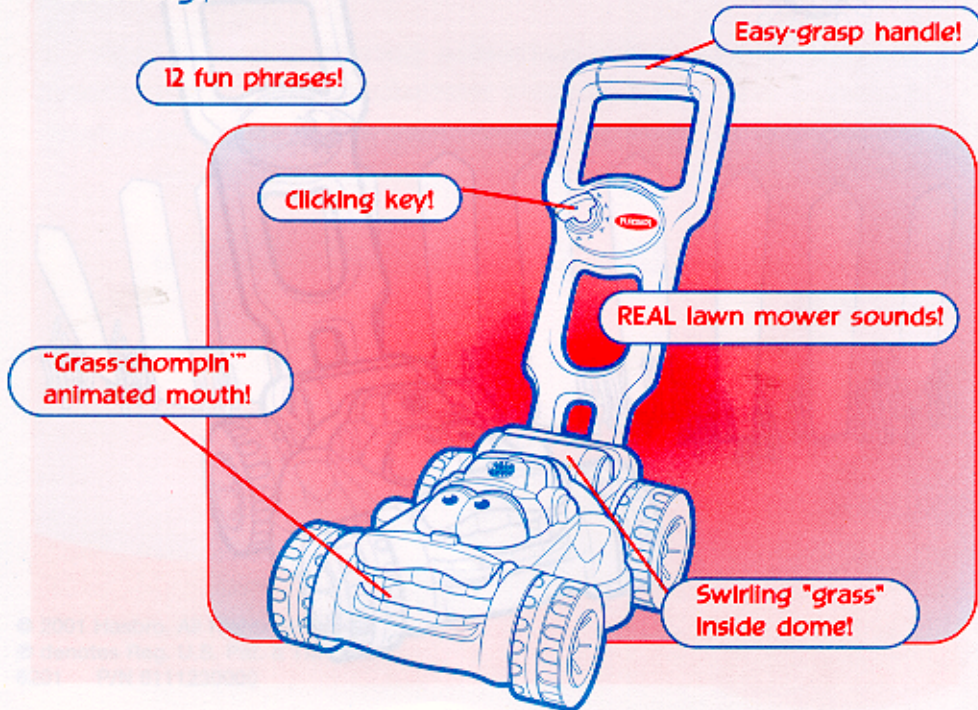


Note: Avoid exposure to water to prevent damaging sound electronics.

This toy simulates the function of a real lawn mower. Please caution your child about the hazards of a real lawn mower.

TO REPLACE BATTERIES

 Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Remove old batteries. Insert 2 fresh "AA" alkaline batteries. Replace door and tighten screw.

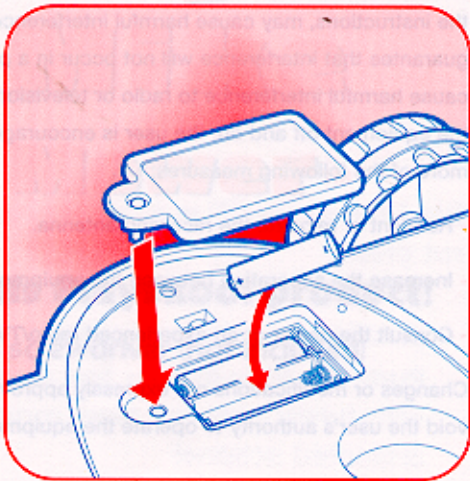

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.