 


BIG BIRD[®] TALKING PHONE

Ages: 2 - 6


SESAME STREET[®]

Instructions

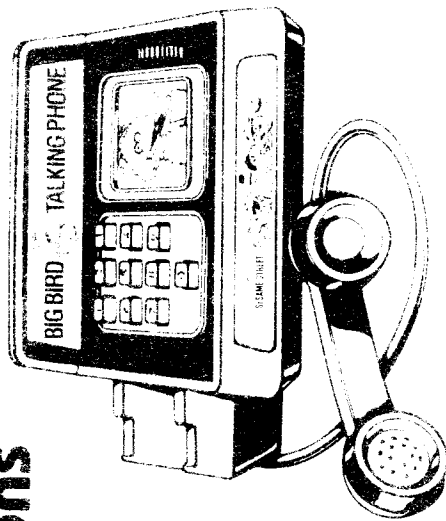

2 Insert a new, D-Cell battery into the battery compartment, placing the positive and negative poles in the positions marked. (If you hear a whirring sound, you have placed the battery into the compartment incorrectly—reverse its position).


Set voice speed control knob at slow.

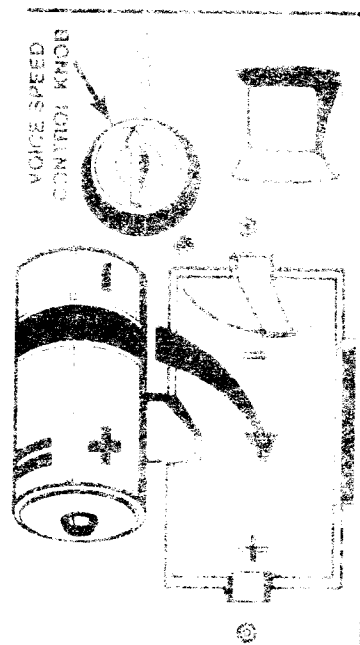

TO INSERT THE BATTERY


1

Turn phone over. Remove the battery compartment cover by pressing the lever toward the cover with a small coin to release it. Lift the cover out.

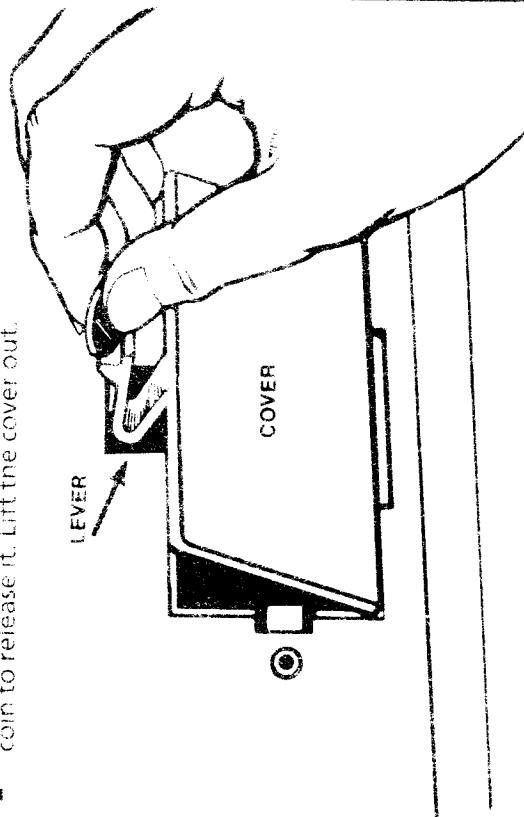

3


Replace the cover, by first fitting the tab into its slot, then press the lever toward the cover, while lowering it into place.

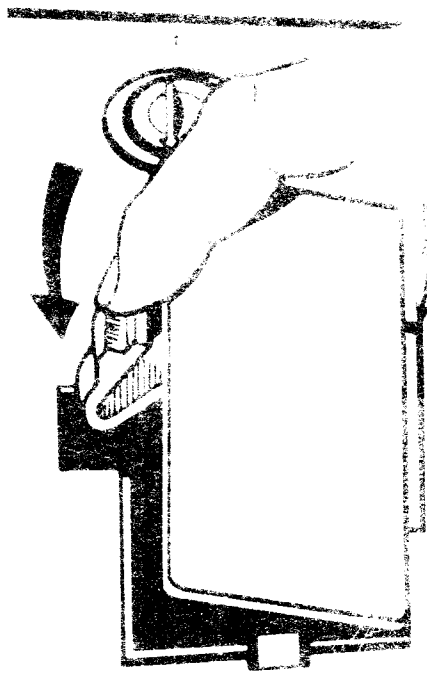

TO OPERATE THE PHONE


TO ATTACH RECEIVER TO PHONE

4 First dip ends of tubing in water. Push one end of the tubing over the pin located on the receiver. Now push the other end of the tubing over the pin located on the left side of the phone. Make sure both ends of the tubing are pushed onto the pins as far as possible.

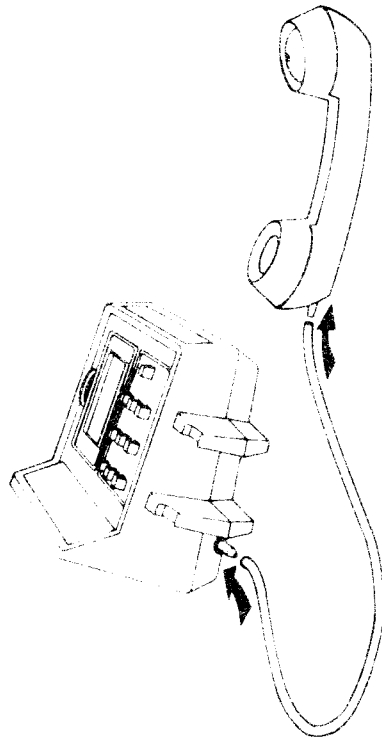


6 Lift the receiver and press the numbers that appear on the screen. To obtain correct voice every time, always hold down the last digit of each telephone number for at least one second before releasing it. Now listen to what your Sesame Street® friend has to say!

Note: If you are not getting any sound at all, turn the voice speed control knob to the "Fast" position. (See Step 8) if you hear only a whirring sound, reverse the position of the battery.

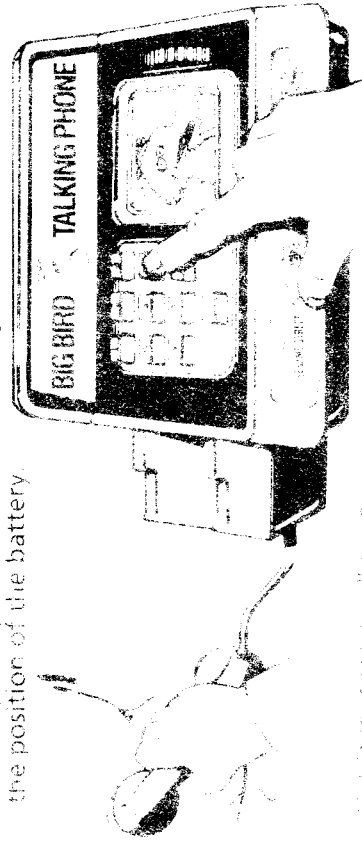

5 First turn the wheel so that the Sesame Street character you'd like to call, appears on the viewing screen.

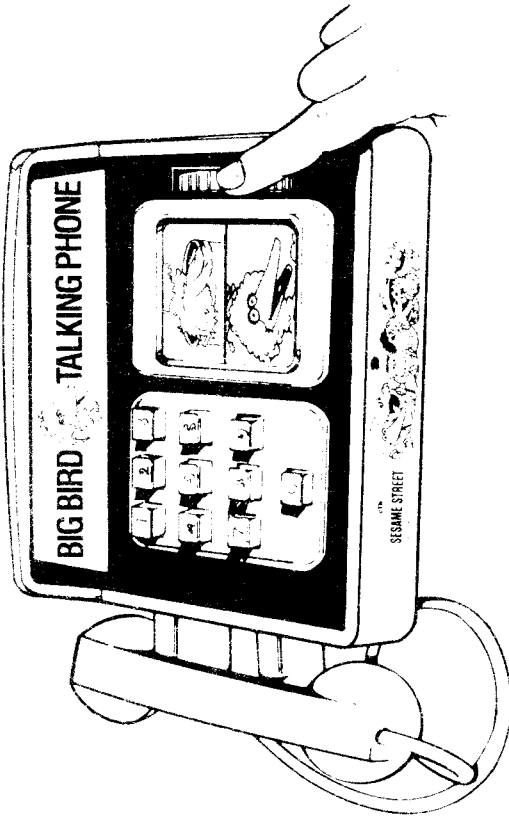

7

These are your Sesame Street® friend's telephone numbers:

Oscar the Grouch* 137
Big Bird* 350
Ernie* 584
Cookie Monster* 152
Grover* 839
Bert* 536

NOTE TO PARENT:

Only by pressing and holding the last number of those listed will a voice be heard.

8

You may find that the message is relayed too fast or too slow. To adjust the speed of the voice track, turn the phone over and turn the voice speed control knob toward the "Slow" or "Fast" position until the voice track reaches a normal talking speed.

As the battery runs down, and the voice track begins to drag, turn the voice speed control knob towards the "Fast" position.



FAST

SLOW