



Bubble Plane

Instructions

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.




Questions? Call:
1-800-PLAYSKL


For future reference, our toll-free consumer service number is also located on this product.

Includes bubble plane, wand, stand and bubble solution, 3.5 FL. OZ. (103 ml).

TO MAKE BUBBLES

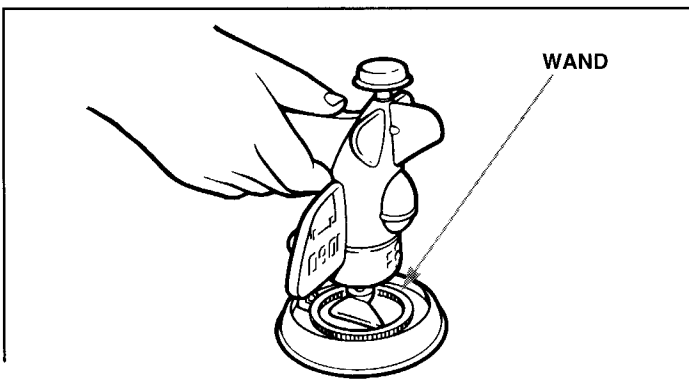


1. FILL the stand with bubble solution. (Any store-bought bubble solution may be used.) DIP the wand fully into the bubble solution and remove.

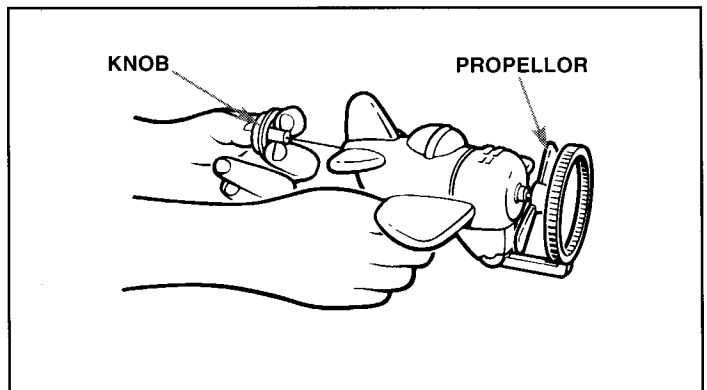

2. PULL red knob attached to string, then let go. The propellor will spin to make big bubbles. To make more bubbles, dip wand into bubble solution.
You may need to dip the wand and pull the string 5 or 6 times to begin making bubbles.

TO CLEAN AND STORE

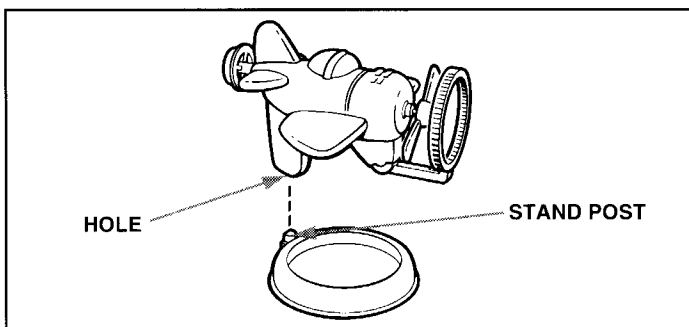

After each use, discard unused solution and thoroughly rinse the stand and wand with water. Clean plane by wiping with a damp cloth. DO NOT submerge plane in water. For proper storage, align hole in bottom of plane handle with stand post and press handle onto post.

Note: The performance of store-bought bubble solution will greatly vary due to weather conditions such as wind, humidity level and temperature.

FOR BETTER BUBBLE BLOWING, REFER TO THE FOLLOWING:

1. Performance of store-bought bubble solution may be improved if the bottle is left uncapped overnight.
2. To improve bubble blowing performance of the plane:
 - A) Hold plane level or tilted downward.
 - B) Vary how far you pull the string; shorter pulls often produce a better bubble.
 - C) After pulling the string and letting go, wave the plane back and forth slightly to remove bubble from wand.
3. The wand should line up directly in front of propellor when making bubbles. Simply reposition wand if it is not properly located.