





TOAD DOUBLE BUBBLE™ INSTRUCTIONS

Contains: Double Bubble vehicle, 2 canopies, 2 gripper claws, 2 side guns, 2 spring-back cords and 2 label sheets.


Remove all pieces from plastic frames. If you have difficulty, use safety scissors.

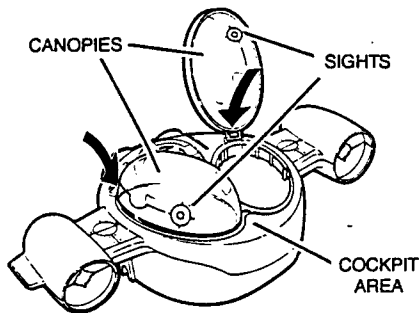


- 1) Snap left and right canopies into cockpit areas as shown. NOTE: Make sure sight on each canopy faces outward as shown.

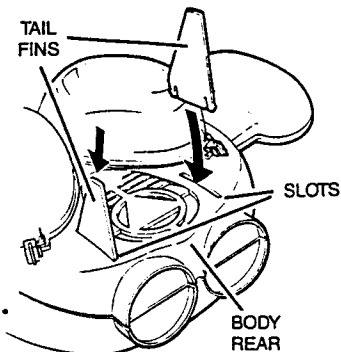


- 2) Snap tail fins into slots in body rear.

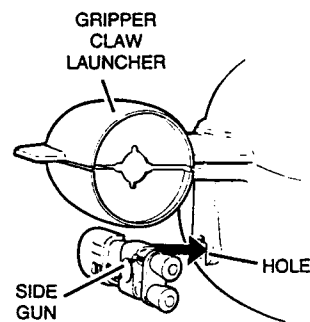


- 3) Snap side gun into hole underneath gripper claw launcher. Repeat for other side gun.

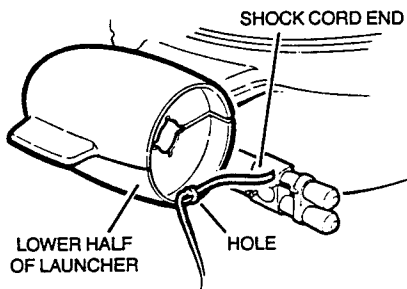


- 4) Fit one end of shock cord through hole in lower half of launcher. Tie a knot to secure. Repeat on other side.

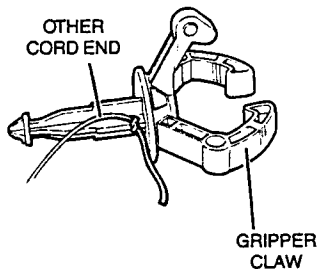


- 5) Fit other end of shock cord through bottom hole in gripper claw, then tie a knot to secure. Repeat for other shock cord.

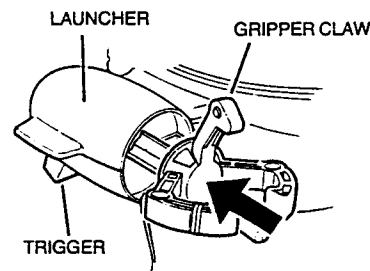

- 6) Fit gripper claw into hole in launcher and lock into firing position. To fire, pull back trigger located underneath launcher.

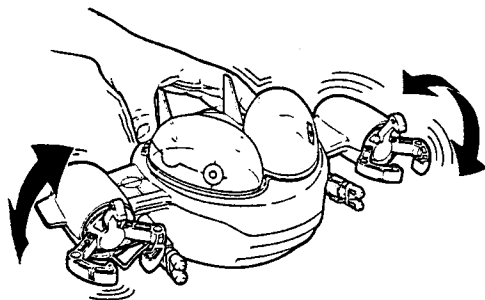

- 7) To hear "croaking" sound, tip the Toad Double Bubble from side to side as shown.

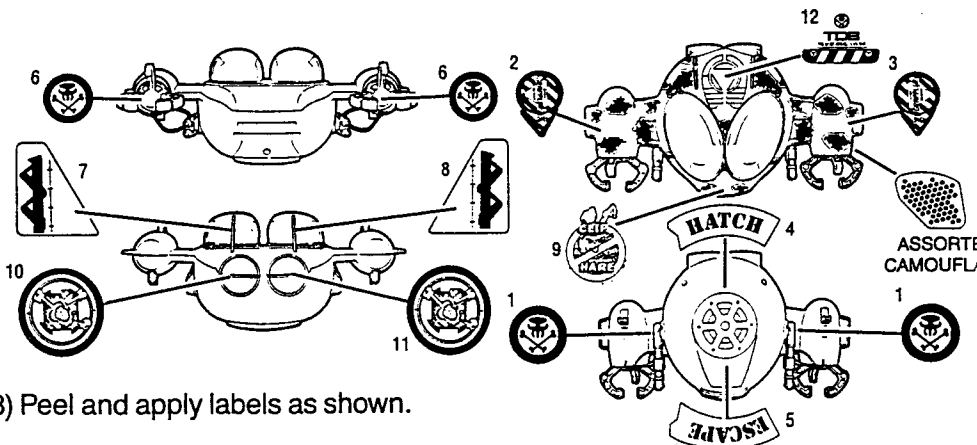

- 8) Peel and apply labels as shown.



Bucky O'Hare and its associated logo, characters, names and likenesses ™/© 1991 Continuity Graphic Associates, Inc. All Rights Reserved.
Licensed by Abrams/Gentile Entertainment, Inc.
Instructions © 1991 Hasbro, Inc. All Rights Reserved.
Manufactured by Hasbro, Inc., Pawtucket, RI 02862 U.S.A.
Distributed in the U.K. by Hasbro (U.K.), a division of Hasbro Bradley U.K. Ltd., Caswell Way, Newport, Gwent, NP9 0YH.
MADE IN U.S.A.
© denotes Reg. U.S. Pat. & TM Office.
7288 P/N 42224300