




Ages 2 & Up


Buzzin' Vibes™ Shaver

Thank you for buying this Playskool product!

Includes installed "C" battery.
Phillips screwdriver needed to replace battery.

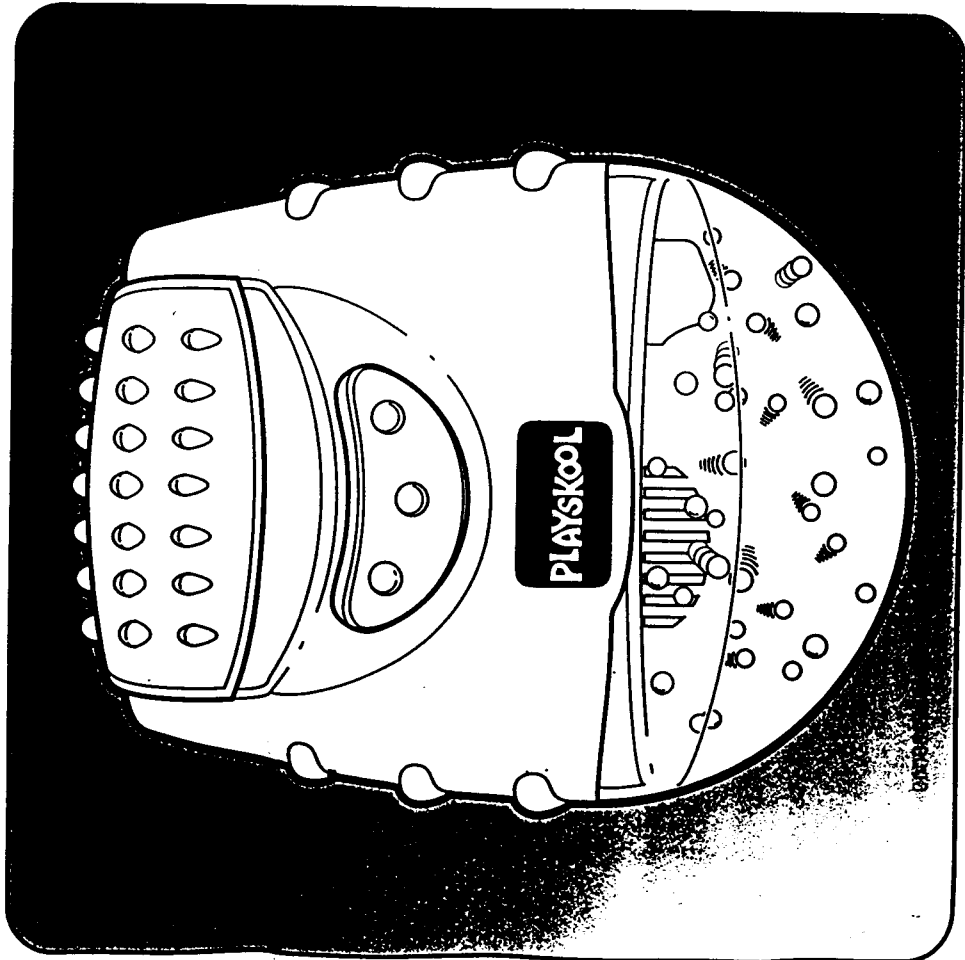

WHEN BATTERY NEEDS REPLACEMENT:

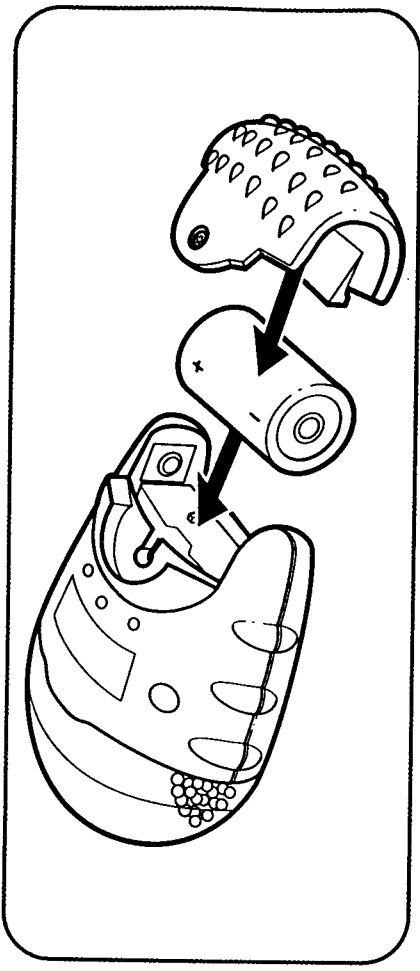

1. The Buzzin' Vibes Shaver comes equipped with an installed "C" battery. When the original battery is exhausted, use a Phillips screwdriver to loosen the screw that secures the battery compartment door, and remove the door as shown.
2. Insert new "C" battery (alkaline recommended) into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the battery correctly and always follow the toy and battery manufacturers' instructions.
2. Always remove a weak or dead battery from the product.