

COLORBLASTER™ FASTBLAST™

Drawing System

 
Be an airbrush pro
on-the-go!

EASY TO USE

Please read all instructions
before you begin.



STEP 1
Unfold the cardboard insert and cut out the outlined shape pictured above to form the brace.

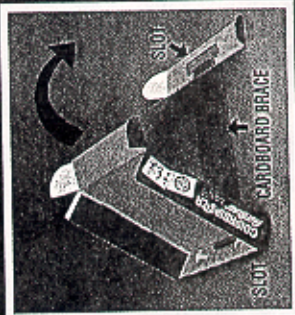

STEP 2
Fold the carry case backwards and insert the cardboard brace into the slots provided to create your easel. Place easel on a paper covered surface.



STEP 3
Separate the stencils and punch out shapes in stencils with a pencil.

 


STEP 4
Remove the cap from the bottle and screw it into the spray handle with the bottle in an upright position as shown. Be careful not to squeeze the bottle while doing this.

NOTE: Do not leave the bottle on the sprayer when not in use. Use ONLY FastBlast™ Washable Colors or damage to the sprayer will result.



STEP 5
Select a stencil. Place the stencil on the desired location of the paper and tape it in position. Spray the stencil by squeezing the handle. Remove the stencil and let it dry before doing another design. When changing colors, remove the bottle from the handle. Squeeze the handle without the bottle until no color comes out. Then put on a new bottle.

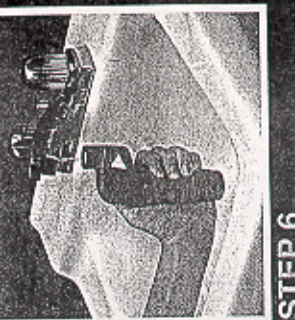

STEP 6
When you are finished spraying, remove the bottle. Run water through the top of the sprayer while squeezing the handle until water comes out clear.

IN THE INTEREST OF BETTER QUALITY AND VALUE, WE ARE CONSTANTLY IMPROVING AND UPDATING OUR PRODUCTS. PRODUCT PACKAGES MAY SOME TIMES DIFFER FROM THE MODEL ENCLOSED.

© Kenner 1993.
A Division of Tonka Corporation,
Cincinnati, Ohio 45202

505-368-00

Kenner®

 
PROOF OF PURCHASE



0 76281 60090 1

COLORBLASTER™ FAST™

WASHING INSTRUCTIONS
DO NOT USE HOT WATER OR CLEANING SOLUTIONS to clean COLORBLASTER™ colors from carpets or fabrics. For best results, blot excess, scrub carpet with stiff brush, mild detergent and COLD water. Line dry. Repeat, if necessary.

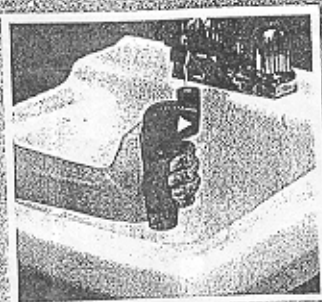


CLEANING

When you are finished spraying, remove the bottle. Run water through the top of the sprayer while squeezing the handle until water comes out clear.



STORING

 
Everything stores inside the handy carry case.

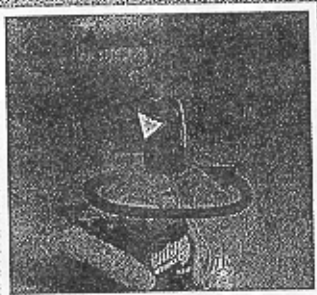

LOADING

Remove the cap from the bottle and screw it onto the spray handle with the bottle in an upright position as shown. Be careful not to squeeze the bottle while doing this.

 NOTE: Do not leave the bottle on the sprayer when not in use. Use **ONLY** Fast Blast™ Washable Colors or damage to the sprayer will result.

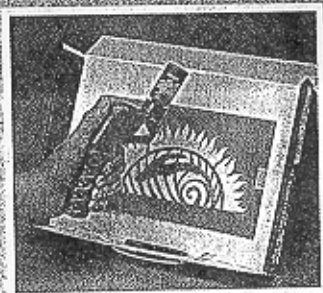

SPRAYING

Select a stencil. Place the stencil on the desired location of the paper and tape it in position. Spray the stencil by squeezing the handle. Remove the stencil and let it dry before doing another design. When changing colors, remove the bottle from the handle. Squeeze the handle without the bottle until no color comes out. Then put on a new bottle.