

Ages 9 and up
Model 71-552

TIGER®
ELECTRONICS, LTD.

*The
Electronic
Organizer
for the Girl
on the Go!*

*Dear
& Diary*



Instructions

⚠ WARNING:
CHOKING HAZARD - SMALL PARTS
NOT FOR CHILDREN UNDER 3 YEARS



 
 
CONTENTS

Open Your Dear Diary	2
Getting Your Dear Diary Ready	3
Icons You Should Know	3
Symbols You Should Know	5
Words You Should Know	5
Battery Installation	8
How Your Dear Diary Works	11
Controls and Indicators	11
Using Your Dear Diary	13
Reset Operations	13
Editing Characters	13
Editing Date	15
Editing Time	16
Scrolling	16
Initial Screen	17
Dear Diary	18
Calculator	21
Phone/Address	22
Horoscope	24
Special Days	26
Memo	27
Secret Password	28
Wishes	30
Favorites	31
Dislikes	33
Homework	34
Shopping List	35
Secrets	36
Scheduler	37
Caution	38
90-Day Limited Warranty	39



OPENING YOUR DEAR DIARY

To open your Dear Diary, press and hold the button on the edge of the white portion of the diary and lift the colored lid. Each lid opens independently of the other. When closing the lid, make sure the latch "clicks" into the base.

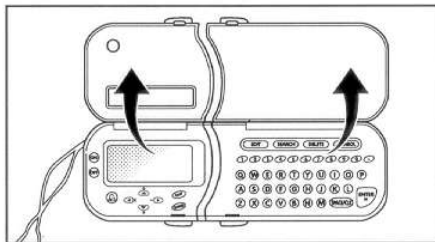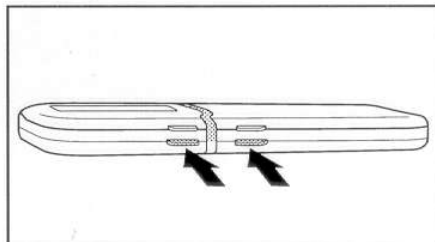

GETTING YOUR DEAR DIARY READY

ICONS YOU SHOULD KNOW



Above are icons that you will see on your diary screen. Learn to recognize them; you will be using them often. Following is a brief explanation of each.



DEAR DIARY

You can store one message with up to 32 characters and four symbols for each calendar day for up to 40 days. Days can be in any order that you desire, and each day can be in any year you choose.



WISHES

You can store up to 5 wishes, each having up to 40 characters.



CALCULATOR

You can make the calculations you desire.



PHONE/ADDRESS

You can store the name (up to 15 letters), phone number (12 digits and 3 decimal points), street address, city and state (up to 40 letters) and birth date for up to 45 friends.



FAVORITES

You can list up to 5 things - records, friends, days, colors, and animals. Each "favorite" can be up to 15 characters.



DISLIKES

You can list up to 5 things you don't like. For instance, you can list records, friends, days, colors, and animals. Each "dislike" can be up to 15 characters.



HOROSCOPE

You can find symbols for luck and fortune and other predictions in your horoscope. Using your birthdate, your horoscope displays as personal message on the screen and up to four dollar signs (fortune), up to four heart symbols (luck), and other meaningful symbols.



HOMEWORK

You can enter homework assignments for up to four days. Each day you will be able to enter up to 50 characters.



SPECIAL DAYS

You can record as many as 10 special days (birthdays, anniversaries, dates, and other days) which have special meaning.



SECRETS

You can store up to 5 secrets, each having up to 40 characters.



MEMO

You can store up to 5 memos, each having up to 40 characters.



SHOPPING LIST

You can list your shopping needs, up to 120 characters.



SECRET PASSWORD

Your secret password locks certain files. These files are: Dear Diary, Phone/ Address, Secrets, Wishes, Favorites, Dislikes and Special Days. The following files are not protected by your password: Horoscope, Homework, Shopping List, Calculator, Memo and Scheduler.



SCHEDULER

Tells you the date and time and stores your appointment information. The scheduler rings an alarm to remind you of appointments. Up to 7 appointments can be stored. The current date will be displayed, as well as an indicator about diary content on a particular date.

SYMBOLS YOU SHOULD KNOW

The following symbols appear on your Dear Diary LCD display are:



SUN



RAIN



SNOW



GIFT



BOOK



DOCTOR
(RED CROSS)



TV



SHOPPING
CART



HOUSE



HEARTS



DOLLAR
SIGN



 
SAD
FACE



HAPPY
FACE



TROUBLESOME
FACE



LUCK (1, 2, 3 OR 4 HEART SYMBOLS)



FORTUNE (1, 2, 3 OR 4 DOLLAR SIGNS)

WORDS YOU SHOULD KNOW

CHARACTER: Any letter, number, punctuation mark or space.
(also see letter and digit)

CURSOR: The blinking line under a space on the screen where any character is or where one can be entered

DELETE: Pressing this key removes the character or symbol above the cursor. Delete also erases information in a file.

DIGIT: 1, 2, 3, 4, 5, 6, 7, 8, 9 or 0

EDIT: Changing information stored in the diary

ENTER: Pressing this key verifies (stores) information in your diary. **ENTER** also performs other functions which will be explained later.

HOROSCOPE: A forecast of fortune based on the stars

ICON: A picture that represents one of the 14 files in your diary

LETTER: Any letter A - Z

MENU: The 14 icons that identify the 14 files/functions in your diary

MODE: This is the way your diary is being operated. Example: Diary is operating in the "calculator" mode. Sometimes the word "function" is used instead of mode

PASSWORD: A 4-character code that locks certain files

PROMPT: A question on the screen that asks you to do something

QUIT: Stops the file you are in and returns to initial screen, also, leaves initial screen and returns to the main menu.

SCREEN: The LCD of your diary, sometimes called the "display"

SCROLL: Moving the cursor to the right or left to read information on the screen, or up and down to read records in a file

SEARCH: Automatically looks for words that you previously stored

SPACE/CLEAR: Adds a space or clears a calculator computation

STORE: Records information in the diary

SYMBOL: One of 16 pictures which selects categories of information in various files. Fortune (dollar sign) or luck (heart) symbols may appear alone or in multiples of up to four



BATTERY INSTALLATION

Inserting/Replacing Batteries:

 
 
This diary is powered by two 3V button-cell batteries, both of which are type CR2032. One is the main battery, and the other is the back-up battery. The main battery provides power for normal operations. The back-up battery protects data stored in memory when changing the main battery.

If the LCD becomes dim, replace the main battery. Your data is protected by the back-up battery during main battery replacement.

Memory contents are lost when both the main battery and the back-up battery are removed at the same time. Be sure to leave one of the batteries in place to protect memory contents. If you remove the main battery for any time, memory retention will depend entirely on the condition of the back-up battery and memory contents are likely to be damaged. If memory seems corrupted, clear it using the reset operation.


Replacing Main Battery

1. With the diary turned off, using a Phillips® screwdriver, remove the screw on the battery compartment door on the back of the unit. Remove the battery compartment door.
2. Remove the old battery using a thin, pointed, non-metallic object to lift it.

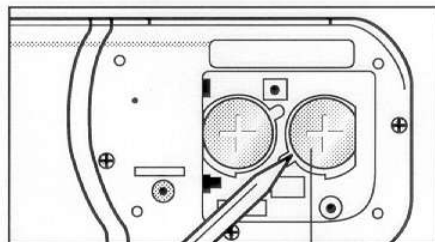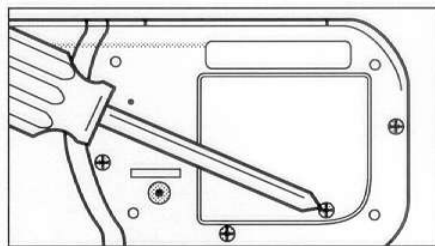

MAIN BATTERY

 3. Wipe the surfaces of the new battery with a soft, dry cloth. Insert the new battery. The "+" should be facing you.

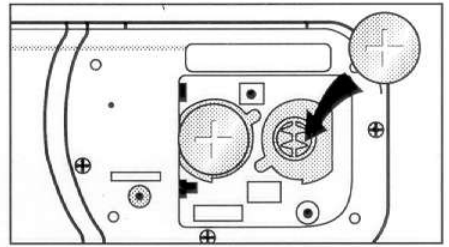


4. Replace the battery compartment door and screw.

WARNING: YOU MUST REPLACE THE MAIN BATTERY BEFORE CLOSING THE BATTERY COMPARTMENT DOOR OR ALL FILES WILL BE LOST.

Replacing Back-up Battery

 1. You replace this battery the same way you replace the main battery.
2. Be sure that the main battery is in place before removing the back-up battery, or all data will be lost.

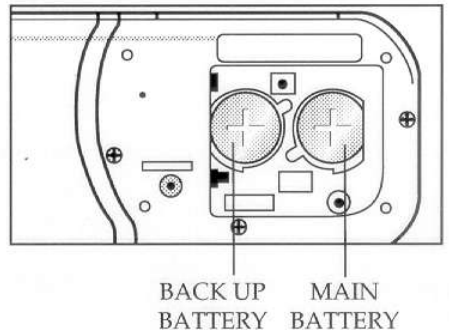

To ensure proper function:

 
 
- Do not mix old and new batteries
- Do not mix alkaline, standard or rechargeable batteries
- Battery installation should be done by an adult
- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy before being charged (if removable)
- Rechargeable batteries are only to be charged under adult supervision
- Only batteries of the same or equivalent type as recommended are to be used
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacturer's instructions
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited





HOW YOUR "DEAR DIARY" WORKS

CONTROLS AND INDICATORS

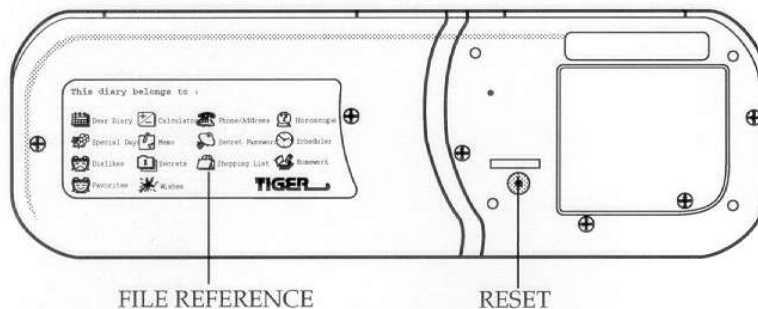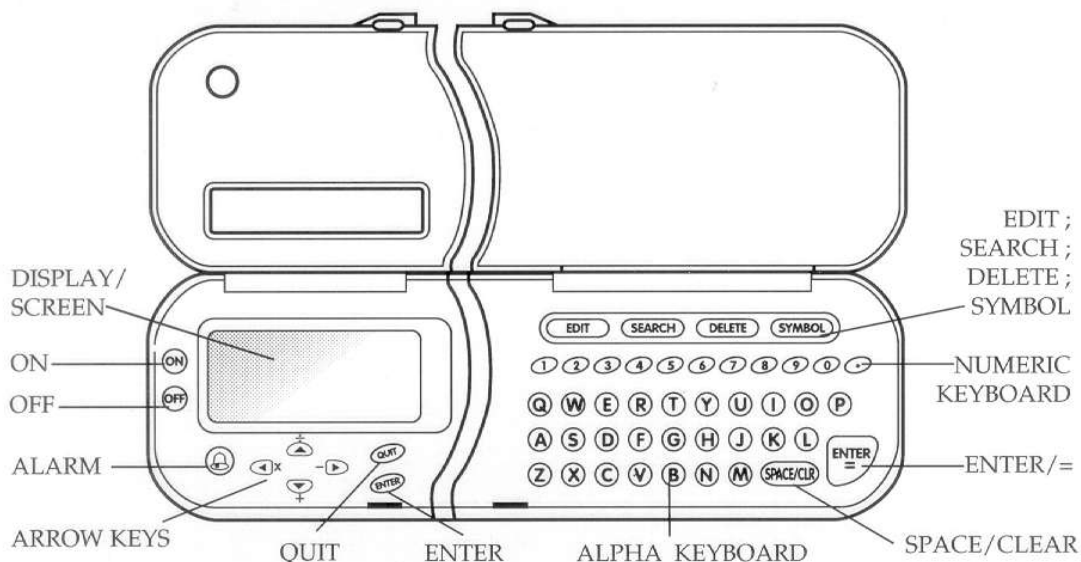

DISPLAY/SCREEN - shows the information stored in your diary

ON - turns on the unit

OFF - turns off the unit

ALARM - used to turn on alarm function

ARROW KEYS - used to move the cursor around the screen and as the function keys in the calculator mode

QUIT - used to end work in a file or return to main menu

ENTER - used to verify a choice and as the "equals" key in the calculator mode

ALPHA KEYBOARD - used to type alphabetic information into your diary

ENTER/= - used to verify (store) information in your diary and as "equals" key in calculator mode

SPACE/CLEAR - used to type a space between letters/numbers and to clear the screen in the calculator mode

NUMERIC KEYBOARD - used to type numeric information into your diary, the decimal point is also used as a period in alphabetic entries

EDIT - used to change information in a file

SEARCH - used to find specific information

DELETE - used to erase the character above the cursor, or to erase information in a file

SYMBOL - used to add graphics to your files, see page five for a complete list

FILE REFERENCE - an at-a-glance reference to the file names and icons in your diary

 
RESET - used to reset your diary

USING YOUR DEAR DIARY

Remove the label adhered to the screen before using your diary.


Reset Operations:

By pressing the reset button, you can delete all the data previously input. The screen will prompt, CLEAR ALL? Y/N. By pressing Y (yes) all data will be deleted. N (no) will return you to the initial screen.

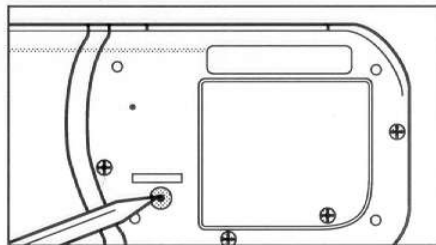

Be sure to clear all data before you use Dear Diary for the first time.

 Your Dear Diary organizer has two parts. Slide them together to input, edit or erase data. Then, pull them apart. The small part goes with you so that you can access your information anywhere. The larger keyboard stays at home or in your locker!

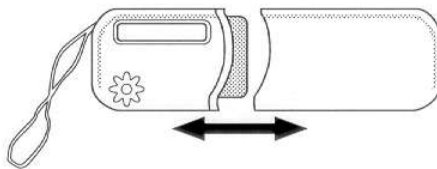

TURN ON and TURN OFF

Simply press the **ON** button to turn your diary on, and press the **OFF** button to turn your diary off.

EDIT PROCEDURE

Editing is changing information in your files. You may make typing errors, or you may decide to change words and numbers.

EDITING CHARACTERS

 
Editing characters occurs on the top row of the LCD screen. It is not necessary to do the edit now, but you will be referred to this procedure when you are working in your files.

Procedure

1. When you are in a file, press **EDIT** to select the edit mode.
2. The blinking cursor indicates where you can add a character. You can delete characters in the edit mode and add new characters in their places.
3. When you type in a character, it is inserted above the cursor. Then, the cursor automatically moves one place to the right. To replace a character above the cursor, press **DELETE**. Then, type in the new character.

NOTE: As you edit characters, the words automatically move to the left to make room for more characters. The total number of characters you can add depends on the file you are using.

4. You move the blinking cursor to the left or right by using the ► (right) or ◀ (left) arrow key.

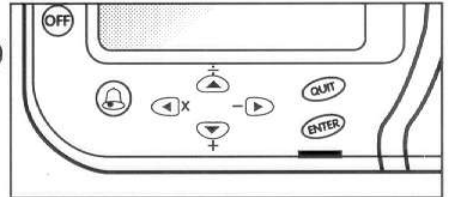

NOTE: When the message is too long to fit on the screen, small arrowheads appear at either end or both ends to show you that more characters are off the screen. ► arrowhead tells you more characters are to the right side of the screen. ◀ arrowhead tells you more characters are to the left side of the screen. Use the right and left arrow keys to scroll back and forth to reach any part of the message for viewing and editing.



 
5. When you finish editing, press **ENTER** to store editing changes.
6. If you want to stop editing at any time, press **QUIT**.

EDITING DATE

The prompt MMDDYY asks you to enter a 6-digit date on the message line near the right side of the screen.

Procedure:

1. When a date is prompted, the cursor appears under the first M.

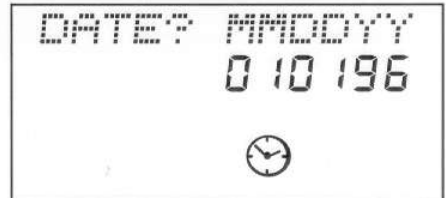

2. Type in six digits for month MM (01 - 12), date DD (01 - 31) and year YY (93, 94, 95, etc.). The blinking cursor moves one character to the right as each digit is entered.



Example: For June 25, 1996, key in 062596.

 
3. If you want to change a digit, use the ► (right) and ◀ (left) direction keys to move the cursor to the digit you want to change. Then, type in the new digit.
4. Press **ENTER** to store the date. If the date is impossible (June 43, 1990, for instance), the word **INVALID** appears on the screen. The screen goes back to MMDDYY so you can input a valid date.
5. Press **QUIT** at any time to stop the procedure.

EDITING TIME

Certain files display the time for your convenience.


Procedure:

1. To edit the time, the prompt HHMM (hour/minutes) will appear on the top line of the screen. The second line will contain **A** or **P** (for **AM** or **PM**) and the time that is currently set in the organizer.

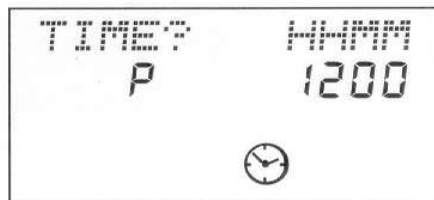

2. Key in the hour and minutes and **A** or **P**. The cursor indicates where the next digit will appear on the screen.

 Example: 10:30 A means 10:30 AM.
(Colon blinks to show clock is running.)

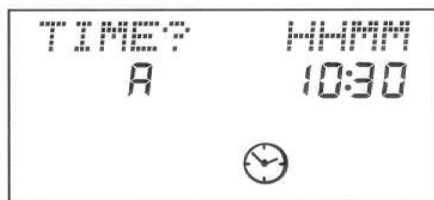

3. Press **ENTER** to store the time.
4. If an impossible time is entered, the word **INVALID** appears on the screen. Press any key to start over.
Press **ENTER** to store the time correctly.
5. To cancel the procedure, press **QUIT** at any time.

SCROLLING

The message line on the LCD screen displays 12 characters. If you key in more than 12 characters, an arrowhead appears on the left side of the screen. This means that letters are off the screen and can be viewed by using the ◀ (left) direction key. If there are letters off the right side of the screen, an arrowhead appears on the right side of the screen. The letters can be viewed by using the ▶ (right) direction key. When you are in a message, use the right and left direction keys to scroll back and forth to read the entire message.

 
INITIAL SCREEN

Procedure:

1. Press **ON** to turn diary on.
2. The initial screen displays:
 - a. Current date
 - b. Day of the week.
 - c. Current time, AM or PM.



3. If day, date and time are correct, go to step 6. To set the day, date and time, go to step 4.
4. If the time has not been set, the display shows 01/01/94 SAT 12:00 A and the clock symbol. The clock starts automatically.
5. If the initial screen is incorrect, press **EDIT** and follow the procedures for editing date and time.
6. When initial screen is correct, press **ENTER**. The Menu screen will appear.

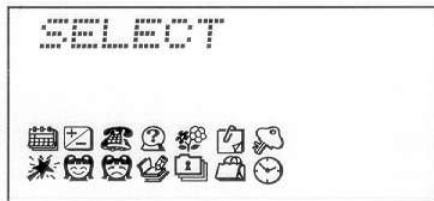

7. One of the 14 icons is blinking. You can go directly to that mode by pressing **ENTER**, or you can select a different icon by using the **ARROW KEYS**. The blinking icon shows the file you select.

DEAR DIARY



The DEAR DIARY file is where you make your diary entries. You can store new diary listings, edit existing information, or search and view entries you have made. Dear Diary messages may be locked, and can only be opened with your secret password.

 
Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **DEAR DIARY** icon and press **ENTER**.
3. Your Dear Diary stores up to 32 characters and four symbols for each of 40 days. Dates do not need to be chronological, nor even in the same year.
4. Practice the following things to learn to use your diary
 - a. Entering diary from Menu
 - b. Selecting yesterday, today and tomorrow screens
 - c. Recognizing all images on the screen
 - d. Storing a date and message
 - e. Editing, deleting, and adding symbols to a message.
 - f. Returning to Menu at any time.
5. Here is a typical screen
 - a. The day (FRI), date (010397), and dear diary icon show on the screen. If a message is stored, *** also appears.
 - b. Press **▲** (up) key. The previous day's screen appears. *** indicates a message is stored.
 - c. Press **▼** (down) key twice; (010497) screen appears.
 - d. Practice selecting days by using **▲**(up) and **▼** (down) keys.



6. Select today's screen. *** does not appear; no message is stored.
- a. Press **ENTER** twice to start inputting a message.


IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28. Key in your secret password. Press **ENTER**. The following screen appears. Repeat step 5.

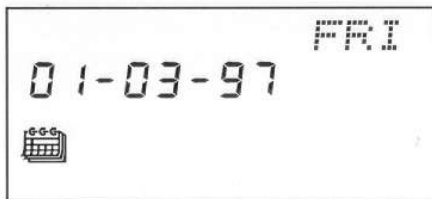

- b. Press character (letter, number) keys to enter a message.
- c. Press **ENTER** to store message.

NOTE: ► and ◀ arrowheads appear at either end of a message to indicate part of the message is off the screen. Use ► (right) and ◀ (left) keys to scroll back and forth through message.

 
- d. Press **SYMBOL**; symbols appear on screen.

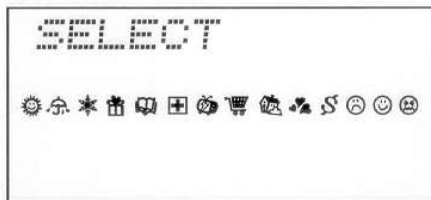

- e. Use direction keys to select a symbol. Press **ENTER** to add the symbol to your message. Press **SYMBOL** again to re-enter your message. Up to four symbols can be added to each message.
- f. To store another message, press ▼ and enter your message.
- g. To edit a message, see page 14.
- h. To delete a message, press **DELETE**.
- i. To exit the message, press **QUIT**. The previous day's screen appears.
- j. Press **QUIT** again to return to Menu.

7. Making diary entries for future days.

 - a. Select today's screen.
- b. Press ▼ to select tomorrow's screen.
- c. You may store a message now; see step 6.
- d. For a future date, press **ENTER**.
- e. Diary prompts you to enter the future date for the message.
MMDDYY means month (01 to 12), day (01 to 31), and year (98, 99, 00, etc.)

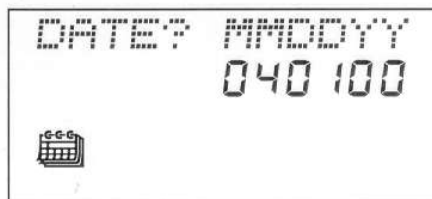


- f. Move cursor to the first M, and use number keys to put in the month MM, the day DD, and the year YY. As you press each key, the cursor automatically moves to the right one space. When the date is complete, press **ENTER**. The word MESSAGE? appears on screen.
- g. You may store a message and symbols now; see Step 6.
- h. Press **ENTER** to save message and symbols.
- i. To input a message for other future days, repeat Step 6.
- j. Press **QUIT** once or twice to return to Menu.



8. SEARCH for a message.

 - a. Select today's screen.
- b. Press **ENTER** to select a screen for a new message. DATE? prompt appears.
- c. Press ▲ and ▼ **ARROW KEYS** to view stored messages, or key in the date you want.
- d. Press **SEARCH** to find that days message. If there is no message for that day, the screen shows NOT FOUND.
- e. Use **EDIT** or **DELETE** if changes are desired to a message.
- f. Press **QUIT** once or twice at any time to return to Menu.

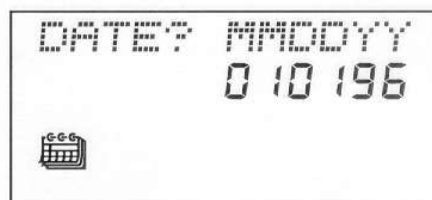

NOTE: Press **QUIT** once or twice at any time to return to Menu.

CALCULATOR



Your diary includes a calculator so you can add, subtract, multiply or divide quickly and easily. This function can only be used when both parts of diary are joined.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** and **ENTER** if you are using another file) to access the Menu.
2. Use **ARROW KEYS** to select the **CALCULATOR** icon.
3. Press **ENTER**.
4. Do addition, subtraction, multiplication, and division as follows:



NOTE: Use the decimal point key to enter a decimal point in any computation. Press **SPACE/CLEAR** to clear the screen at any time.

Addition: Press 2, press +, press 2, press = . The sum is 4.

$$\textcircled{2} \quad + \quad \textcircled{2} \quad = \quad 4$$

Subtraction: Press 8, press - (minus), press 4, press = . The difference is 4.

$$\textcircled{8} \quad - \quad \textcircled{4} \quad = \quad 4$$

Multiplication: Press 4, press x (times), press 4, press = . The product is 16.

$$\textcircled{4} \quad \times \quad \textcircled{4} \quad = \quad 16$$

Division: Press 2 and 5, press ÷ (divide), press 5, press = . The dividend is 5.

$$\textcircled{2} \quad \textcircled{5} \quad \div \quad \textcircled{5} \quad = \quad 5$$

NOTE: Press **QUIT** at any time to return to Menu.

 
PHONE/ADDRESS



The PHONE/ ADDRESS is where you put the names, phone numbers, addresses and birth dates of up to 45 of your favorite people. This file may be locked, and can only be opened with your secret password.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use **ARROW KEYS** to select **PHONE/ ADDRESS** icon.
3. Press **ENTER**. The screen will prompt **B/G?**.

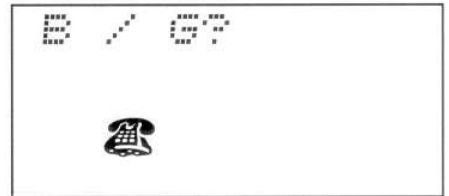

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

4. Press **B** or **G** to indicate whether you are entering or searching a boy's or girl's phone number and address.

NOTE: To view names/addresses/phone numbers, use **▲** and **▼** **ARROW KEYS** to read the file, or key in the name and press **SEARCH**.

5. **NAME?** appears on screen. Type the name of your friend (up to 15 letters). Press **ENTER**.



 
6. TEL. NO. ? prompt appears.

7. Type your friend's phone number (12 digits maximum). Press **ENTER**.

Example: Press 638.138.1986 to store area code (638) phone number 138-1986 .



8. ADDRESS? prompt appears. Type your friend's address (up to 40 characters). Press **ENTER**.

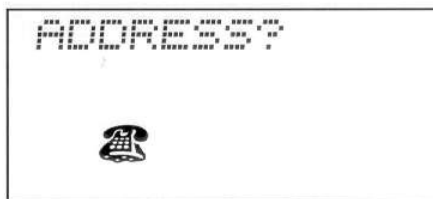

9. BIRTH? MMDD prompt appears. Type your friend's birth date MMDD (2 digits for month and 2 digits for day).

Example: Press 0806 for August 6.



10. Press **ENTER**. All data is saved in memory. NAME? prompt appears on screen again, and you can store another friend's information. You can store up to 50 friends.

11. Use ▲ and ▼ ARROW KEYS to review names and addresses.

12. Press **EDIT** to change the file; see page 14.

13. To erase a name/address/phone number, select the entry and press **DELETE**.

14. Press **QUIT** to return to the B/G? screen. Press **QUIT** twice to return to Menu.

NOTE: Press **QUIT** once or twice at any time to return to Menu.

 
HOROSCOPE




The HOROSCOPE file predicts luck and fortune for you or your friends for any date.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use **ARROW KEYS** to select the horoscope icon. Press **ENTER**.
3. The screen will prompt BIRTH? MMDDYY.
4. Type your birth date. Example: 120878 is for December 8, 1978. Instead of your birth date, you can type a friend's birth date. Press **ENTER**.
5. The next screen prompts you to key in a past, present or future date for which you want a horoscope. Press **ENTER**.
6. The screen will display a horoscope consisting of words and symbols.

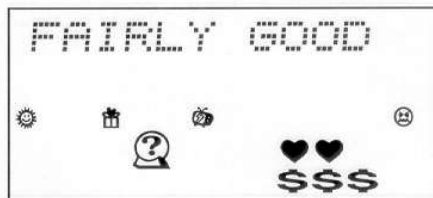

 7. Following are the different messages and meanings of symbols.

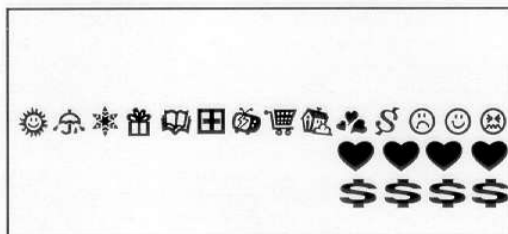

a. Fairly good (message)	Overall outlook for the day
b. Sun symbol	Sunny day forecast
c. Rain symbol	Rainy day forecast
d. Snowflake	Snowy day forecast
e. Gift symbol	You may receive a gift
f. Book symbol	A good day to read a book
g. Red Cross (Doctor) symbol	You may wish to consult a doctor
h. TV symbol	A good day to watch TV
i. House symbol	A good day to stay home
j. Hearts symbol	Possibility of happiness or romance
k. Dollar Sign symbol	Possibility of good fortune
l. Sad face symbol	Possibility of a little sadness for the day
m. Happy face symbol	Possibility of extra happiness for the day
n. Troublesome face symbol	Guard against trouble for the day
o. Luck symbol	Luck of the day - 1, 2, 3, or 4 hearts Four hearts predict the greatest luck
p. Fortune symbol	Wealth of the day - 1, 2, 3, or 4 dollar signs Four dollar signs predict the greatest wealth

8. For additional horoscopes, press **QUIT** once to return to the DATE? prompt, then start again with step 5.

9. Press **QUIT** twice to return to BIRTH? prompt, then start again with step 4.

NOTE: Press **QUIT** 3 times to return to Menu.

SPECIAL DAYS



 
Special days file lets you store a list of 10 special days. You store each date followed by a short description (up to 15 characters). Put special days in any order you want. Your special days are automatically arranged by year, then by date. Special days file may be locked, and can only be opened with your secret password.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the SPECIAL DAYS (flower) icon. Press **ENTER**.

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

3. The screen prompts you to enter the month, day and year of your special day. Type the date you desire. Press **ENTER**.
4. Type a brief description after the date (up to 15 letters).
5. Type in additional special days, dates and messages. Press **ENTER**.
6. Press the **▲** or **▼** **ARROW KEYS** to view special days you have stored.
7. To edit a date/description, press **EDIT** and make the changes.
8. To erase the date/description, press **DELETE**. You may enter a new date and description to replace the deleted one.
9. To find a specific date, on the DATE? prompt screen, type the date you want and press **SEARCH**.

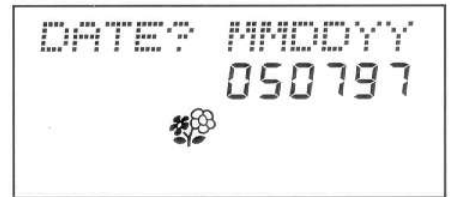

The date and message you want appears on the screen. Press the **▼** **ARROW KEYS** to check for the same date with other messages.

Press **EDIT** to edit the searched record; see page 14.

Press **DELETE** to erase the selected record.

Press **QUIT** to return to DATE? screen. Press **QUIT** twice to return to Menu.






NOTE: Press **QUIT** once or twice at any time to return to Menu.

 
MEMO



Your memo file stores up to 5 memos, each having up to 40 characters.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **MEMO** icon. Press **ENTER**.
3. The screen prompts you with the word **MEMO**.
4. Type your memo (up to 40 characters). The screen displays only 12 characters. The arrows at the right  or left  of the memo show you that the scroll feature can be used to view the complete memo.
5. Viewing and editing: When the **MEMO** prompt appears on the screen, use the  and  **ARROW KEYS** to view all stored memos.
6. Searching: When the **MEMO** word appears on the screen:
 - a. Type in the message you want to find.
 - b. Press **SEARCH**. The first memo matching your words appears on the screen.
 - c. Press the  **ARROW** key to see the next memo.
7. Press **EDIT** to change the memo; see page 14.
8. Press **DELETE** to erase the memo.
9. Press **QUIT** to return to the **MEMO** screen. Press **QUIT** twice to return to Menu.

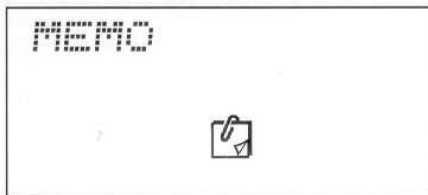

NOTE: Press **QUIT** once or twice at any time to return to Menu.

SECRET PASSWORD



If you would like to protect secrets in some of your files so that no one can read them except you, use a 4-character (letter or number) secret password. When activated, only by using the password can the dear diary, phone/address, secrets, wishes, favorites, special days, and dislikes files be opened. All other files cannot be locked with a password.

 
 
 
Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **PASSWORD** (key) icon. The screen prompts **PASSWORD?**
3. Type a four-character password. Press **ENTER**.

NOTE: The unit will display * when you type a character. This is to help keep your password secret.

4. The unit will prompt to re-enter your password to confirm that it is what you want. Type your password again. Press **ENTER**.
5. The diary then prompts you with three options: **ON/OFF/EDIT**
Read this step carefully. Then go to step 6 to activate the password.

ON -- Pressing **ENTER** activates the password.

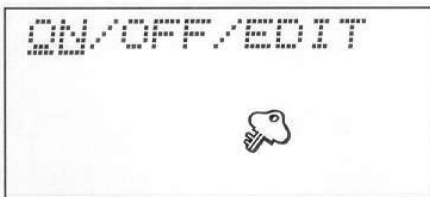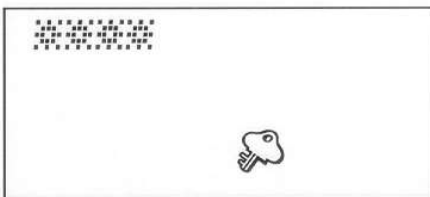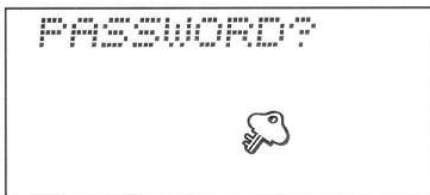

OFF -- If you do not want to use the password, use **▶** ARROW KEYS to select OFF (cursor will be under the word OFF). Pressing **ENTER** turns off the password.

EDIT -- If you want to change the password, press **▶** ARROW KEYS to select **EDIT** (cursor will be under the word EDIT). Pressing **ENTER** allows you to change the password. Pressing **ENTER** twice deletes the password.

6. Use the **▶** and **◀** ARROW KEYS to select an option. Press **ENTER**.

NOTE: When the password is on, you must use the password to access the following files: Dear Dairy, Phone/ Address, Secrets, Wishes, Favorites, Dislikes and Special Days.

7. Suggestion — you may “hide” your password in an “unlockable” file, such as Homework or Memo.

IMPORTANT NOTE: You must remember your password. Write it down somewhere if necessary. If you forget your password and have not written it down, you will be locked out of very important files. The only way to re-enter these files will be to press the reset button located on the bottom of the diary. This procedure will delete all files from your diary.

8. Press **QUIT** to return to the PASSWORD? screen. Press **QUIT** twice to return to Menu.

NOTE: Press **QUIT** once or twice at any time to return to Menu.

WISHES

 


The WISHES file lets you store up to 5 wishes, each having up to 40 characters. Your wishes file may be locked, and can only be opened with your secret password.

Procedure

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if your are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **WISHES** icon. Press **ENTER**.
3. The screen will display **WISHES**.

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

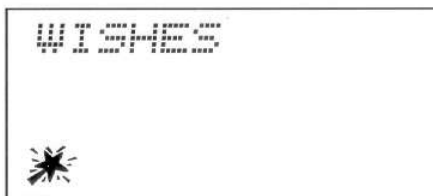

4. Type a wish. Press **ENTER**.
5. Type additional wishes. Press **ENTER** to store each wish.
6. To view a wish that has previously been entered, push either the **▲** or **▼** **ARROW KEYS**.
7. To edit, select the wish. Press **EDIT**; see page 14.
8. Press **DELETE** to erase a selected wish.
9. To find a specific wish, type in the first word of a wish and press **SEARCH**.
10. Press **QUIT** to return to the **WISHES** screen. Press **QUIT** twice to return to Menu.

NOTE: Press **QUIT** once or twice at any time to return to Menu.

FAVORITES

 


Your favorites file stores up to 5 of your favorite things. Each favorite thing can be up to 15 characters long. This file may be locked, and can only be opened with your secret password.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **FAVORITES** icon. Press **ENTER**.
3. The screen will display **RECORD?**

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

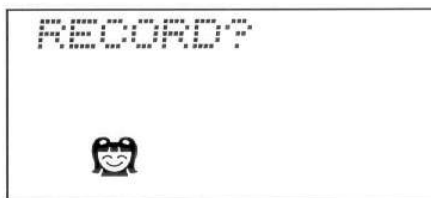

4. Choose a favorite thing file by using **▲** and **▼** **ARROW KEYS**:
RECORD
FRIEND
DAY
COLOR
ANIMAL
5. Press **ENTER** to select the file you want.
6. Type your favorite thing. Press **ENTER**.
7. View and Edit: When the cursor is blinking on the screen, press the down direction key to see the first favorite thing. Press **▲** and **▼** **ARROW KEYS** to see all of your favorite things.
8. To find a specific favorite, type the words you want to find when the cursor is blinking. Press **SEARCH**.

Press **EDIT** to change a favorite thing; see page 14.

9. Press **DELETE** to erase a favorite thing from file.
10. Press **QUIT** to return to the RECORD? prompt. Press **QUIT** twice to return to Menu.

Press **QUIT** once or twice at any time to return to Menu.

 
DISLIKES



You can store up to 5 things you dislike. Each thing can be up to 15 characters. This file may be locked, and can only be opened with your secret password.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if you are using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **DISLIKES** icon. Press **ENTER**.
3. The screen will prompt **RECORD?**

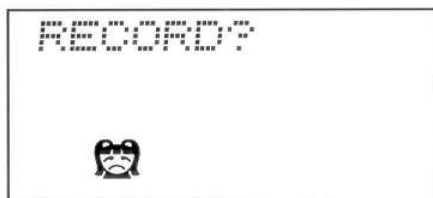

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

4. This file uses the same prompts as the **FAVORITES** file.
5. Type your dislike. Press **ENTER**.
6. View and Edit: When cursor blinks on the screen, press the ▼ **ARROW KEY** to see your dislikes. Press the ▲ and ▼ **ARROW KEY** to see the complete list of dislikes.
7. To find a specific dislike, type the words you want to find when the cursor is blinking. Press **SEARCH**.
8. Press **EDIT** to change words in file; see page 14.
9. Press **DELETE** to erase a selected dislike.
10. Press **QUIT** to return to the **RECORDS?** prompt. Press **QUIT** twice to return to Menu.

NOTE: Press **QUIT** once or twice at any time to return to Menu.

HOMEWORK



You can store assignments for up to four different days.
Each day's assignments can have up to 50 characters.

Procedure:

1. Press the **ON** and **ENTER** (or press **QUIT** once or twice if you are using a file) to access the Menu.
2. Use the **ARROW KEYS** to select the **HOMEWORK** icon. Press **ENTER**.
3. The screen will prompt **HOMEWORK**.

HOMEWORK



4. Type your assignments — up to 50 characters per file. You are allowed four different entries (files).
Press **ENTER**.
5. To view the file, press **▲** and **▼** **ARROW KEYS**.
6. To add assignments, access the file and key in new assignments.
Press **ENTER**.
7. To change assignments in file, press **EDIT**; see page 14.
8. Press **DELETE** to erase homework file.
9. Type the first word of the file and press **SEARCH** to find a specific file.
10. Press **QUIT** to return to the **HOMEWORK?** prompt. Press **QUIT** twice to return to Menu.

NOTE: Press **QUIT** once or twice at any time to return to Menu.

 
SECRETS



This file stores up to 5 of your secrets; each secret can have up to 40 characters. This file may be locked and can only be opened with your secret password.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **SECRETS** icon. Press **ENTER**.
3. The screen will prompt **SECRETS**.

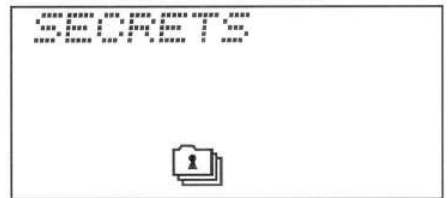

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

4. Type your secrets. Press **ENTER**.
5. Press **EDIT** to change words in file; see page 14.
6. Press **DELETE** to erase secrets file.
7. To view a secret that you previously stored, push the **▲** or **▼** **ARROW KEYS**, or type the first word of the secret and press **SEARCH**.

NOTE: When you open your secrets file, your secrets appear in alphabetical order.

8. Press **QUIT** to return to the **SECRETS** prompt. Press **QUIT** twice to return to Menu.

Press **QUIT** once or twice at any time to return to Menu.

 
SECRETS



This file stores up to 5 of your secrets; each secret can have up to 40 characters. This file may be locked and can only be opened with your secret password.

Procedure:

1. Press **ON** and **ENTER** (or press **QUIT** once or twice if using another file) to access the Menu.
2. Use the **ARROW KEYS** to select the **SECRETS** icon. Press **ENTER**.
3. The screen will prompt **SECRETS**.

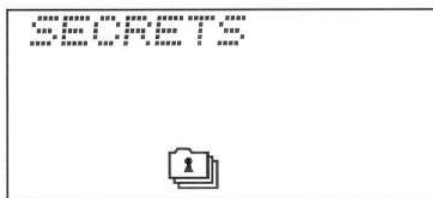

IMPORTANT NOTE: If the password feature is on, you will be prompted to key in the password. See page 28.

4. Type your secrets. Press **ENTER**.
5. Press **EDIT** to change words in file; see page 14.
6. Press **DELETE** to erase secrets file.
7. To view a secret that you previously stored, push the **▲** or **▼** **ARROW KEYS**, or type the first word of the secret and press **SEARCH**.

NOTE: When you open your secrets file, your secrets appear in alphabetical order.

8. Press **QUIT** to return to the **SECRETS** prompt. Press **QUIT** twice to return to Menu.

Press **QUIT** once or twice at any time to return to Menu.

SCHEDULER



You can store up to 7 appointments. Each appointment has a date and time and up to 15 letters for notes. Dear Diary will ring an alarm for each appointment as a reminder. This feature is just like an alarm clock. It shows the current date and other dates to let you know that appointments are stored in the file.

Procedure:

1. Press the **ON** and **ENTER** (or press **QUIT** once or twice if you are using a file) to access the Menu.
2. Use the **ARROW KEYS** to select the **SCHEDULER** icon. Press **ENTER**.
3. The screen will prompt **DATE?**



4. Type the appointment date. Press **ENTER**.
5. Type the time you want the alarm to sound.
(See "Editing Time" on page 15.)

NOTE: On the desired date and time, alarm will sound, reminding you of your appointment, and the stored message will be shown. Press any key once to stop the alarm and twice to return to the current screen.

When Dear Diary is off. It will alarm on the desired date and time for a minute. It will turn off automatically after 3 minutes.

6. To view an appointment use **▲ ▼** **ARROW KEYS**, or type specific date and press **SEARCH**.
7. Press **EDIT** to change words in file; see page 14.
8. To delete an appointment, choose the appointment, and press **DELETE**.
9. Press **QUIT** to return to **DATE?** prompt. Press **QUIT** twice to return to Menu.

NOTE: Press **QUIT** once or twice at any time to return to Menu.

 
CAUTION




High temperature will destroy the unit. Do not leave unit in direct sunlight.



Do not press the liquid crystal display and avoid heavy shock or the display may fail.

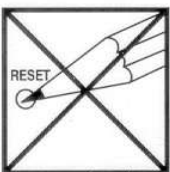

 Do not use a pencil or pin to press the reset button. Use a ball-point pen.

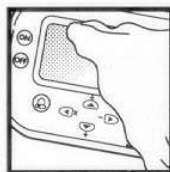

Clean only with a piece of soft dry cloth.



90 - DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$ 18.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at www.tigertoys.com

TIGER[®]
ELECTRONICS, LTD.

® , TM & © 1999 Tiger Electronics, Ltd.
980 Woodlands Parkway, Vernon Hills, Illinois 60061
www.tigertoys.com
PRINTED IN CHINA



715520001IWTI-03