



## Dollouse Instructions

Includes: Family of 3, table, 2 chairs, high-chair, sofa, cradle, lullaby and lights bureau, double bed, baby carriage and label sheet.


- Remove all plastic pieces from plastic bags, then discard bags immediately.

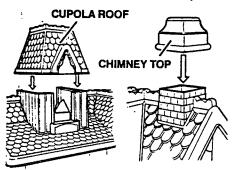


1) Snap cupola roof onto house top as shown. Fit chimney top onto chimney.

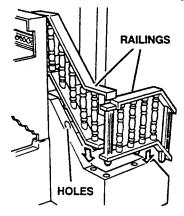


4) Snap stair railings into holes in stairs.

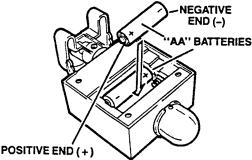


7) Insert 2 "AA" size batteries into the bureau as shown. Be sure positive end (+) and negative end (-) of each battery is installed properly. Batteries may leak if inserted improperly.

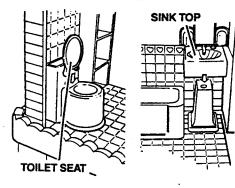


2) Snap toilet seat onto toilet and sink top over sink in bathroom as shown.

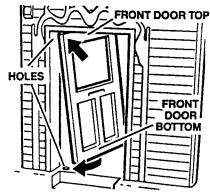


5) From inside the Dollhouse, snap top of front door into hole in doorway. Repeat with bottom hole. Make sure front door opens inward. Hide—away closet door under staircase inserts same as front door.

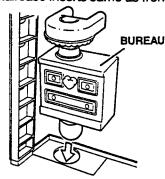


8) Replace battery door and screw into place. Place bureau in space as shown.

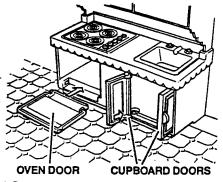

3) Snap oven door onto oven and cupboard doors onto bottom cupboards in kitchen as shown.

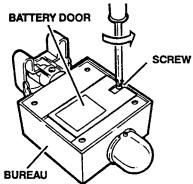

 
6) Using a Phillips® head screwdriver, unscrew battery door on rear of bureau. (Phillips head screwdriver not included.)



9) To turn on lights and lullaby, press the heart-shaped button on the front of the bureau. NOTE: Bulb may become loose during transportation. If bulb does not light when activated, check to see if bulbs are properly secured in the sockets.

## CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- Always remove exhausted or dead batteries from the product.
- Remove batteries if product is stored for a long period of time.

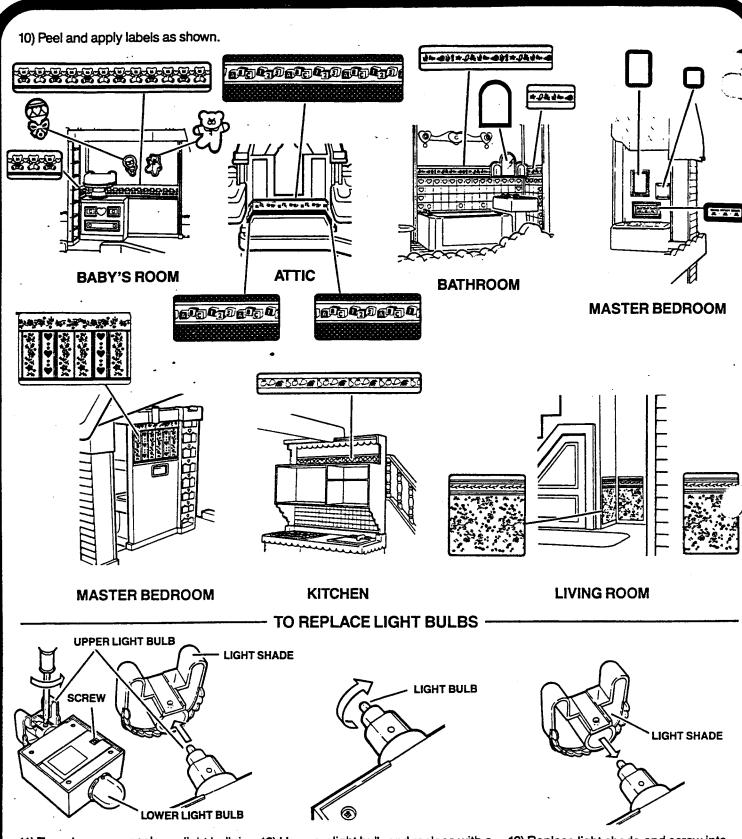

11) To replace upper or lower light bulb in bureau, remove screw from light shade using a Phillips head screwdriver.

12) Unscrew light bulb and replace with a new Subminiature Lamp Bulb Type T-1 <sup>3</sup>/<sub>4</sub> (2<sup>1</sup>/<sub>2</sub> volts).

13) Replace light shade and screw into place.

©1991 Playskool, Inc., Pawtucket, RI 02862 USA, a subsidiary of Hasbro, Inc. All Rights Reserved.
Distributed in the U.K. by Playskool (U.K.), a division of Hasbro Bradley U.K. Ltd., Caswell Way, Newport, Gwent, NP9 OYH.

Dolls and Bureau MADE IN CHINA. ALL OTHER COMPONENTS MADE IN U.S.A.

© denotes Reg. U.S. Pat. & TM Office.
1540 P/N 42106600