

T A REAL AMERICAN HERO®


## BATTLE WAGON™ INSTRUCTIONS


Remove all pieces
om plastic frames.
you have difficulty,
se safety spiesors


s: Body, 4 tires, turret support bar, turret with cannon, string, winch, hook, front and rear bumpers, 2 side guns, top gun, 12 missiles and label sheet.

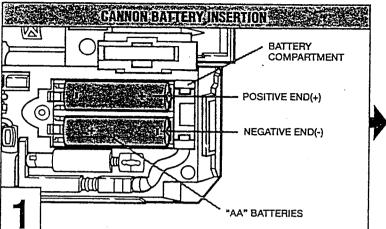


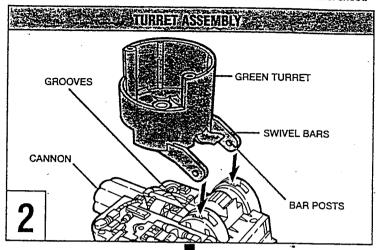

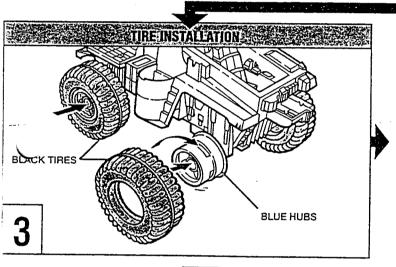

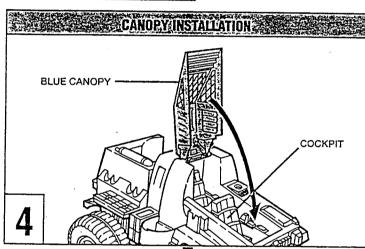

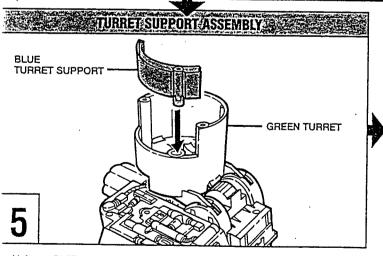

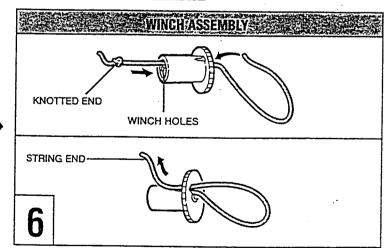

Using a Phillips® screwdriver (not included), unscrew battery compartment door on cannon. Insert 2 "AA" size batteries as shown. Be sure positive end(+) a egative end(-) on batteries match the corresponding markings in the compartment. Screw battery compartment door over battery compartment. If you have a problem connecting the battery to the battery contacts, check to make sure batteries are touching the contacts. (ILL\_1)

IMPORTANT: With green turret swivel bars facing rear, snap bar posts into grooves on underside of cannon, exactly as shown. (ILL. 2)


Press black tires onto blue hubs then turn to lock into place. (ILL 3)

Snap blue canopy over cockpit area. (ILL. 4)

Snap blue turret support into green turret. (ILL. 5)

Slide one end of string through holes in blue winch as shown. Tie a knot with other end of string. Slide end of string back through winch hole. (ILL., 6)

@1991 Hasbro, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved ASSEMBLED IN U.S.A. EDOM COMPONENTS MADE IN COMPONENTS MADE

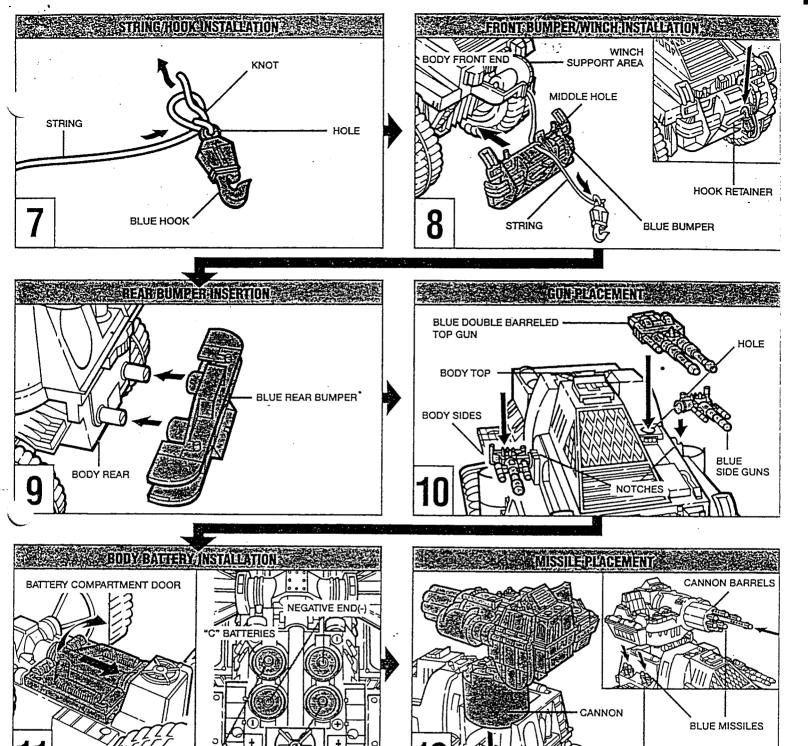

7 Thread string end through hole in blue hook and tie a double knot to secure. (ILL. 7)

POSITIVE END(


8 Place hook through middle hole in blue front bumper, then fit winch onto winch support area in body front end. Snap bumper onto body front end. Wind string onto winch and attach hook onto hook retainer as shown. (ILL. 8)

**BODY SIDE SLOTS** 

- 9 Snap blue rear bumper onto body rear. (ILL. 9)
- 10 Snap blue side guns into notches in body sides. Snap blue double barreled top gun into hole in body top. (ILL. 10)
- 11 Turn body upside down. Press battery compartment door forward and flip up. Insert 4 "C" size batteries into battery compartment. Be sure positive end (+ and negative end (-) on batteries match the corresponding markings in the compartment. Fit battery compartment door onto compartment. (ILL\_11)
  - it cannon into body as shown. Fit 8 blue missiles into cannon barrels, then store 4 remaining missiles into slots on body side. (ILL. 12)

## CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- · Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline.
- · Always remove exhausted or dead batteries from the product.

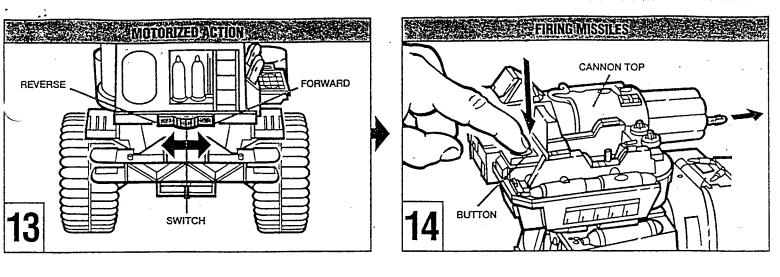

- 13 To activate motorized movement, flick switch on body rear to the right for forward, or to the left for reverse. (ILL 13)
- 14 For single fire action, quickly depress button on cannon top and release. For rapid fire action, keep finger depressed on button. (ILL. 14)

