

BIRTH +
05773


PLAYSKOOL[®]

Gloworm[™]

MUSICAL MOONLIGHT[™]
CRIB MIRROR

**Thank you for choosing this delightful
GLOWORM toy!**

**Includes 3 x 1.5V "AA"/R6 batteries. Alkaline
batteries recommended. Phillips/cross head
screwdriver (not included) required for battery
replacement.**

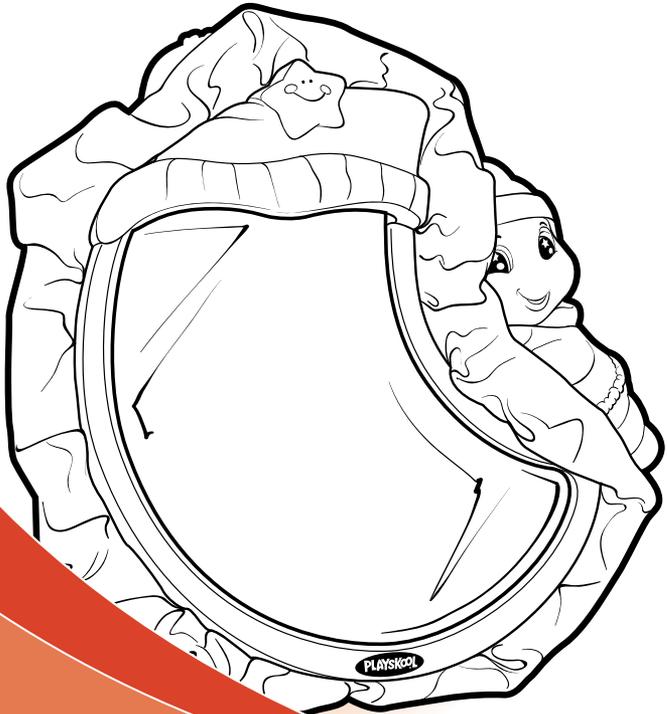

TO ATTACH TO CRIB

⚠ CAUTION: When toy is used in crib, the crib sides should be raised and the crib mattress should be in one of the lower positions.

1. Position toy inside crib near top rail.
2. Place straps around top crib rail, and, with toy firmly in place, fit tabs on toy through holes in straps.



TO USE

ADULT PLEASE NOTE: This product is shipped in "Demo" mode. Slide switch on toy to "Low" or "High" volume for full use at home.

The GLOWORM MUSICAL MOONLIGHT Crib Mirror is specially designed for baby's comfort and parents' peace of mind.

This unique toy includes 2 settings:


🎵 Music & Lights. Ease your child's transition to sleepyp time. Press the "music" button to illuminate the toy and play gentle, soothing lullaby music.

💡 Night light. Quietly check on your sleeping baby. Press the textured "light bulb" button to illuminate the toy (without music).

Shut-off

The toy will automatically shut off after 15-20 seconds of illumination and/or music. To shut off the toy while the electronics are on, simply press either button.

When storing the toy, slide the switch to "Off" to prevent accidental activation.

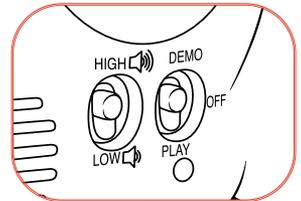

Pull out and remove red sewing thread "tack" from fabric trim.

Soft-touch fabric trim!

Plays 6 soothing lullabies!

Mirror is specially angled so baby can see her reflection.


Light-up GLOWORM is a child's special companion!

2 volume settings!



TO REPLACE BATTERIES

Using a Phillips/cross head screwdriver, loosen screw in battery cover (screw will remain attached to cover). Remove and discard old batteries. Insert 3 fresh 1.5V "AA"/LR6 alkaline batteries into battery compartment. Replace cover and retighten screw.

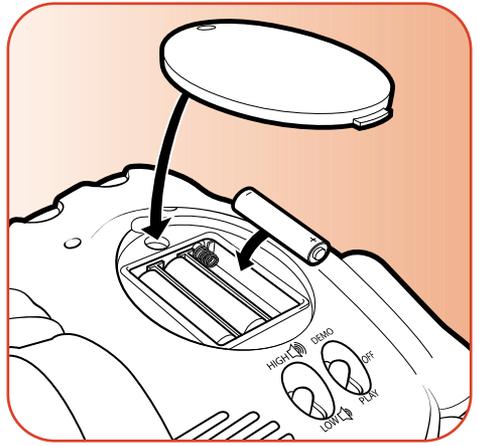

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by
National Campaign for Hearing Health
1050 17th Street NW, Suite 701
Washington, DC 20036



National Campaign for
Hearing Health

Talk to your doctor if you answer NO to any of these questions:

- | | | |
|--------------------------|--------------------------|--|
| YES | NO | Birth to 3 Months |
| <input type="checkbox"/> | <input type="checkbox"/> | Reacts to loud sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Is soothed by your voice |
| <input type="checkbox"/> | <input type="checkbox"/> | Turns head to you when you speak |
| <input type="checkbox"/> | <input type="checkbox"/> | Seems to know your voice and quiets down if crying |
| YES | NO | 3 to 6 Months |
| <input type="checkbox"/> | <input type="checkbox"/> | Looks upward or turns toward a new sound |
| <input type="checkbox"/> | <input type="checkbox"/> | Responds to "no" and changes in tone of voice |
| <input type="checkbox"/> | <input type="checkbox"/> | Enjoys rattles and other toys that make sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Becomes scared by a loud voice |

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at **1.800.535.3323** or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.

