 
 


8470

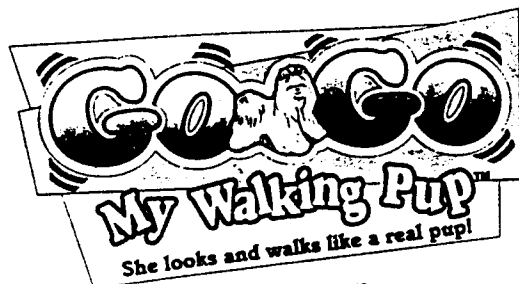

Instructions

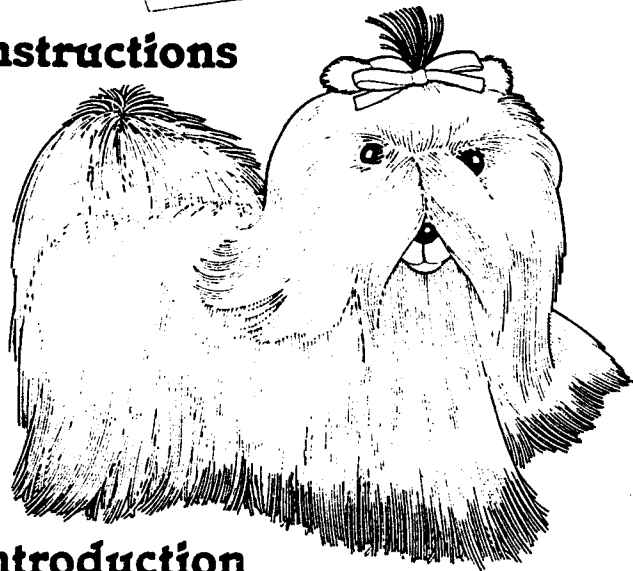

Introduction

 
Go-Go My Walking Pup is fun to take for a walk — she looks and walks like a real dog! Her head turns from side to side, her tail bobs, and she walks forward and backward!

Battery Cautions

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.


How To Take Go-Go For A Walk

1. Hold leash in one hand with remote control switch in the palm of your hand.

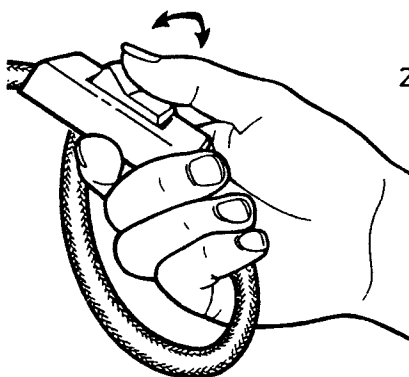


2. Press down on one side of the switch to make Go-Go walk forward. Press down on the other side of the switch to make her walk backward. **Note: Go-Go will only move when you press down on the remote control switch.**

 3. To stop Go-Go, remove your finger from the switch.

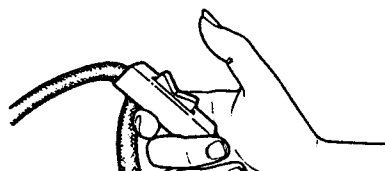


How to Insert Batteries

 
1. Loosen screw from battery compartment cover using a Phillips® head screwdriver. If Go-Go's back leg is blocking the screw, rotate the back wheels to move the leg away from the screw.

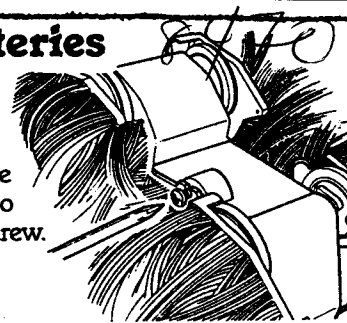

 
2. Lift cover and remove it to expose battery compartment.

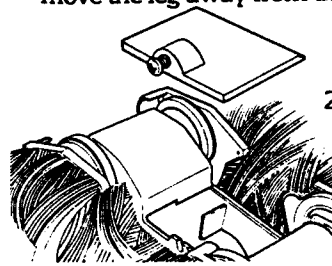

 3. Insert 4 "D" size batteries in the order (1-4) shown in the illustration, and in the position (+ or -) shown inside the battery compartment.

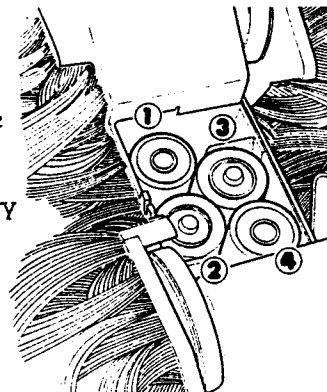

 4. Insert edge of cover into side of compartment and swing cover down.

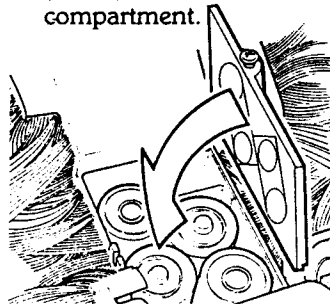

5. Tighten screw.

Where Go-Go Likes to Walk

- * Go-Go walks best on floors, pavement and low pile carpet. Do not walk her on grass, sand, or gravel, or through mud or water.
- * Walk Go-Go on flat surfaces. She does not walk up or down stairs.

Special Moves

- * You can make Go-Go beg by pulling up on her leash and depressing the remote control switch in either direction.
- * Go-Go can be guided in any direction you want — gently pull on the leash as she walks to guide her in the direction you want her to walk.

Washing and Grooming Go-Go

- * To Wash: Wash Go-Go with a damp cloth and mild soap. Let damp plush dry before combing.
- * To Groom: You can style her hair with the brush and ribbon included in the package.

Cautions

- * Do not submerge Go-Go in water.
- * Always watch where you are going when you are walking with Go-Go.
- * Do not sit or ride on Go-Go.
- * Do not push Go-Go along floor. Always use remote control switch to move Go-Go.

8470
P/N 40974000



©1990 Hasbro, Inc., Pawtucket, RI 02862 U.S.A., All Rights Reserved.

Printed in Hong Kong