 


PLAYSKOOL

TM

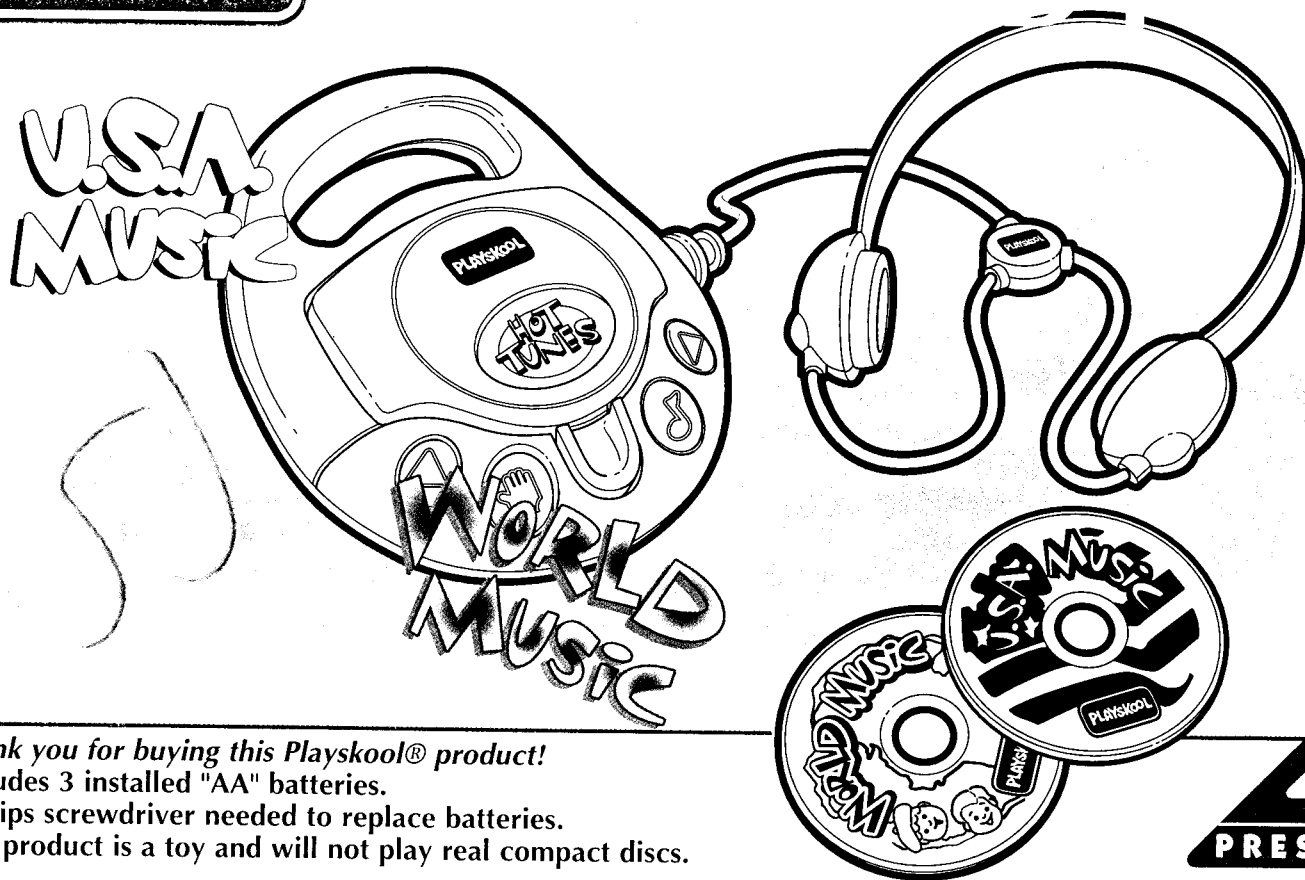

 
Thank you for buying this Playskool® product!
Includes 3 installed "AA" batteries.
Phillips screwdriver needed to replace batteries.
This product is a toy and will not play real compact discs.

**Ages
3 & UP**

PRESCHOOL


PLAY INSTRUCTIONS:

1. Use your thumb or index finger to unlatch the CD Player door. For easiest results press down at the bottom, rather than the top, of the latch.
2. Place either of the 2 pretend CDs inside the player, with the label side facing up. Push down on front end of door to snap shut.
3. Press the green "musical note" button to start the music! Each CD will activate a different 10-song program (either USA music styles or World music styles). Press the right-hand "Fast Forward" button to skip forward one song at a time; or the left-hand "Reverse" button to go back to the beginning of the song that's playing, or to reverse one song at a time. Press the red "STOP" button to shut off the music.
4. To change the pretend CD, unlock the latch and remove the first CD, then place the second one in the player with the label side facing up, and close the door.
5. If you want to listen to the music through the headphones, simply insert the jack into its slot on right-hand side of player. (Note: Even with the headphones plugged in, you will still be able to hear the music coming through the speaker on the player.)

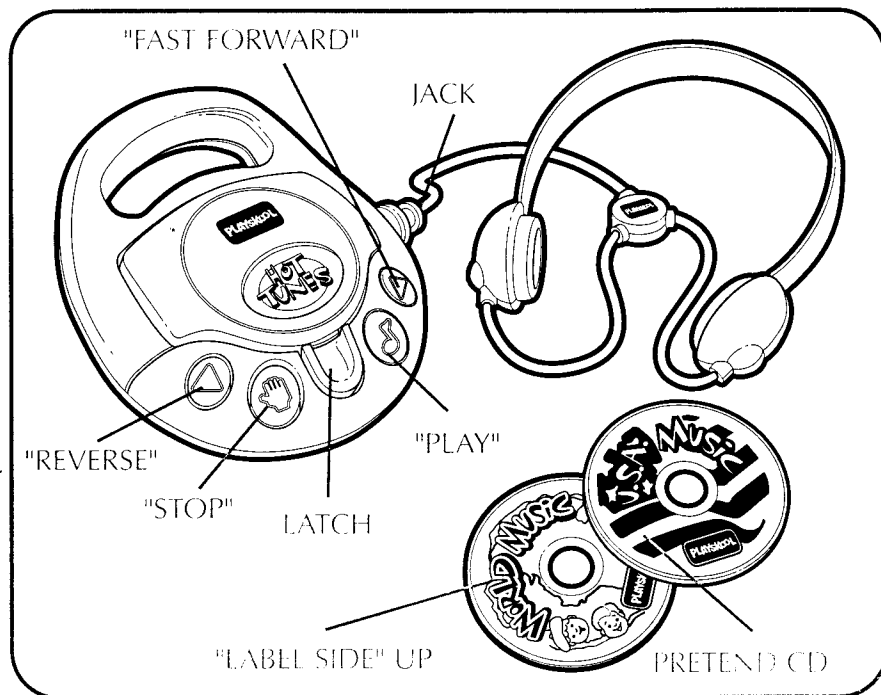

STORAGE:

6. After play, you can store one CD inside the player, and the second CD in the recessed area in back as shown.

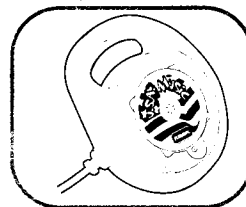

IF CDs ARE LOST:

7. The 2 pretend CDs each have a groove on the back which distinguishes between the USA and World Music programs. However, if either or both of the CDs are lost or misplaced, the CD Player will continue to play through the complete 20-song cycle when you press the "PLAY" button.

HOT TUNES™ SONG LIST

© 1997 Hasbro, Inc. New musical arrangements by Tim Lightbody and David Wohl.

"U.S.A. Music":


1. "Rockin' Robin" - 1958 rock 'n roll classic!
2. "The Sorcerer's Apprentice" - A classical symphony written in 1897 by Paul Dukas.
3. "She'll Be Comin' Round the Mountain" - A traditional folk song, played in a bluegrass style.
4. "Mary Had a Little Lamb" - The classic nursery rhyme, written circa 1867-68, played in a jazz style.
5. "Polly Wolly Doodle" - A traditional folk song, originally a Civil War minstrel song.
6. "The Wanderer" - A '60s rock 'n roll classic!
7. "Are You Sleeping" - Classic children's song, originally from France, played in a reggae style.
8. "Old MacDonald" - A traditional children's song, played to a country beat.
9. "This Old Man" - A classic children's song, originally from England, played in a "funkedelic" style.
10. "When the Saints Go Marching In" - A famous Dixieland jazz tune.

"World Music":

1. "La Cucaracha" - A traditional Mexican song.
2. Beethoven's Fifth Symphony - The opening theme of Beethoven's famous symphony.
3. "Pop Goes the Weasel" - A traditional English song, played in a Celtic style.
4. "Have You Ever Seen a Lassie?" - A traditional Scottish song.
5. "Twinkle, Twinkle, Little Star" - A traditional children's song, played to a Calypso beat.
6. "Sweet Molly Malone" - A traditional Irish folk song from the 18th century.
7. "Sailor's Hornpipe" - A traditional English sailor's ditty, written around 1775.
8. "William Tell Overture" - The overture to Gioacchino Rossini's opera "William Tell," written in 1829.
9. "Greensleeves" - A traditional English folk song, dating to 1580.
10. "Jenny Lind Polka" - A traditional polka by Anton Wallerstein.

WHEN BATTERIES NEED REPLACEMENT:

1. The Playskool Hot Tunes™ CD Player comes equipped with 3 "AA" batteries. The battery compartment is located in back. When the original batteries are exhausted, use a Phillips screwdriver to loosen and remove the screw that secures the battery compartment door, and remove the door.
2. Insert 3 new "AA" (alkaline recommended) batteries into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

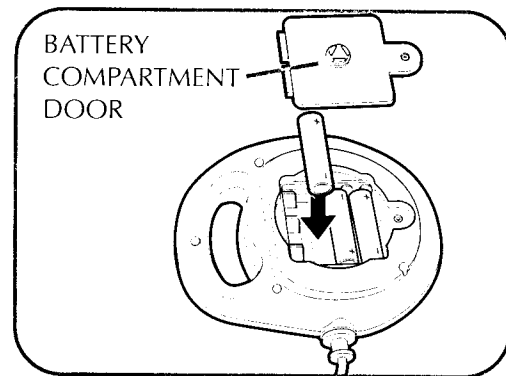

CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 1997 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office. U.S. Patent Pending. MADE IN CHINA.

521

P/N 47538200



Questions? Call:

1-800-PLAYSKL™