 




Ages 3 & Up



# Light 'n Learn Grand Piano™

Phillips screwdriver needed for battery placement (not included).

## PIANO MODE

In this mode, the piano works as a real, one-octave keyboard. Push the "PIANO" button above, and a friendly voice will ask you to "Play a song!" Then press the piano keys to play whatever you want!

## LISTEN MODE

Push the "LISTEN" button, and the voice will ask you to "Pick a song to hear!" Each key is labeled with a picture illustrating the song that key plays. Choose a song, and press the key — as the song plays, the keys light up to show you the notes being played!

The songs, from left to right on the keyboard, are:

1. "Mary Had A Little Lamb"
2. "London Bridge"
3. "Are You Sleeping" ("Freres Jacques")
4. "Ring Around The Rosie"
5. "Hey Diddle Diddle"
6. "Row Row Row Your Boat"
7. "Everybody's Cheering"
8. "Do Re Mi"

Each song will play twice when selected.

## LEARN MODE

Push the "LEARN" button, and the voice will ask you to "Pick a song to learn!" Choose a song and press the key, and the piano keys will light up one at a time to tell you which note to play; just follow the light, and the piano will teach you how to play that song. Each song will play twice when selected.

## AUTOMATIC SHUT-OFF


If no key or button is pressed for approximately 1 minute, the Piano will automatically shut-off. To re-activate, simply press any of the 3 top buttons to select a playing mode.

## FCC RULES FOR A CLASS B DIGITAL DEVICE


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

## REPLACING THE BATTERIES

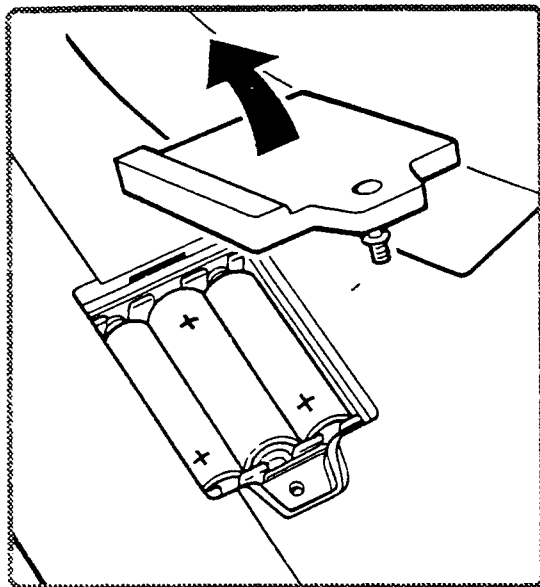

The Light 'n Learn Grand Piano comes equipped with 3 "AA" batteries. The battery compartment is located on the bottom of the piano. When the batteries are exhausted, use a Phillips screwdriver to loosen (but not remove) the screw that secures the battery compartment door, and remove door.

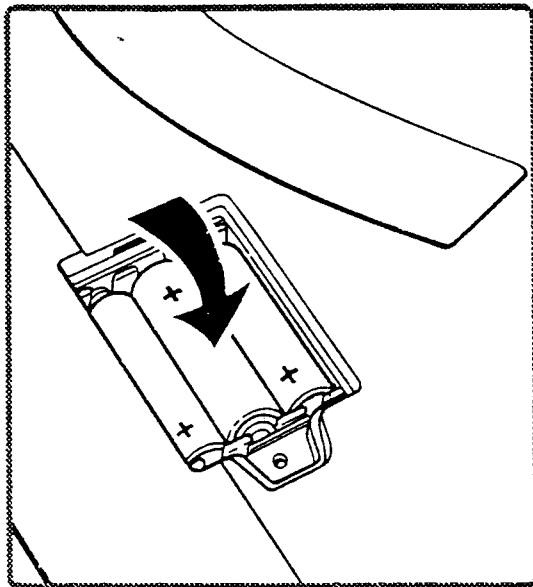

Insert 3 "AA" batteries into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

### CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Never mix old batteries with new batteries, or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from product.
4. Remove batteries if product is stored for a long period of time.

© 1995 Hasbro, Inc., Pawtucket, RI 02862 USA.  
All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

**MADE IN CHINA.** P/N 46028800