

Magic Breakfast Party™ Instructions

437
Ages 3 & Up
637/701 Asst.

 
Remove all pieces from plastic bags, then discard bags immediately.

Includes: color-change pitcher with lid, 2 plates, 2 color-change cups, 2 stirrers, 1 color-change whole muffin, 2 color-change muffin halves, muffin tray, 2 color-change knives, jar with lid, invitation, and instructions.


NOTE TO PARENTS: Hand wash the Magic Breakfast Party in a solution of mild dishwashing liquid and water before using. Do not place any of the pieces in the dishwasher as they are not dishwasher safe.

HOW TO FILL THE PITCHER AND CUPS WITH PRETEND "ORANGE JUICE"

1. To make pretend "orange juice" appear, place **ice cold water** in the pitcher. Then, pour the **ice water** from the pitcher into the cups. Note: The color-change feature does not affect the water added to the pitcher and cups.

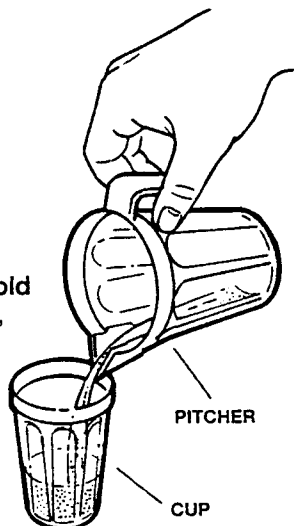

 HOW TO SPREAD THE GRAPE-COLORED "JELLY" ONTO THE MUFFINS

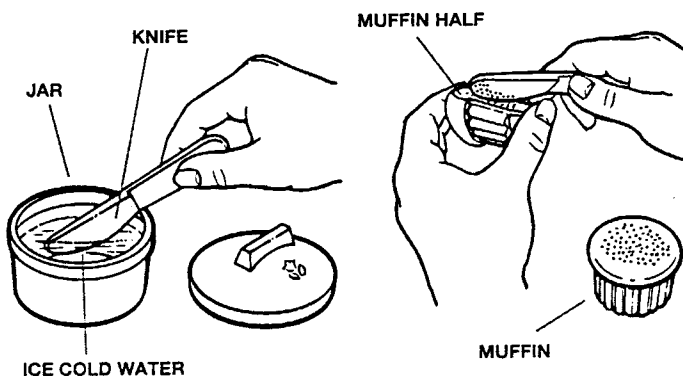

2. Fill the jar with **ice cold water**. Then dip the knives inside to spread the grape-colored pretend "jelly" onto the muffin and muffin halves.

HOW TO CLEAN THE PITCHER, CUPS, KNIVES AND MUFFINS

3. Wash the pitcher, cups, knives and muffins with **warm water**, then soak them in **warm water** to rinse them clean. Remember to dry the pieces thoroughly.


IMPORTANT INFORMATION FOR PARENTS

When the ice water cools the pitcher, cups, knives and muffins to 55°F, they will retain the orange or grape color. To completely remove the "orange juice" and "jelly" from them, immerse them in water that will warm them to 95°F or about the same temperature as warm bath water. Make sure they soak for at least 30 seconds.

HOW TO MAKE PARTY INVITATIONS AND NAME CARDS

4. **INVITATION:** Place the invitation on a flat surface with the design facing up. Place a piece of paper (not included) on top of the invitation. Rub a crayon (not included) across the invitation until the complete design appears on the paper. Fill in the name of the party guest.

NAME CARD: To make a name card, turn invitation to the other side, and follow the above instructions. Fold it on the dotted line, and place it in front of a place setting.

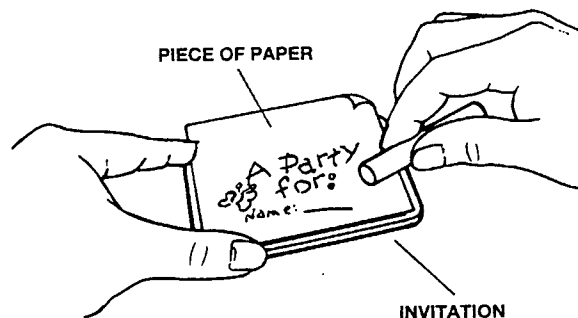

Questions? Call: **1-800-PLAYSKL**

For future reference, our toll-free consumer service number is also located on this product.