

PLAYSKOOL®

Magic Tea Party™

Ages 3 & Up

 
Questions? Call:

1-800-PLAYSKL™




1a.

Ice cold water
with ice cubes

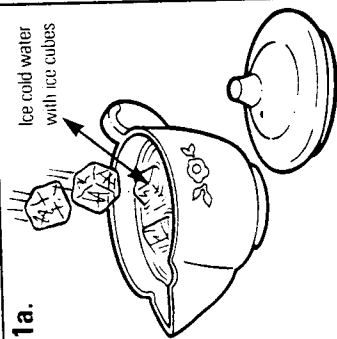

1b.

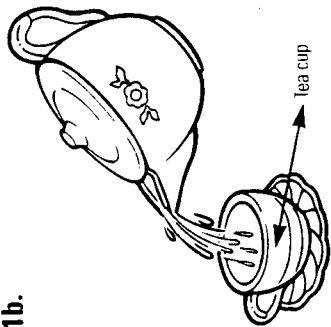 

Thank you for purchasing the Playskool Magic™ Tea Party! Please save this instruction sheet for future reference. If you have questions, comments or concerns about this product, please call Playskool toll-free at 1-800-PLAYSKL.

Remove all pieces from plastic bags, then discard bags immediately.


Includes: 4 color change tea cups, 4 saucers, teapot with lid, sugar bowl with lid, creamer with lid, 2 spoons and serving tray.

IMPORTANT NOTICE TO PARENTS: Please hand wash all individual play pieces in a solution of mild dishwashing liquid and warm water before using. Do not place any of the pieces in the dishwasher as they are not dishwasher safe.

HOW TO FILL TEA CUPS WITH PRETEND "TEA":

1. To make the raspberry-colored pretend "tea" appear, place **cold water** and **ice cubes** in the tea pot (inset 1A), then pour the ice water from the tea pot into the tea cups (inset 1B). After several seconds, pretend tea will begin to appear.

3.

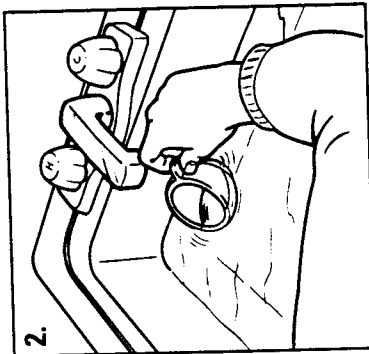

HOW TO CLEAN THE TEA CUPS:


2. Soak tea cups in **warm water** to wash away the color of the pretend tea. Remember to dry the tea cups thoroughly.

STORAGE OF PLAY PIECES:

3. The serving tray is designed to hold all 16 play pieces for easy carrying and storage as shown in inset 3.

IMPORTANT INFORMATION FOR PARENTS:

When the ice water cools the tea cups to 55° F, they will retain the raspberry color. To completely remove the "tea" from the cups, immerse them in water that will warm them to 95° F or about the same temperature as warm bath water. Make sure they soak for at least 30 seconds.

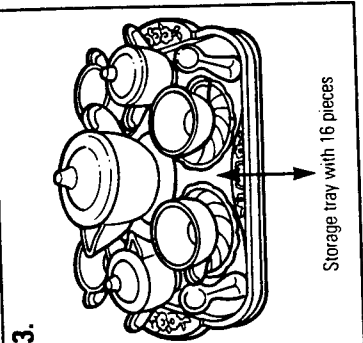

Storage tray with 16 pieces

© 1995 Hasbro, Inc., Pawtucket, RI 02862. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office. **MADE IN MEXICO.**

772

P/N 46245700