


Thank you for buying this Playskool[®] product!

Includes: 3 "AA" batteries. Phillips screwdriver (not included) required for battery replacement.

Includes: Mr. Potato Head® body with Shoes, 2 Arms, 4 Ears, 2 Sets of Eyes, 2 Noses, 2 Mouths, Hat and Removable Backpack!

ADULT PLEASE NOTE: TALK 'N POP MR. POTATO HEAD IS SHIPPED IN "DEMO" MODE. MOVE SWITCH ON THE BOTTOM OF HIS FEET TO "PLAY" POSITION BEFORE USING AT HOME.

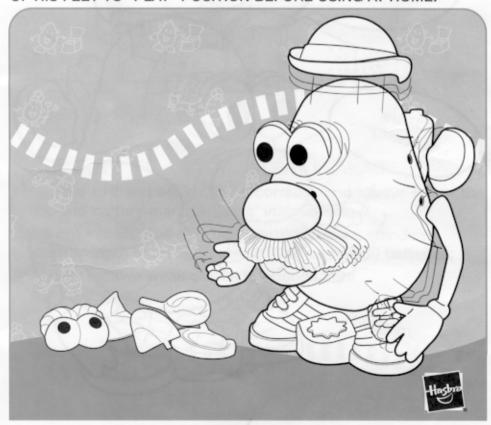

To Play

Talk 'n Pop Mr. Potato Head® is an interactive toy spud who says over 20 "spud-tacular" things! He loves to share a wacky surprise – his parts pop off before your eyes!

- Attach the parts to his body...
- 2. Press the "POP" button on his feet...
- 3. Watch all his parts pop off!
- Reattach the pieces and press the button to start the fun all over again!
- The removable backpack on the Mr. Potato Head toy stores all the extra pieces after he's been decorated, so nothing gets lost!



To Replace Batteries

Unsnap and remove the backpack from the Mr. Potato Head® toy. Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 fresh "AA" alkaline batteries. Replace door and tighten screw. Reattach backpack.





CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- Always remove weak or dead batteries from the product.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

