


Lullabye Bird™

79

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY.

HOW TO INSTALL BATTERIES:


1. Remove battery cover on back of Lullabye Bird with a Phillips screwdriver.
2. Insert four (4) "AA" batteries in position as shown. For best results, use fresh alkaline batteries. (not included).
3. Replace battery cover, being careful not to overtighten the screw.

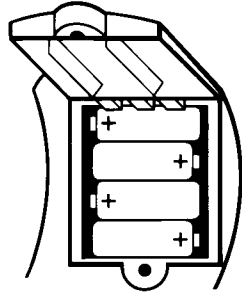

JW TO ATTACH LULLABYE BIRD:


Lullabye Bird's unique "snap 'n stay" ring lets parent attach it to the crib, stroller or playpen. Baby can also play with Lullabye Bird on the floor or tabletop.

1. Put ring through hole on top of Lullabye Bird's head.
2. Slip ring around crib rail, stroller handle, etc.
3. Snap "hook" through small hole to fasten.
4. To remove "snap 'n stay" ring, firmly grasp ring with both hands. Press outward on base of small ring with forefinger until "hook" is clear.

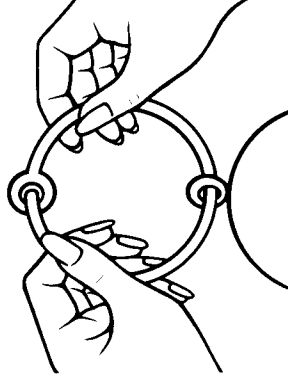

NOTE: The button on Lullabye Bird's back works two ways.

1. If button is pushed while Lullabye Bird is *playing*, the music will shut off.
2. If button is pushed while Lullabye Bird is *silent*, it will begin playing 20 minutes of continuous music.

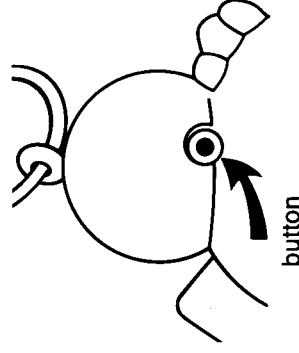

HOW TO PLAY MUSIC:

1. Playtime Music (*Short Play*)

- Anytime baby pushes or rocks Lullabye Bird, baby is rewarded with one of ten nursery songs.
- Each time Lullabye Bird is rocked within 9 minutes, it will play a different nursery song ... for a total of ten songs.

2. Sleepytime Music (*Long Play*)

- To activate long play feature, simply press button on Lullabye Bird's back.
- Lullabye Bird will play these ten songs:

Twinkle, Twinkle Little Star	Hush Little Baby
London Bridge	Muffin Man
All Through the Night	Farmer in the Dell
Frere Jacques	Rock-A-Bye Baby
Mary Had a Little Lamb	Polly Put the Kettle On
- Lullabye Bird will repeat all ten songs for approximately 20 minutes, then it will automatically shut off.

REMEMBER:

To stop the music while Lullabye Bird is playing, press the button on its back.

90 DAY LIMITED WARRANTY

The Lullabye Bird is warranted by Playskool, Inc. to the original purchaser for a period of 90 days from the original purchase date under normal use and service against defective workmanship and materials (batteries excluded).

This warranty is void if the toy has been damaged by accident or unreasonable use, neglect, misuse, abuse, improper service or other causes not arising out of defects in workmanship or materials.

Playskool, Inc. shall not be liable for loss of use of the toy or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

During the warranty period, if found to be defective due to workmanship or materials, the toy will either be repaired or replaced with a reconditioned product of an equivalent quality (at Playskool, Inc.'s option) without charge to the purchaser when returned with dated proof of purchase, shipping prepaid to the address listed below. In the event that the toy is replaced, the warranty on the replacement will be continued for 90 days.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

IMPORTANT: Before returning the Lullabye Bird for repair, we recommend that you test your toy with fresh, strong batteries. Even new batteries may be defective or weak, and low battery power is a frequent cause of unsatisfactory operation.

MAILING INSTRUCTIONS

PLEASE READ CAREFULLY AND RETAIN THIS IMPORTANT INFORMATION FOR FUTURE REFERENCE. REMOVE THE BATTERIES BEFORE MAILING LULLABYE BIRD. DO NOT RETURN THEM!

If the original packaging is available, repack the Lullabye Bird in its packing and box. If not available, wrap carefully, making sure to surround the product with adequate padding. Please include a brief description of the problem, your return address and mail postage prepaid and insured to the following address:

PLAYSKOOL, INC.
Customer Service Department
450 Division Street
Pawtucket, RI 02860

PLEASE DIRECT ANY INQUIRIES OR CORRESPONDENCE TO THE CUSTOMER SERVICE DEPARTMENT.