




Ages 2 & Up

Real Sounds Kitchen Set™


Includes: Dishwasher/counter unit, toaster, kitchen chair, bowl, plate, dish rack, dish towel.

Tool needed for battery replacement: Phillips screwdriver.

Inserting Batteries

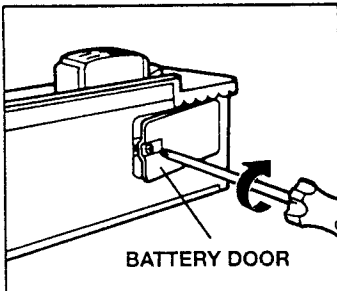

BATTERY DOOR

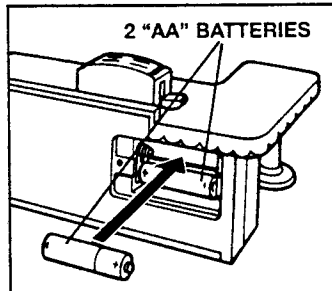

2 "AA" BATTERIES


1. Locate battery compartment in back of counter. Use a Phillips screwdriver to loosen screw, and remove battery door. Insert 2 "AA" batteries (alkaline recommended) as shown, then replace door and tighten screw.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Never mix old batteries with new batteries, or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from product.
4. Remove batteries if product is stored for a long period of time.


Play Instructions

1. Place the dishes in the dish rack as shown in illustration, then put the rack inside the dishwasher and close the dishwasher door.

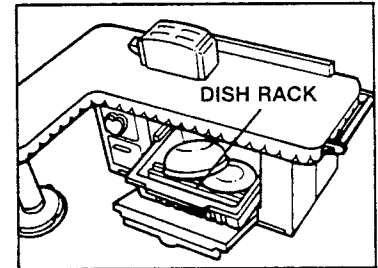


DISH RACK

2. Now press the heart button to hear realistic dishwasher sounds! Each time you press the button, the electronic sounds will go through a whole dishwasher cycle — rinse, wash, rinse, dry! (Once the cycle starts, the sounds cannot be stopped or interrupted.)

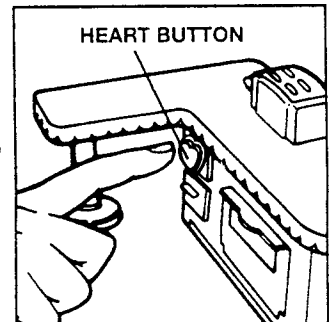

HEART BUTTON

3. Lift the lever on the toaster to make the pretend toast pop up!

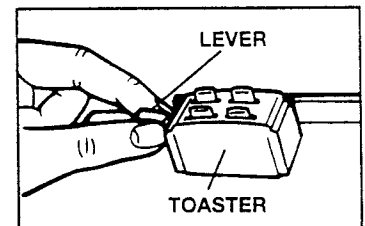

LEVER

TOASTER



FCC RULES FOR A CLASS B DIGITAL DEVICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Assembly

1. Attach the longer post to the counter unit as shown, pressing the post up into the fitting on bottom of counter.

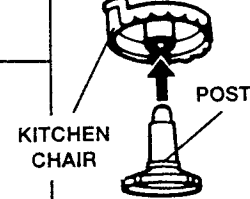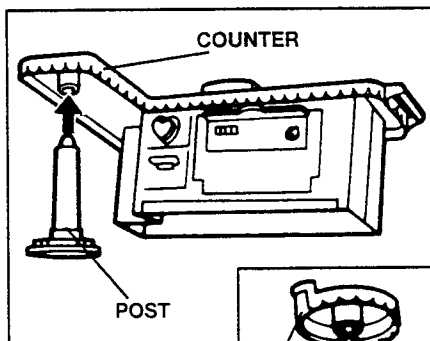

2. Attach the shorter post to the kitchen chair in the same way.

 

© 1995 Hasbro, Inc., Pawtucket, RI 02862 USA.
All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
P/N 46084400 MADE IN CHINA.

1406/1449 Asst.