

Ages 3 & Up © Coos & Giggles! Instructions

BATTERY DIRECTIONS:

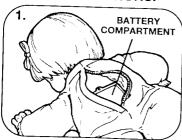

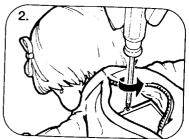

Battery installation requires a Phillips* screwdriver (not included). Unzip the back of Real Baby Coos & Giggles' pajamas as shown to reveal the battery compartment. (ILL. 1) Use the screwdriver to loosen the screw securing the battery compartment door and remove



Insert 3 "AA" batteries (alkaline batteries are recommended). Replace the battery door and re-fasten the screw with the screwdriver. (ILL. 3)

CAUTION: TO AVOID BATTERY LEAKAGE

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- Always remove exhausted or dead batteries from the product.
- Remove batteries if product is stored for a long period of time.
- Alkaline batteries recommended.





Switch button located in back of neck to the "ON" position.

Hold Real Baby Coos & Giggles about 6 to 12 inches from you as shown and talk to her just like you would a real baby. She will wait until you finish speaking and then coo in response!

Real Baby Coos & Giggles will also coo when you shake her baby rattle close to her as shown.

Tickle Real Baby Coos & Giggles' tummy and she'll giggle happily for as long as you keep tickling! Even if she is already cooing, she will immediately stop and begin giggling when you

To conserve battery life, turn switch located in back of neck to the "OFF" position when not in use.

Ages 3 & Up

Real Coos & Giggles!

NOTE TO PARENT: If your child talks to and tickles Real Baby Coos & Giggles <u>at the same time</u>, the doll will not respond at all.

Your child must start by talking <u>or</u> tickling to activate a response from Real Baby Coos & Giggles.

©1992 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved. ® denotes Reg. U.S. Pat. & TM Office. **Made in China.** 9065/9067 P/N 44210400

