

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

©1998 Hasbro, Inc. All Rights Reserved.
denotes Reg. U.S. Pat. & TM Office. U.S. Patent Pending.
EVEREADY and the EVEREADY logo are registered trademarks of
EVEREADY BATTERY COMPANY, INC., St. Louis, MO 63164.

612 P/N 48062400



Questions? Call:
1-800-PLAYSKL




612

Real Recordin' Message Center™


Thank you for buying this Playskool product!

Includes 4 "AA"  EVEREADY® batteries.

Phillips screwdriver needed to replace batteries.

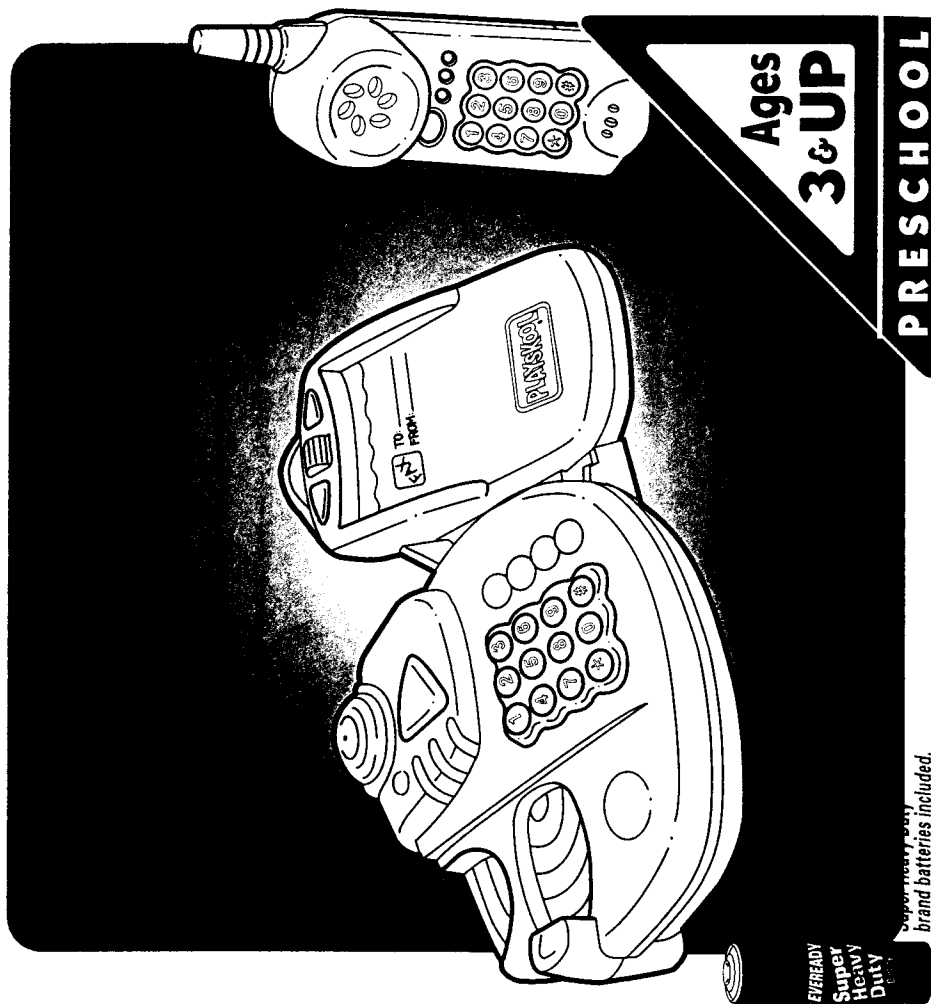


Super Heavy Duty
brand batteries included.

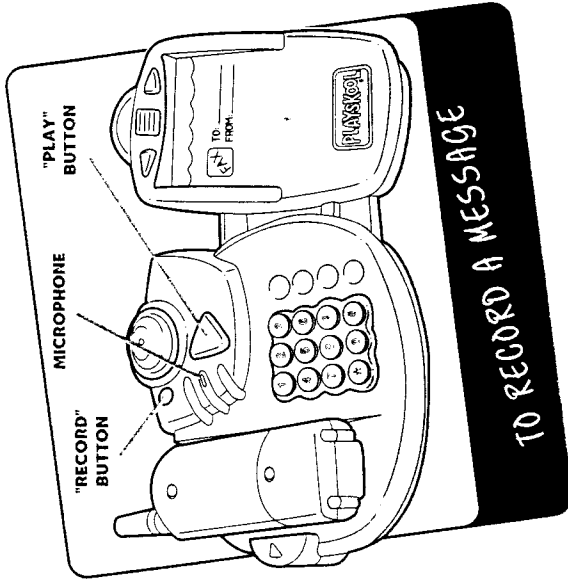

TO RECORD:

1. To record a message, just press the small button at the top of the Real Recordin' Message Center™ and hold it down as you talk directly into the microphone from 8 to 12 inches away. When you're finished, release the button. You can record a message up to 6 seconds long.


2. After you finish recording, the red light will blink on and off to indicate there's a message ready to be played back. Just press the large "arrow" button below the light to play the message!
3. You can record new messages over and over again! Just press and hold the "RECORD" button to record over your original message - make lots of different messages for your friends and family!
(Note: The machine can only store one message at a time.)

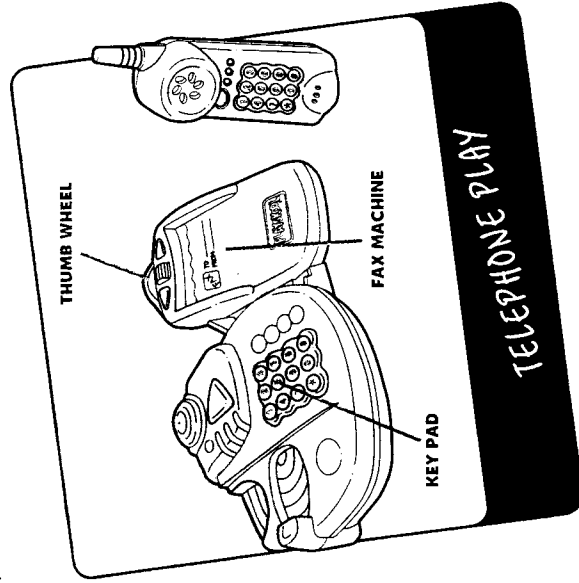

features a pretend fax machine! You can place a slip of paper (width 3" or less) in the top and run it through the machine by turning the top thumb wheel.

IMPORTANT NOTE!


If the Real Recordin' Message Center™ is dropped or sustains a strong shock, it may shut down operation. To "reset" the electronics, simply press the large "PLAY" button and the Center will return to normal operation.

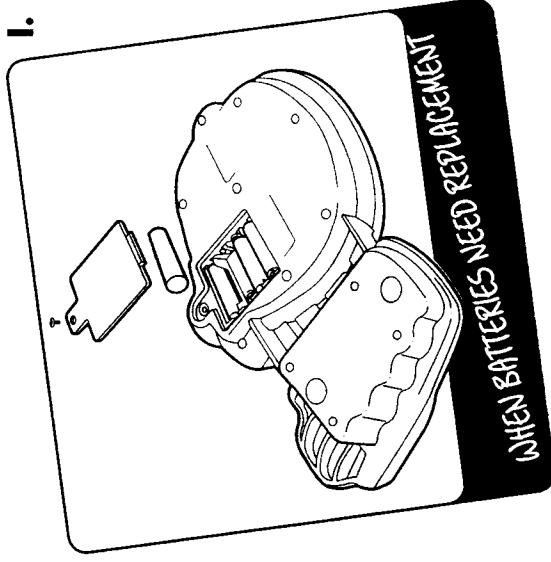

1. The Real Recordin' Message Center™ comes equipped with 4 "AA" heavy duty batteries. The battery compartment is located underneath the Center. When the original batteries are exhausted, use a Phillips screwdriver to loosen the screw that secures the battery compartment door, and remove the door.
2. Insert 4 new "AA" (alkaline recommended) batteries into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

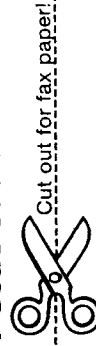

Cut out for fax paper!

