



DELUXE TALKBOY

CASSETTE RECORDER WITH VOICE CHANGER


OPERATING INSTRUCTIONS

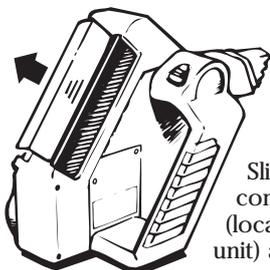

Slide battery compartment door (located at back of unit) away from unit.

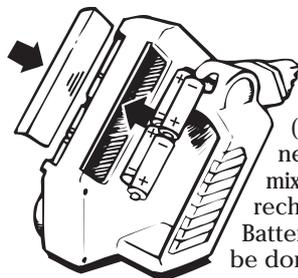


Insert 4 "AA"/LR6 batteries according to diagram provided on label in compartment. (Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Battery installation should be done by an adult.)

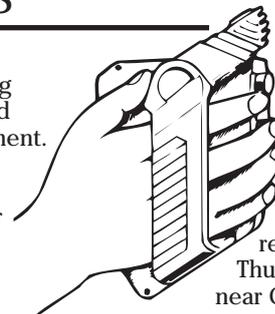


To hold, slide hand through handle. Fingers should be able to reach buttons. Thumb should rest near ON/OFF switch.

● TO RECORD

1 Open cassette door by pulling back on tab located on door. Slide tape through tabs in door (thin side of cassette should go in first). Close door.

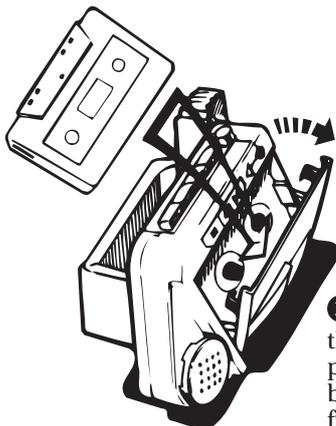

2 The microphone is located at the top of the handle. Extend microphone by pulling away from handle

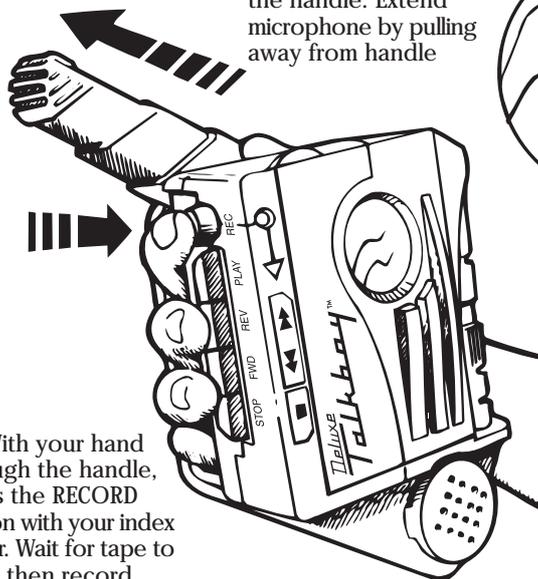


3 With your hand through the handle, press the RECORD button with your index finger. Wait for tape to start, then record.



4 The SLOW/ON/OFF switch controls all the functions of the TALKBOY. It is located at your thumb for easy use. Push to "ON" to start TALKBOY functions. Push to "OFF" to stop functions. The SLOW position controls both playback and record functions. Playback of normally recorded voice in SLOW will deepen voice. Recording in SLOW then playing back at normal speed will raise the pitch of voice.

5 When you are finished recording, press the STOP button. Only remove cassette after stopping the tape.

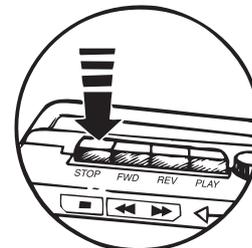

◀ TO PLAY BACK


Insert the recorded cassette and press down the PLAY button. Adjust the VOLUME controls.

The other buttons on the unit are:

REW (rewind) - If the rewind button is pushed down the tape will be wound rapidly onto the right reel. When the tape reaches the desired position, push down **STOP** button.

FF (fast forward) - while the fast forward button is pushed down, the tape will wind rapidly onto the left reel.

Note: press the **STOP** button once the tape has reached a desired position or end. This prevents unnecessary wear.

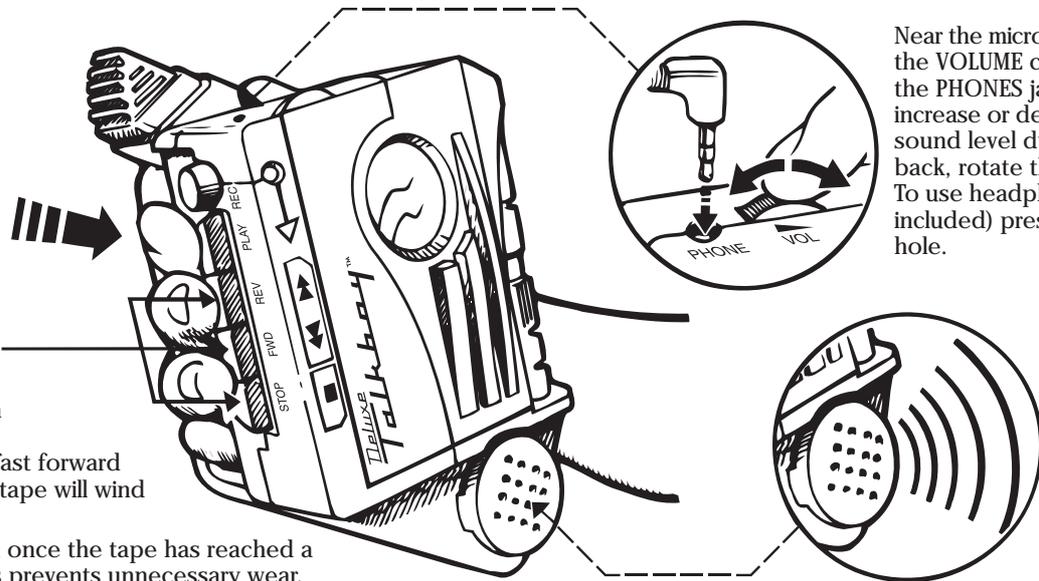

Near the microphone are the **VOLUME** control and the **PHONES** jack. To increase or decrease the sound level during play back, rotate the wheel. To use headphones (not included) press jack into hole.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of US\$19.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023, Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Home Alone 2- Lost in New York and Talkboy are registered trademark of Twentieth Century Fox Film Corporation and Tiger Electronics, Inc. All Rights Reserved.

TIGER
ELECTRONICS, LTD.



For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com.
©, TM, & © 1999 Tiger Electronics, Ltd. All Rights Reserved. 980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.
©, TM, & © 1999 Tiger Electronics UK Ltd. All Rights Reserved.
Belvedere House, Victoria Avenue, Harrogate, North Yorkshire HG1 1EL, England.

PRINTED IN CHINA