


★ MESSAGE TO PARENTS

Thank you for bringing home the Pooh Alphabet Teeter Totter. This is a wonderful educational product for your child. What could be more exciting than learning from Pooh and his friends?

With the Pooh Alphabet Teeter Totter, your child will learn letters in a fun new way. This fundamental skill is a building block for reading readiness.

Please read the instructions carefully and learn about the many different features of the Pooh Alphabet Teeter Totter. This will allow you to explain them to your child in a way that is easiest for them to understand.

Please note: The Pooh Alphabet Teeter Totter will not understand a button push if it is made while the unit is talking or making a sound. Please be sure not to answer any questions while the unit is talking or making a sound or it may not understand your response.

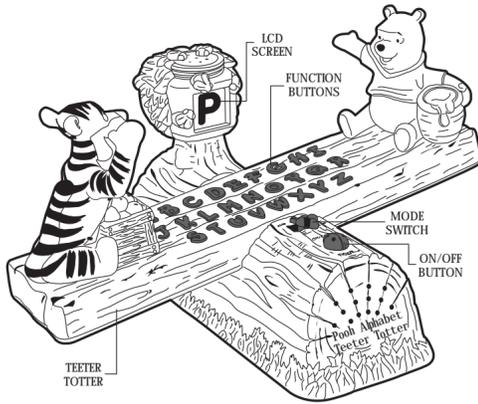

1

- ON/OFF BUTTON - Press this button to turn the unit ON or OFF.
- MODE SWITCH - Slide this switch to select one of the three different modes of learning: FIND, IDENTIFY, and WHAT COMES NEXT?
- FUNCTION BUTTONS - Use the letter keys to answer questions in all learning modes.
- LCD SCREEN - Displays the letters of the alphabet to reinforce learning.
- TEETER TOTTER - Answer questions by moving the Teeter Totter up and down. This action displays the alphabet in sequence on the LCD screen.

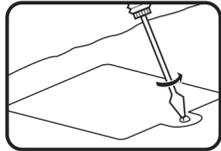


Illustration 1

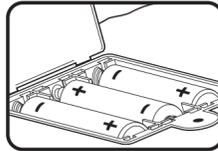


Illustration 2

★ INSERTING THE BATTERIES

- Important Note: Battery installation should be done by an adult.
1. Open the battery compartment door on the bottom of the unit using a screwdriver to remove the screw. (Illustration 1)
 2. Insert 3 "AA" / LR6 batteries. Be sure to match the "+" and "-" as shown. (Illustration 2)
 3. Close the battery compartment door and replace the screw using a screwdriver.
 4. Battery installation should be done by an adult.

★ ADJUSTING THE LCD SCREEN CONTRAST

1. Hold the button "C" and turn the unit on. Pooh's face will show on the LCD.
2. Press the button "D" to decrease the LCD contrast.
3. Press the button "L" to increase the LCD contrast.
4. Press the button "X" to quit or wait for the automatic time out.

2

★ HOW TO PLAY

The Pooh Alphabet Teeter Totter uses a unique combination of an LCD screen, fun action and visual reinforcement that motivates kids to play and learn. Questions can be answered using the buttons on the Teeter Totter or, your child can answer by moving the Teeter Totter in an up and down motion. Using the Teeter Totter method, the alphabet is reinforced letter by letter as each appears on the LCD screen in sequence.

1. Press the ON button. You will hear a friendly greeting from Tigger: "Hello there!" "Riding a see saw is what Tiggers do best!" Then Pooh will respond with "Those letters look very friendly."
2. Choose the mode/way you wish to play: What's Next?, FIND or IDENTIFY

WHAT'S NEXT?:

Pooh will ask your child, "What comes after the letter ____?" Your child can respond to the prompt in either of two ways, by pressing a letter key, or by pushing the teeter totter up and down until the correct letter is reached. Remember, you must pause 3 seconds after reaching the desired letter to signal it as your choice.

FIND MODE:

In find mode Pooh asks you to find a specific letter. Your child can respond to the question by pressing a letter key, or by moving the Teeter Totter up and down displaying each letter of the alphabet in sequence on the LCD screen. When the correct letter is reached Tigger will congratulate your child. Tigger only knows you have reached the letter you want when you pause 3 seconds after the last movement of the teeter totter.

IDENTIFY MODE:

Pooh will prompt the child to push a button or move the Teeter Totter up and down. Each time a letter button is pressed, or the teeter totter moves, Pooh will identify the letter and the letter will appear on the LCD screen. Every so often Pooh or Tigger will respond with an encouraging phrase.

FRIENDLY AND ENCOURAGING FEEDBACK:

In all the play modes, Tigger and Pooh will gently tell the child if he/she has answered correctly. If the child answers correctly, Pooh or Tigger will respond with an enthusiastic congratulations such as "That's right!" or "Very good!" If the child answers incorrectly, Tigger or Pooh will provide an encouraging response such as "Oopsie, try again," or "Almost, try again." The child will be given several attempts to correctly respond. At that point Pooh will move on to another question or prompt. If the child does not respond to a prompt with a button press or by moving the teeter totter, Pooh will wait for a short period of time and then repeat the prompt. If there is still no action taken by the child, then Pooh will repeat the prompt again. At that point, if the child does not respond, Pooh will ask a new question or provide a new prompt.

3

★ TURNING THE UNIT OFF

Pooh Alphabet Teeter Totter has an automatic shut-off feature to help prolong battery life. After a brief period of inactivity, Pooh prompts your child for a response. If your child doesn't respond by pressing a button, Pooh will repeat the prompt or ask again. If there is still no activity, the unit will then automatically turn itself off. Pressing the "ON" button can then restart the toy.

NOTE: Your child needs to wait until after Pooh and Tigger have stopped talking before pressing a letter button. Presses made while the characters are speaking will not register.

★ WHEN TO REPLACE BATTERIES

Change the batteries when the voices and sounds are garbled or seem to be slowing down during play, or when pressing a button or moving the Teeter Totter does not trigger a response from the unit.

To ensure proper function:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

★ TAKING CARE OF THE POOH ALPHABET TEETER TOTTER

To protect your Pooh Alphabet Teeter Totter follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe gently with a barely damp, soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.
- Do not press the liquid crystal display and avoid heavy shock or the display may fail.

4

★ 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damage from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the retailer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$17.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach or warranty with respect to the product. All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Ltd. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MAINTENANCE OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, also the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

TIGER
ELECTRONICS, LTD.



©, TM, & © 1999 Tiger Electronics, Ltd.
All rights reserved. © Disney
980 Woodlands Parkway, Vernon Hills, IL 60061. Based on the "Winnie the Pooh" works. 87151000HWTI-01
Illinois 60061, USA Copyright A.A. Milne and E.H. Shepard PRINTED IN CHINA



OPEN SIZE: 5 1/2"(H) X 12"(W)
FOLD TO: 5 1/2"(H) X 4"(W)