



# Talking Phone




Button cell batteries included. 3 "AA" batteries and Phillips® screwdriver needed for battery replacement (not included).

**HOW TO OPERATE:** The Sesame Street Talking Phone features 6 different character voices: **Big Bird, Ernie, Elmo, Oscar, Prairie Dawn and the Honkers!**

**Note to Parent:** Only the last number of each 3-digit phone number actually activates the character voice. The key pad consists of these 6 activators and 4 buttons that do not cause a response.

Just press the 3 digits of the character's phone number to hear the voice of any of the 6 characters.


The attached, lift-up receiver handset adds to the fun!

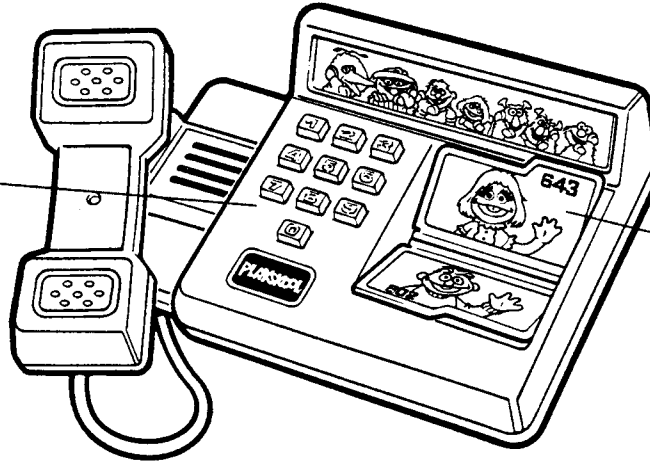


Each character has its own 3-digit phone number; the numbers are listed on the colorful directory cards located to the right of the key pad.

## HOW TO REPLACE BATTERIES:


The Sesame Street Talking Phone comes with button cell batteries already installed. When they are exhausted, replace them with 3 "AA" batteries. To install new batteries, turn phone upside down to find the battery compartment on bottom.

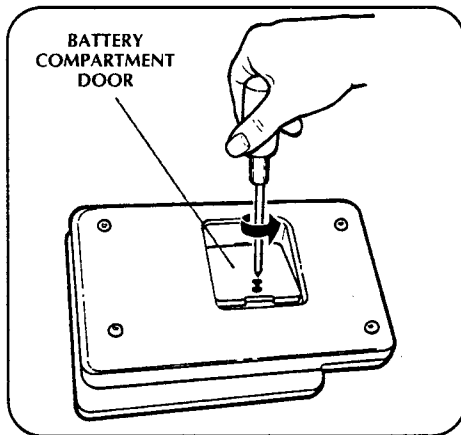

1. Using a Phillips® screwdriver, loosen screw on battery compartment and remove door.

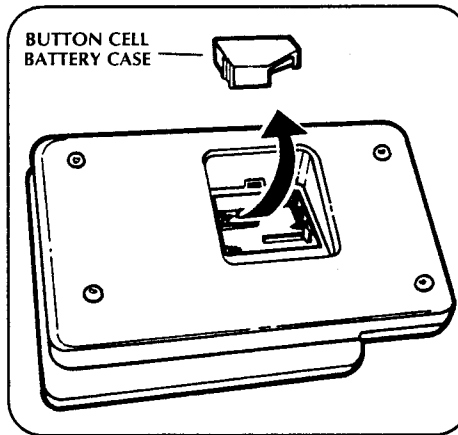

2. Pull out the case that holds the button cell batteries and discard immediately.

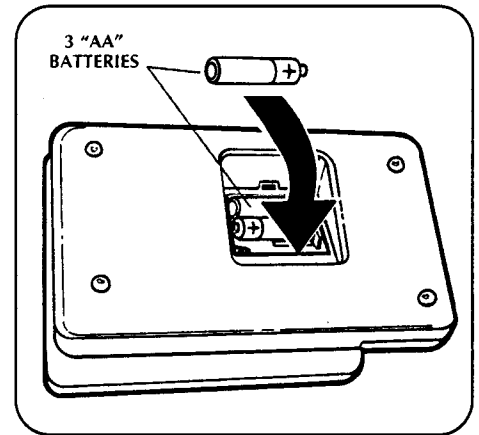

3. Insert 3 "AA" batteries (alkaline recommended) as shown. Replace door on battery compartment and re-tighten screw.

### CAUTION:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. When installing replacement batteries make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
3. Never mix old batteries with new batteries, or standard (carbon-zinc) with alkaline batteries.
4. Batteries may explode or leak if recharged, disassembled or heated.
5. Remove batteries if product is stored for a long period of time.

©1994 Children's Television Workshop. Jim Henson's Sesame Street Muppet characters ©1994 Jim Henson Productions, Inc. Sesame Street and the Sesame Street sign are trademarks and service marks of the Children's Television Workshop.

This product was developed by Playskool in cooperation with Children's Television Workshop, producers of SESAME STREET. Workshop revenues from this product will be used to help support CTW educational projects.

©1994 Playskool, Inc., Pawtucket, RI 02862 USA, a subsidiary of Hasbro, Inc. All Rights Reserved.  
 ®denotes Reg. U.S. Pat. & TM Office. **MADE IN CHINA.**

542 P/N 45099600



Questions? Call: **1-800-PLAYSKL**

For future reference, our toll-free consumer service number is also located on this product.