 


How to Use Playskool™ Teach-Me™ Watch


Learning About Time—
A Parent's Guide

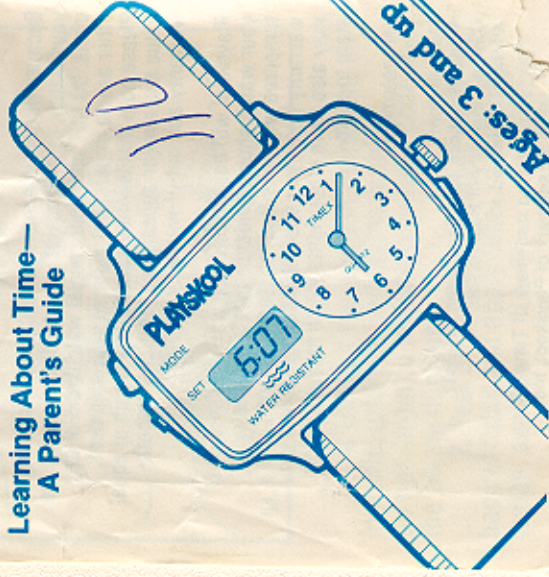

Ages: 3 and up

Teach your child how to tell time two ways with your new TIMEX Teach-Me Watch! Here's how it works:

Setting the Analog (clockface) time:

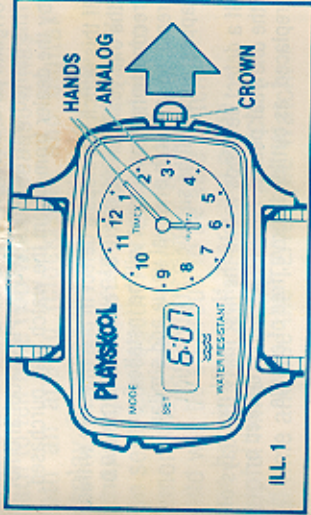

ILL. 1


1. To set, pull the crown OUT and rotate it until the hands show the correct hour and minute. (ILL. 1) Push the crown IN to set the watch.

Note: The digital display is set and operated independently of the analog display.

Battery - standard #397

Operation of the LCD Modes:

2. The digital portion of your watch has three modes with five functions: hour, minutes, seconds, month and date. The LCD

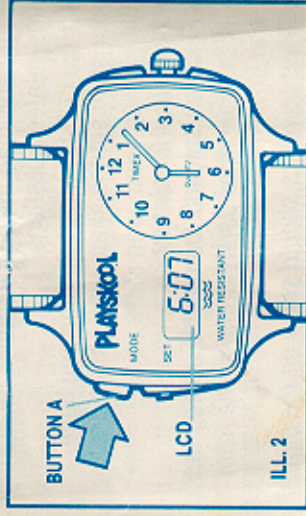


ILL. 2

shows the hours and minutes unless activated to show another function. Press button A once to display the date. It will return to the hours and minutes after a few seconds. Press button A again to display the seconds. It will stay in that mode until you again press button A and return it to the hour and minute reading. (ILL. 2)

How to set the LCD:

Note: Button B is used for changing the different modes, and must be pressed with a blunt object like a ball point pen. We recommend this procedure be done by an

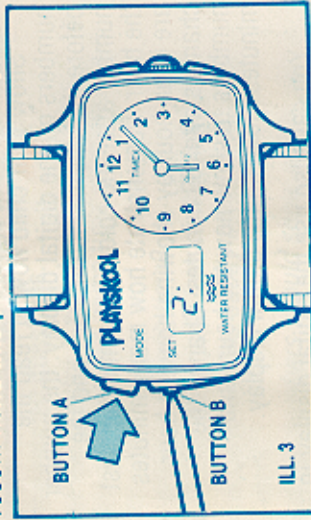


adult.

3. To set the calendar portion of your watch, press button B twice with a blunt object and the month will appear. Press button A continuously until you reach the correct month. Press button B again to show the date. Continue pressing button A until you reach the correct date. (ILL. 3)

4. After you've set the calendar, next set the time by pressing button B.

The hour and an A (AM) or P (PM) will appear. Press button A continuously until you reach the correct hour. Press button B,

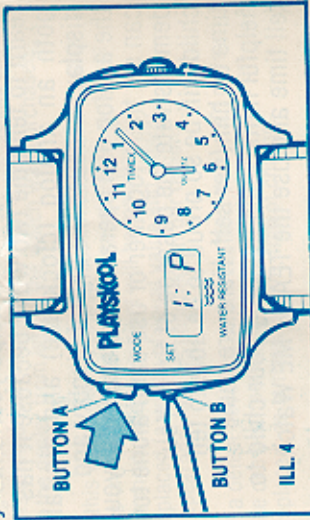


the minutes will appear. Press button A until you reach the correct minute. (ILL. 4)

When you've located all the correct readouts as described above, push button B to set the watch. (ILL.5) **LCD colon is not designed to flash.**

To make the watch hands and hour markers glow in the dark, expose the watch to any light for several minutes. Hands and

hour markers will glow for approximately 30 minutes, then begin to fade. To recharge, expose to light again.


Washing instructions for watch strap:

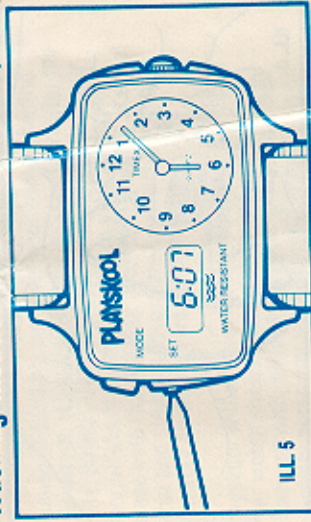

Remove strap from watch! Machine wash in warm water and mild detergent. **DO NOT USE BLEACH.** It is recommended that you wash the strap in a tightly closed pillow case or lingerie bag to avoid the velcro closure on the strap from attaching to other garments. Tumble dry on medium heat setting.

How to apply adhesive label:

Note: Please write neatly and carefully as writing cannot be erased or rubbed off.

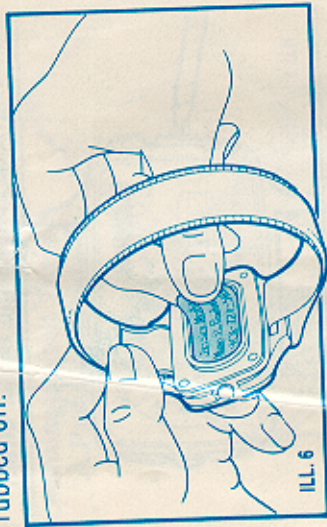

1. Using a regular ball point pen, fill in name, address and phone number. Do not forget to include your area code in the phone number.

2. Peel off protective paper from back of label and apply label to back of watch, as shown. (ILL. 6)

Teach Me Watch Parents Guide

Dear Parent:

Learning to tell time can be lots of fun for both you and your child. Playskool's TIMEX TEACH ME Watch helps your child learn to tell time two ways because it has both an analog (clockface) and digital display. Because the digital display and the analog dial operate independently, you can set them together or use each alone to demonstrate the passage of time. Your child will be so proud to be able to tell time by him/her self. Here are some helpful hints when teaching your child to tell time and use the TEACH ME Watch:

- *What time is it when the big hand is on the 12 and the little hand is on the 6?*

Be sure to explain what the hands on the analog dial mean: The big hand shows the minutes and the small hand shows the hour. Explain to your child how each number on the dial represents five minutes. Move the hands around the watch face to

show your child how hours and minutes pass on the analog dial.

- *What does it mean when the LCD (digital display) says 6:05?*

Show your child how to read the numbers on the digital display: the number before the colon (:) is the hour and the number after the colon is the minutes past the hour. Demonstrate how many minutes are in an hour by showing how the hour changes after 59 minutes. Change the numbers to show how the hours and minutes move on the digital display.

You can also use the digital display in the calendar mode to teach your child the number associated with each month. For example, what is the number of your birth month? By switching to the seconds mode, your child can learn simple counting and number recognition as well as gain an understanding of how seconds make up minutes and hours.

• *Play time-telling games with your child.*

What better way to teach your child to tell time than to do what he/she enjoys most—playing games! Help your child locate and read the correct times by asking time-related questions.

Set the LCD for a certain time and have your child set the same time on the analog dial.

- *When is it lunch time?*
- *Find quarter past four on the analog dial.*
- *What time does daddy come home from work?*
- *What numbers should show on the digital display when it's half past 7?*
- *What time does your favorite television program start?*
- *When is bedtime?*

Be creative and make up some of your own time-telling games to help your child learn this basic skill the easy and fun way, with the Playskool's TIMEX TEACH-ME WATCH.

Limited Warranty

This TIMEX TEACH-ME WATCH by Playskool (but not any battery, crystal, band or strap) is warranted to the owner for a period of one year from the date of original purchase against defects in manufacture. This limited warranty is given by Playskool and not by the dealer from whom the watch was purchased.

If this watch develops a defect in manufacture within the one year period, it will be repaired (i.e. a new or reconditioned movement will be installed) or replaced (a watch of equal value and similar appearance will be supplied) at our option.

If a defect develops within the first thirty (30) days of the one year period, the watch will be repaired or replaced, as outlined above, free of charge.

If a defect develops after the first thirty (30) days of the one year period, the watch will be repaired or replaced, as outlined above, for a charge of \$4.00 to cover the cost of postage, service and handling.

You must provide proof of purchase and date of purchase along with a check or money order for four dollars (if past the 30-day free of charge period) payable to Playskool. Mail your name, address and daytime phone number along with the proof of

purchase, date of purchase, check or money order, if applicable, and defective watch to:

PLAYSKOOL
Consumer Services
443 Shaker Road
East Longmeadow, MA 01028

Because of possible loss, we recommend insuring your watch, return receipt requested when using the mails. DO NOT include a special watchband or any other article of personal value in your shipment. Please note that we may substitute a watch of equal value and similar appearance for yours on both warranty and out-of-warranty repairs.

Playskool will not provide any warranty service if your watch shows evidence that it has been tampered with, misused, abused or altered. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

PN 178697-00B

110

Made in Korea

©1986 Playskool, Inc., Pawtucket, RI 02862

USA, a subsidiary of Hasbro, Inc.

All Rights Reserved.

TEACH-ME is a registered trademark of Timex Corp.
TIMEX is a trademark of Playskool, Inc.