

PLAYSKOOL

Age: 1 +
5564 Asst.

teletubbies™

Instructions for:

Talking Tinky Winky, Talking Dipsy,

 
Talking Laa-Laa, or Talking Po

Thank you for purchasing this Playskool toy!

Please keep these instructions for future use.

**Talking
Tinky Winky™**

**Talking
Dipsy™**

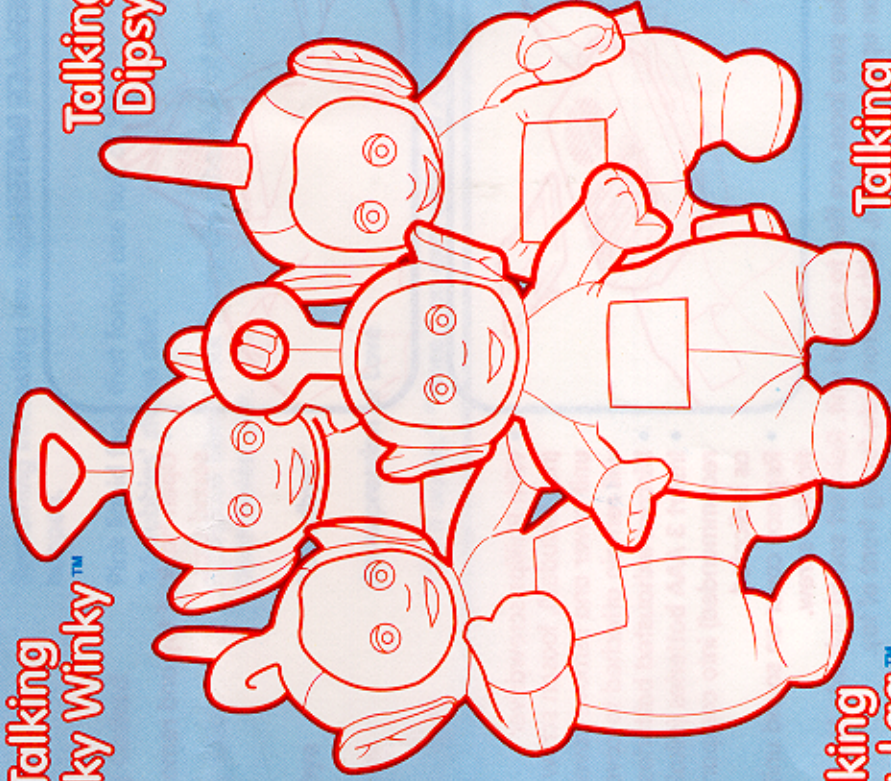


**Talking
Laa-Laa™**


**Talking
Po™**

TO ACTIVATE

 
This Teletubby is a soft, cuddly friend who says special phrases. To hear a phrase, simply press your Teletubby's tummy!

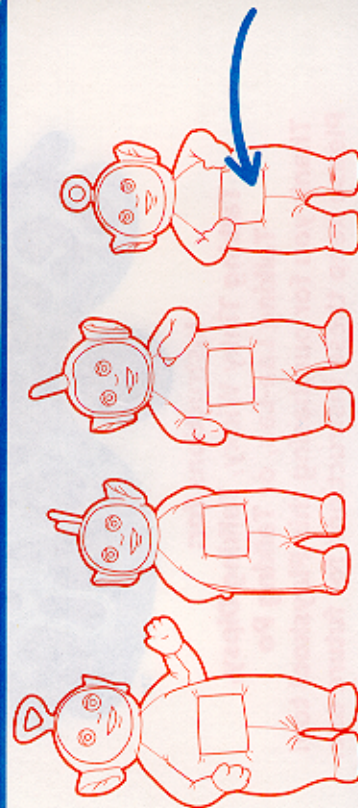

TO REPLACE BATTERIES

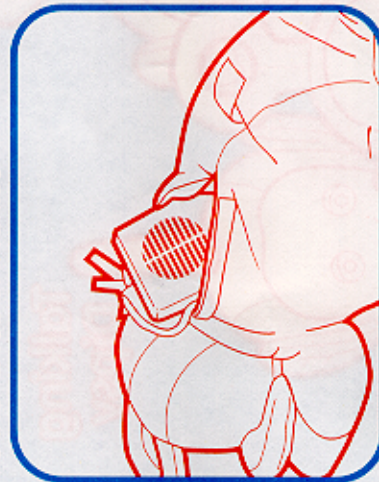 

 - Open back of toy and remove sound unit.

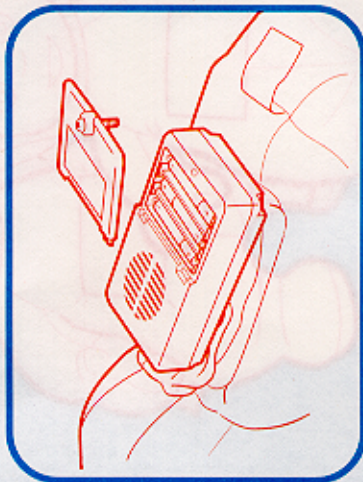

- With Phillips screwdriver (not included), loosen screw in sound unit cover and remove cover (screw will remain attached to cover).
- Discard exhausted batteries.
- Insert 3 AAA batteries (alkaline recommended) into compartment as indicated.
- Replace cover on sound unit and tighten screw.
- Make sure laces are tied to sound unit. Reinsert sound unit into toy (in an upright position), with button side facing front of toy.
- After reinserting the sound unit, avoid exposing toy to excessive heat or submersion in water, which could cause damage.

Teletubbies' Special Songs

Po's song
"Fi-dit fi-dit fi-dit, mar, mar, man..." Po sings her song in Cantonese and it means "Faster, faster, faster, slowly, slowly, slowly."

Laa-Laa's song
"Laa-laa-li-la, laa-li-laa-li-laa..." Laa-Laa likes her name so much, she has made a special song out of it.

Dipsy's song
"Bup-a-tum bup-a-tum..." Dipsy's song is made up of silly sounds that are fun to sing.

Tinky Winky's song
"Pinkle winkle Tinky Winky..." Tinky Winky loves to sing his song when he goes for walks.

Teletubbies' Favorite Phrases

Eh-oh!
Hello

Uh-oh!
Something interesting has happened or is about to happen.

Tubby Custard
Pink liquid food that forms one half of the Teletubbies' staple diet.

Tubby Toast
Nutritious biscuit that forms the other half of the Teletubbies' diet.

Bye-bye
"Goodbye"

Big Hug
An expression of Love

Again-again
"Do it again," "More," an expression of repetition

TO CLEAN

- Machine washable and dryer safe when sound unit is removed.
- To wash, open back of toy, untie laces from sound unit, and remove sound unit.
- Place toy in pillow case and tie end closed. Machine wash separately - on gentle cycle, cold water, mild detergent. Do not bleach. Tumble dry promptly in pillow case - on low heat setting. Squeeze toy to remove excess water before drying.
- Retie laces to sound unit by making a shoe knot - double-knot the bow to further prevent child tampering.
- Reinsert sound unit into toy (in an upright position), with button side facing front of toy.

IF THERE'S A PROBLEM...

- If voice slows down or becomes scratchy, change the batteries.
- If toy doesn't work after batteries are replaced, make sure batteries are inserted correctly.
- If you have any questions concerning the operation, care or repair of this product, please call this toll-free number:
1-800-PLAYSKL (1-800-752-9755).

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TELETUBBIES' characters and logo: TM & © 1998 Ragdoll Productions (UK) Ltd. and are used with permission. All rights reserved. Licensed by The itty bitty Entertainment Company.

© 1998 Hasbro Canada Inc., P.O. Box 267,
Station A, Longueuil, Québec J4H 3X6

PN 90797200 11/98



Questions?
1-800-PLAYSKL