

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SURFACE WASHABLE ONLY.

FILLING: ALL NEW MATERIALS: 100% POLYESTER FIBER
REG. NO. PA-282

 
Product and colors may vary.
TELETUBBIES characters and logo: TM & © 1999 Ragdoll Productions (UK) Ltd. and are used with permission. All rights reserved.
Licensed by The Itsy Bitsy Entertainment Company.
(c) 1999 and © 1999 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

MADE IN CHINA.

P/N 4881300000




Age 18 Mos. & Up
5961/5748 Asst.

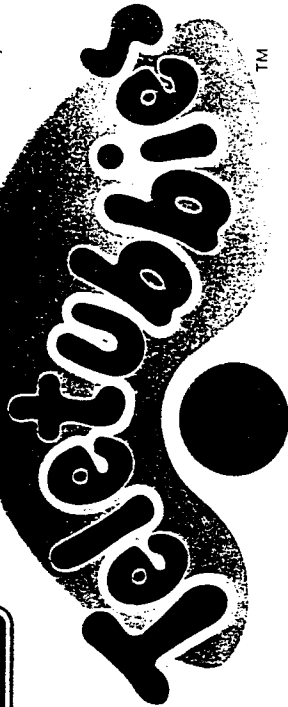


Munch and Slurp Laa-LaaTM

Includes 3 "AA" batteries. Phillips screwdriver (not included) required to replace batteries.

 Adults Note: Remove attachment ties from toy before giving toy to child.

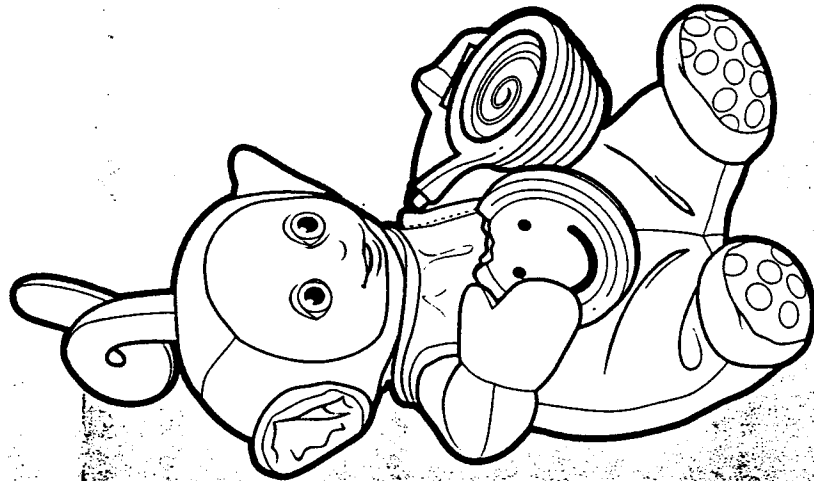

TO PLAY

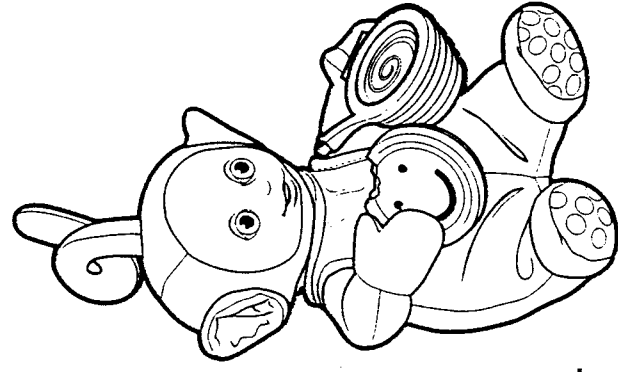 


- Place the tubby toast against Laa-Laa's mouth – she makes munching sounds ("munch munch, munch munch")!
 - Place the tubby custard bowl's straw against Laa-Laa's mouth – she makes slurping sounds ("slurp slurp, slurp slurp")!
- (Note: The sounds stop when you take the tubby toast or tubby custard away from Laa-Laa's mouth or when about 20 seconds has elapsed).

- After you take the tubby toast or tubby custard away, Laa-Laa moves her head back and forth and says one of these 4 sayings:
 - "Tubby custard, tubby custard...giggle...parp!" ("Parp" is the noise made by Teletubbies when they sit, fall over or bump into each other.)
 - "Again again, again...giggle!"
 - "Tubby toast, tubby toast...giggle...parp!"
 - "All gone...Thank you...giggle!"

TO REPLACE BATTERIES:

Open flap on bottom of toy. Using a Phillips screwdriver, loosen screw in mechanism door (screw remains attached to door). Remove door. Remove and discard the batteries. Insert 3 fresh alkaline "AA" batteries into mechanism. Replace door and tighten screw with Phillips screwdriver. Close flap.

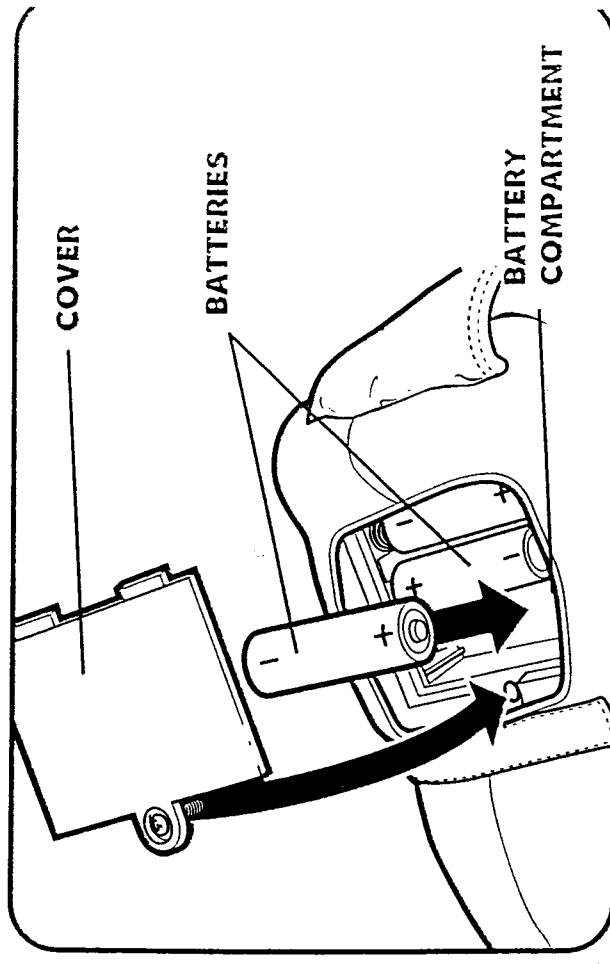

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.