

Talking Phone Instructions

Ages 2-6

Dear Parent,

To obtain maximum satisfaction from this product, please read the instructions carefully and follow the directions.

If the product does not work as intended, please make sure that the batteries are in the correct position and the contacts are pressed firmly against the battery.


Due to some size variations among the different brands of batteries, you may find it necessary to pry the contacts slightly outward with a screwdriver to ensure a good connection.

Thank you for purchasing this Playskool product. We hope that you and your child will enjoy it.

TO INSERT THE BATTERY


1

Turn phone over. Remove screw on battery compartment cover with Phillips® head screwdriver. Lift off the cover.

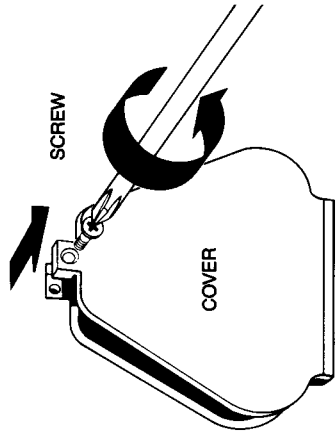

2


Insert a new, D-size battery into the battery compartment, placing the positive and negative poles in the positions marked. If you hear a "whirring" sound, you've placed the battery into the compartment incorrectly — simply reverse the position.

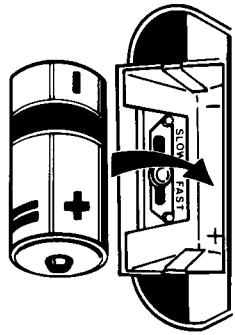

TO ATTACH THE RECEIVER TO THE PHONE


4

Dip open end of tubing into water. Fit the open end of tubing over pin on receiver. Make sure end of tubing is pushed onto pin as far as possible.

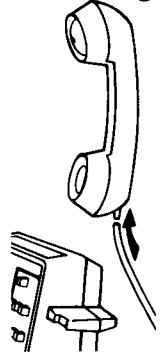

3

Replace cover and replace screw.

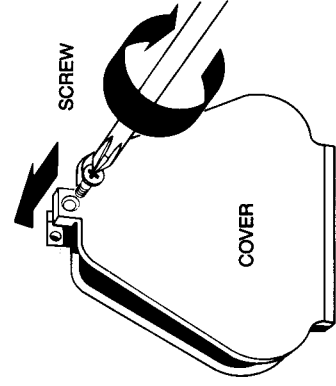


592

TO OPERATE THE PHONE

5


Turn the knob so that the character you would like to call appears on the viewing screen.

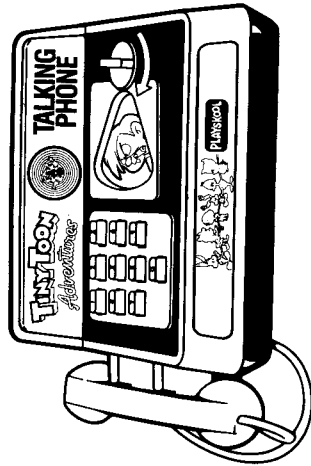

6

Lift the receiver and press the numbers that appear on the screen. Now listen and talk to your Tiny Toon Adventures friend!

NOTE: If the telephone does not work properly, please make sure that the battery is in the correct position and the contacts are pressed firmly against the battery. You may find it necessary to pry the contacts slightly outward with a screwdriver.

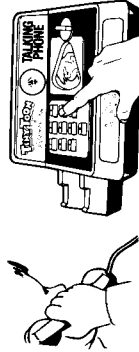

7


These are your friends' telephone numbers:

BUSTER BUNNY™	830
BABS BUNNY™	359
HAMTON™	537
MONTANA MAX™	136
ELMYRA™	154
PLUCKY DUCK™	582

8

You may find that the message is spoken too quickly or too slowly. To adjust the speed of the voice track, open the battery compartment and move the voice speed control knob toward the "slow" or "fast" position until the voice track reaches a normal talking speed.

As the battery runs down and the voice track begins to drag, move the voice speed control knob toward the "fast" position.

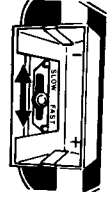

9

Peel and apply label as shown.

