


BEAST  
MACHINES

ELECTRONIC

## STEP 1


To open wings completely, unfold bat wing sections and pull arms forward as shown. Insert tabs on wings into slots on shoulder blades.

NOTE: Some parts are made to detach if excessive force is applied and are designed to be re-attached if separation does occur. Adult supervision may be necessary for younger children.

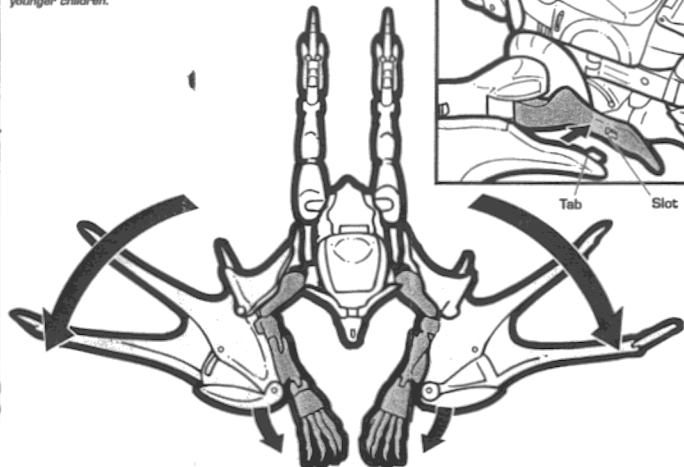


## STEP 2 ATTACK MODE

A. Pull launcher up out of bat's back. Button will extend out as launcher is pulled out and lights will come on.  
B. Rotate launcher around and raise lid. Load the three disks by lining up notch on disks with tab in launcher. Close lid.  
C. Push button to fire disks.

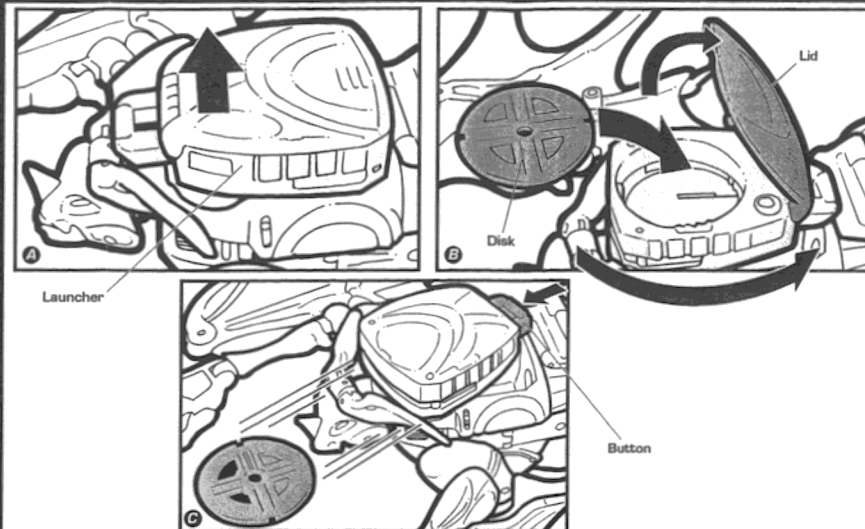


## STEP 3

Stand bat up as shown. Rotate arms and wings down. Separate tabs from shoulder blades as shown. Locate Spark Crystal on front panel to identify true allegiance.

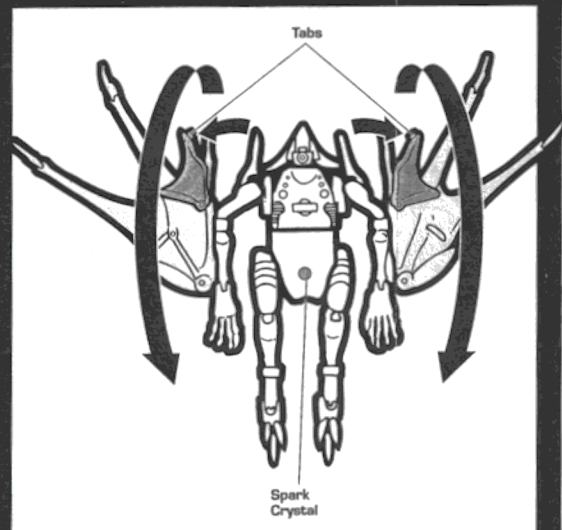


## STEP 4

Rotate wings back up as shown. Rotate bat head up.

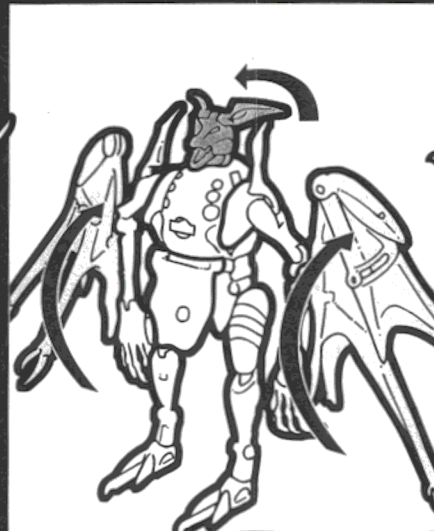

## STEP 5 CLAW ATTACK MODE


Turn wings forward. Position wing tips as shown to allow bat to stand on wings. Raise legs up into attack position.

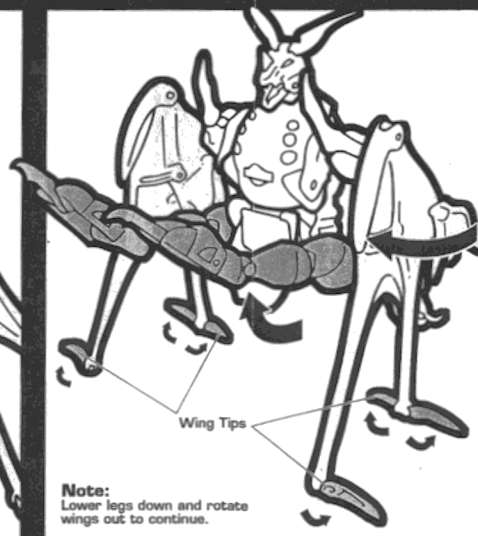

Note:  
Lower legs down and rotate wings out to continue.

## STEP 6


Rotate shoulder panels forward as shown. Rotate bat head up. Fold claw down and pull support out of foot. Position support and claw as shown.

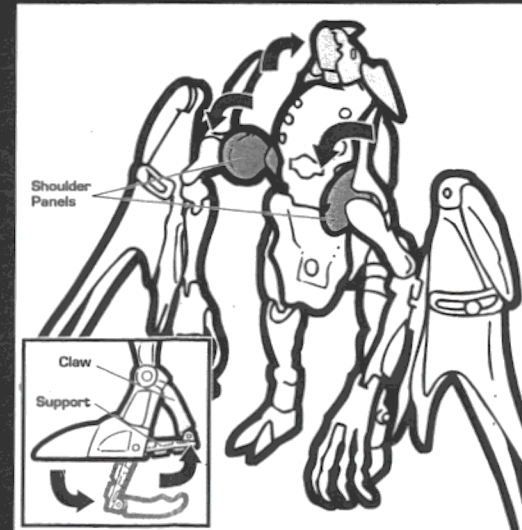




### STEP 7

Raise side panels and legs up as shown. Rotate legs and side panels around and snap them together to form robot hips and hide bat head.

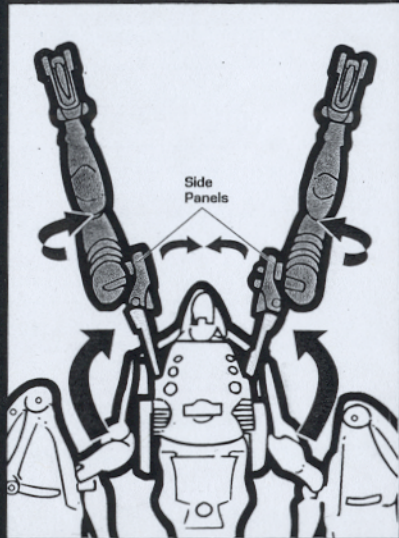


### STEP 8

Turn figure over. Rotate arm panels forward until pin on shoulder panels snap into upper hole on bat body.

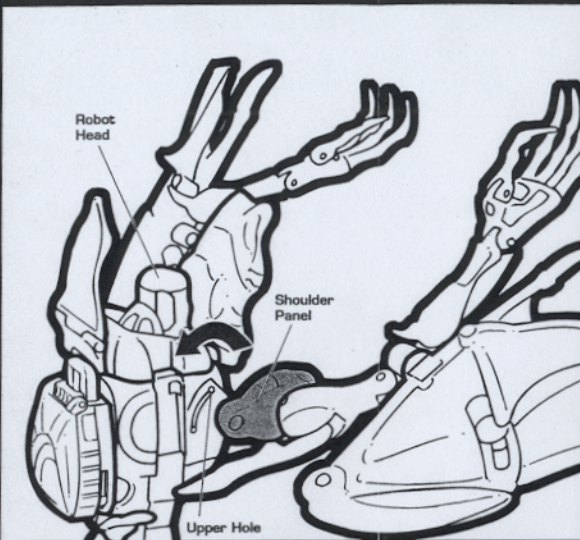


### STEP 9

Rotate top section with robot head around as shown. Rotate launcher up and into chest as shown. Extend lower legs down.

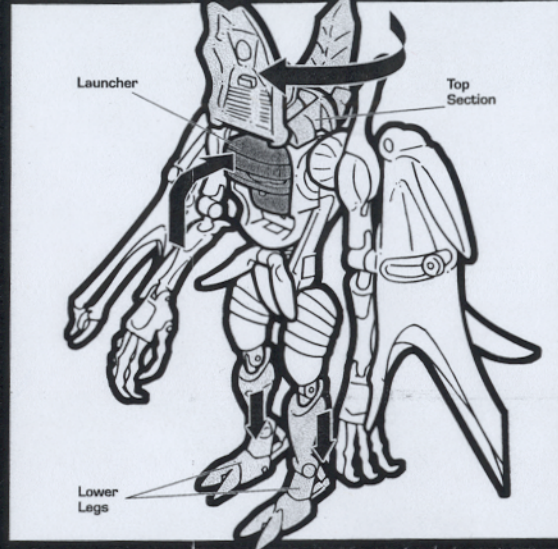


### STEP 10 ROBOT MODE

Lower front and back panels to complete conversion into robot.

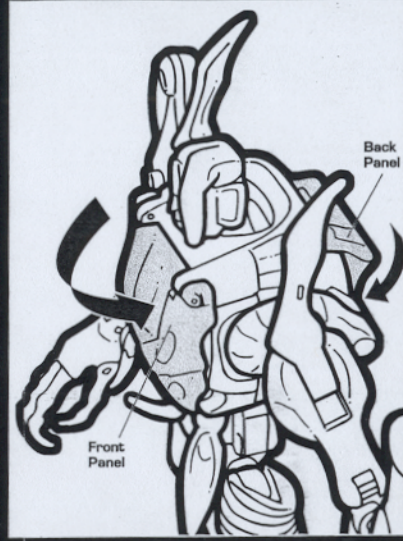



### STEP 11

Raise front and back panels up again. Rotate launcher out of robot chest. Open launcher lid and insert disks with notch aligned to tab. Close launcher lid.

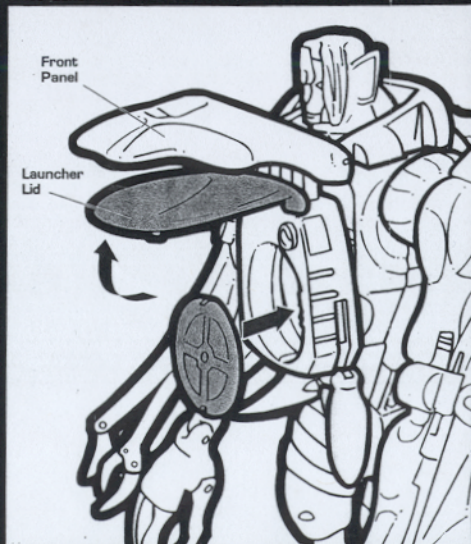

### STEP 12 ROBOT ATTACK MODE


Rotate launcher up and back into chest. Press button on robot's back to fire disks.

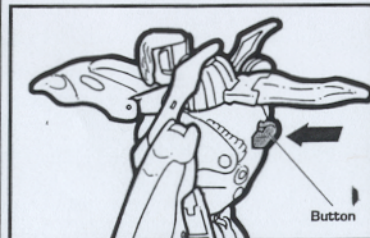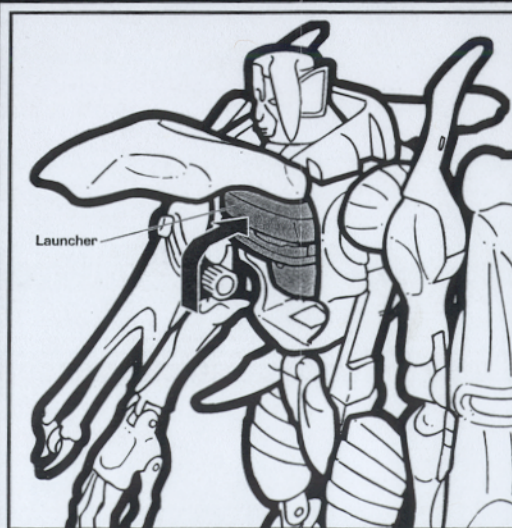

**Note:** Reverse the order of the instructions to convert back into bat.

### BATTERY REPLACEMENT

Pull launcher forward out of chest. Locate battery door on bottom of launcher. Loosen screws and remove battery door. Replace batteries as needed.

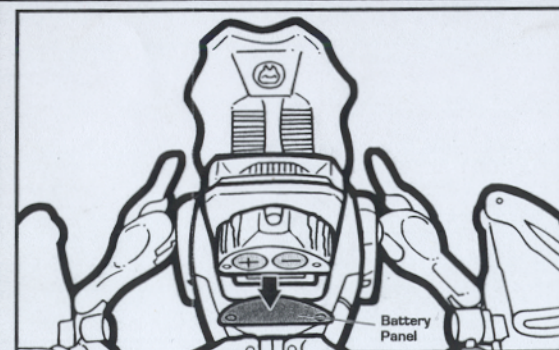

**CAUTION:** 1. As with all small batteries, the batteries used (included) with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. 2. Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions. 3. Do not mix old and new batteries. 4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.



Made in China

©2000 HASBRO, INC.  
Pawtucket, Rhode Island 02862  
Manufactured under license from  
Takara Co., Ltd.  
All Rights Reserved.

569835.0000