



Ages 12 mos. & Up



57231 Asst.

Tummy Glow Teletubby™

Requires 2 "AA" batteries (not included).

Phillips head screwdriver (not included) required for battery insertion.

 
PR3 bulb needed for replacement.

INSTRUCTIONS

Insert the batteries:

1. Separate closure in back of character. Lift out battery box.


Using a phillips head screwdriver, loosen screw at base of battery box. Lift cover. Insert 2 fresh "AA" batteries. Replace cover and tighten screw.

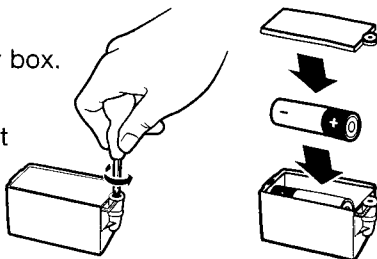

2. Holding battery box vertically, insert it into character so that bulb fits into the space in the casing unit.


Close back of character.

 Press down on tummy to activate light-up feature.

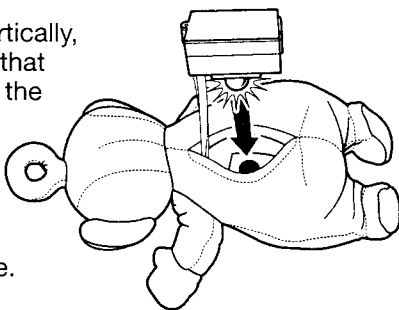


To replace bulb:

 1. Remove screws from outer bulb cover and lift cover off.

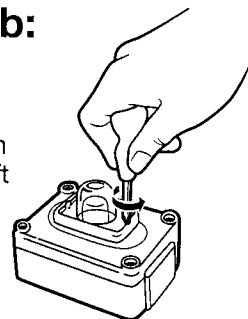

2. Turn and lift inner bulb cover and remove exhausted bulb. Replace with a fresh PR3 bulb. Insert bulb and turn to secure bulb in place.

 Replace bulb cover and tighten screws.

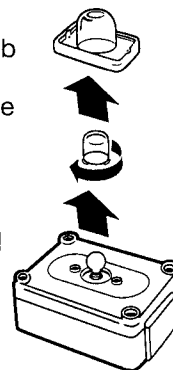

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon- zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

SURFACE WASHABLE ONLY

Product and colors may vary.

TELETUBBIES characters and logo: TM & © 1998 Ragdoll Productions (UK) Ltd. and are used with permission. All rights reserved. Licensed by The itsy bitsy Entertainment Company.

® & © 1998 Hasbro, Inc., Pawtucket, RI 02862 USA.

® denotes Reg. U.S. Pat. & TM Office

MADE IN CHINA C-060A

PN 47290500



The itsy bitsy Entertainment Company

...made from children's dreams!