

## FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

### Your Baby's Hearing Checklist

Provided by  
National Campaign for Hearing Health  
1050 17th Street NW, Suite 701  
Washington, DC 20036



Talk to your doctor if you answer **NO** to any of these questions:

- | YES                      | NO                       | Birth to 3 Months                                  |
|--------------------------|--------------------------|--|
| <input type="checkbox"/> | <input type="checkbox"/> | Reacts to loud sounds                              |
| <input type="checkbox"/> | <input type="checkbox"/> | Is soothed by your voice                           |
| <input type="checkbox"/> | <input type="checkbox"/> | Turns head to you when you speak                   |
| <input type="checkbox"/> | <input type="checkbox"/> | Seems to know your voice and quiets down if crying |

- | YES                      | NO                       | 3 to 6 Months                                  |
|--------------------------|--------------------------|--|
| <input type="checkbox"/> | <input type="checkbox"/> | Looks upward or turns toward a new sound       |
| <input type="checkbox"/> | <input type="checkbox"/> | Responds to "no" and changes in tone of voice  |
| <input type="checkbox"/> | <input type="checkbox"/> | Enjoys rattles and other toys that make sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Becomes scared by a loud voice                 |

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at **1.800.535.3323** or visit [www.hearinghealth.net](http://www.hearinghealth.net) for more information.

Based on NIDCD/NIH infant hearing checklist.




BIRTH +  
6584



# Tummy Time Picture Show™

**Thank you for buying this Playskool® product!**

**Requires 3 "D" alkaline batteries (not included). Phillips screwdriver (not included) required for battery replacement.**

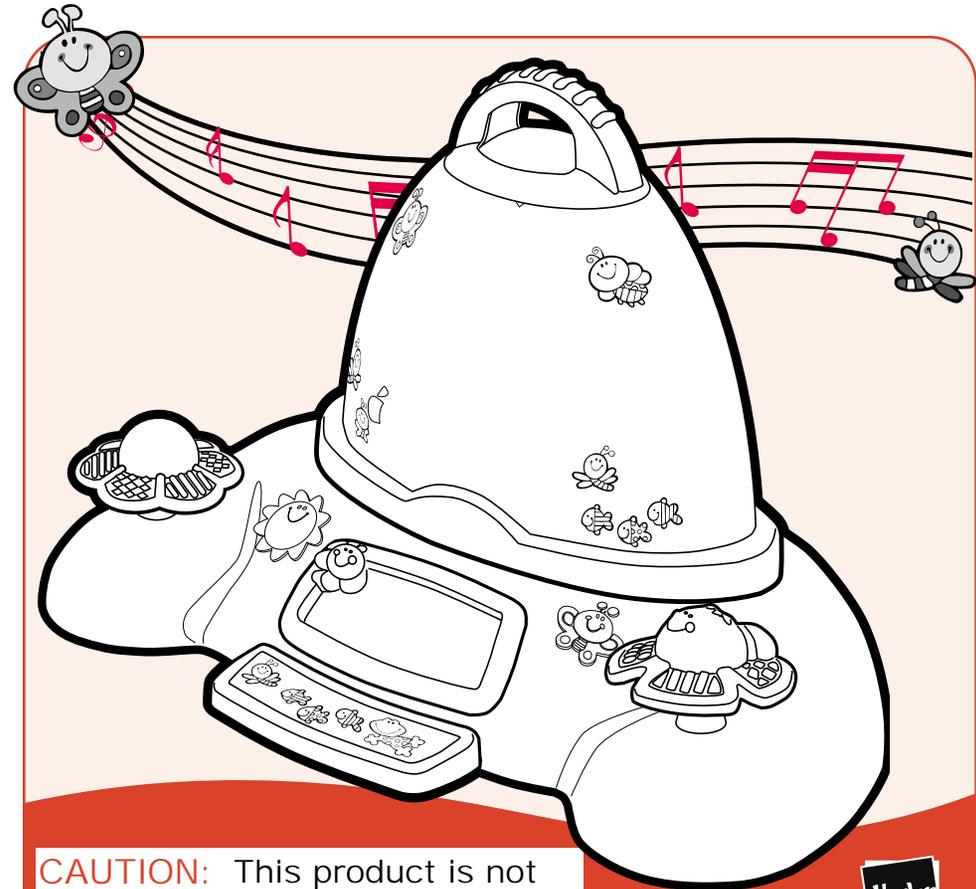


**CAUTION:** This product is not intended to be placed in the crib.



## TO INSERT BATTERIES

Use a Phillips screwdriver to loosen 3 screws in battery compartment door (screws remain attached to door). Remove door. Insert 3 "D" alkaline batteries. Replace door and tighten screws.

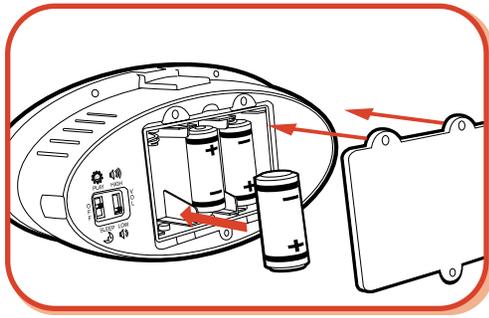

## ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.



## TO PLAY

### Playtime Mode


Encourages the youngest babies to lift up their heads and peek at the fascinating light show accompanied by 8 lively songs.

1. Slide the switch on the underside of base to the PLAY Mode (sun).
2. Snap the lamp into base.
3. Press the bar to start the fun: Captivating images scroll by on the glowing lamp as upbeat music plays. While the music is playing, you can change songs by pressing the bar.
4. When baby bats the flower or butterfly, he or she will be rewarded with sparkling lights and delightful sound effects.
5. If no buttons are pushed, the lights and music will automatically shut off after the current song has finished playing.

### Switch



### Lamp into Base

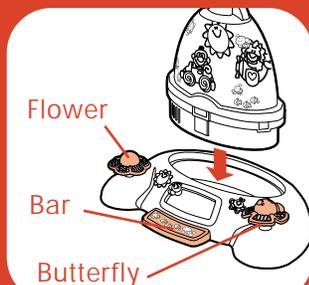

## Sleeptime Mode


At sleeptime, this toy can be used as a tabletop light show that plays 4 soothing lullabies.

1. Slide switch on underside of base to SLEEP Mode (moon).
2. Remove lamp from base by pulling up handle while firmly holding down base. Place it on a bureau or tabletop at sleeptime.
3. Press the pink center button to activate the toy.
4. To turn the toy off while it is playing, simply press the center button again.
5. Lights and music will automatically shut off after approximately 10 minutes.

### Note:

- Adjust sound level to HIGH or LOW using the volume switch on the underside of base.
- When storing the toy, slide the On/Off switch to OFF to prevent accidental activation.

### Switch

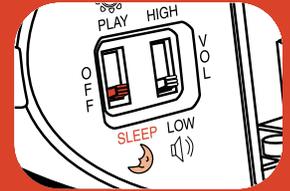

### Lamp out of Base



## TO REPLACE THE LIGHT BULB

Before changing the light bulb, be sure the problem isn't the batteries. **Note:** If the music is still playing, but the light is out, the light bulb will need to be changed.

Replace burnt-out bulb with a KPR113 bulb. **Note:** A PR3 bulb may also be used, but will have a far shorter life.

1. Loosen 3 screws in battery compartment door (screws remain attached to door). Remove door.
2. Remove batteries to access bulb holder screws. Remove 2 screws from bulb holder bottom.
3. Tip unit up so that bulb holder assembly slides out.
4. Turn clear cap and remove from bulb holder. Fit new bulb into holder and refasten cap.
5. Reinsert bulb holder assembly into unit, tighten bulb holder screws, reinsert batteries, refit battery compartment door and tighten screws.

