 



Thank you for purchasing Playskool's Twinkle Time Nursery Rhymes! Please save this instruction sheet for future reference. If you have any questions, comments or concerns about this product, please call Playskool toll-free at 1-800-PLAYSKL.

TO ATTACH TOY TO CRIB


NOTE: MAKE SURE MATTRESS IS FULLY LOWERED AND SIDES ARE COMPLETELY RAISED BEFORE ATTACHING.

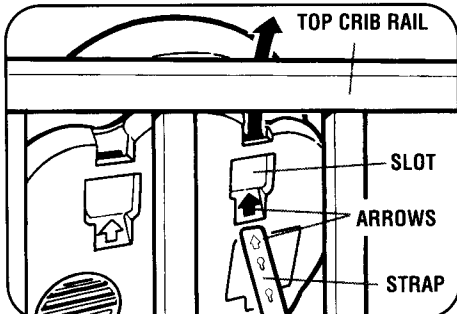

 1. Position toy inside crib near top rail. Line up arrow on strap with arrow on one of the slots on upper back of toy. Slide strap through slot and pull all the way up until strap end rests in recess.

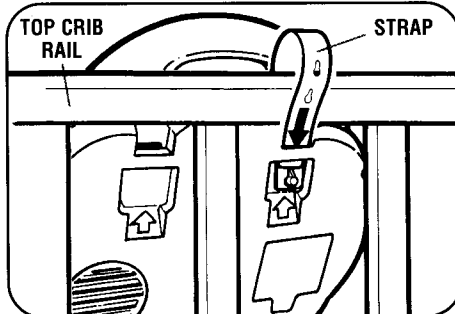

 2. Wrap strap around top crib rail, and back down through slot until strap is holding top of toy firmly onto rail.

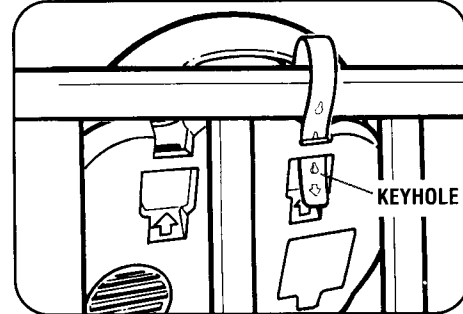


3. Press closest strap keyhole onto raised tab as shown. Repeat process for other strap.

TO PLAY THE SONGS

Simply press the button, and Twinkle Time Nursery Rhymes plays one of nine songs, and the stars twinkle.

Songs include:

 Hey Diddle Diddle
Ring Around the Rosie
Twinkle Twinkle
Pop Goes the Weasel
Rock-A-Bye Baby
Farmer in the Dell
Three Blind Mice
Row Row Row Your Boat
All Around the Mulberry Bush

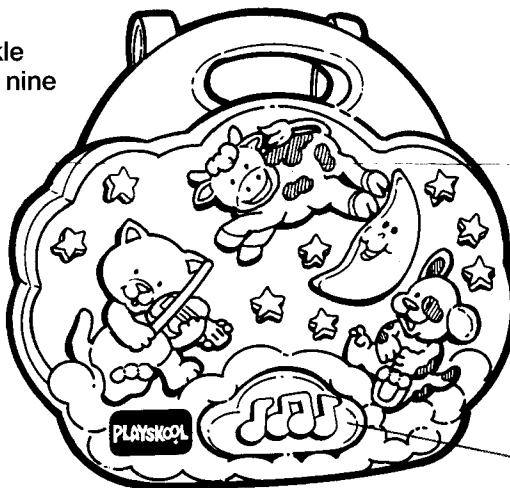


The songs are arranged in a cycle and will always play in the same order.

If the button is pressed while a song is already playing, that song will immediately stop and the next song will begin.


BUTTON

TO REPLACE BATTERIES

 Note: Batteries are included in the toy. When the batteries are exhausted, replace them as follows:

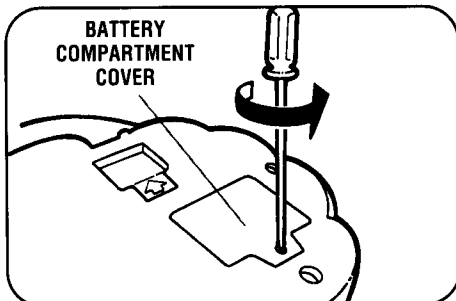

 1. Loosen screw on battery compartment cover, and remove cover.

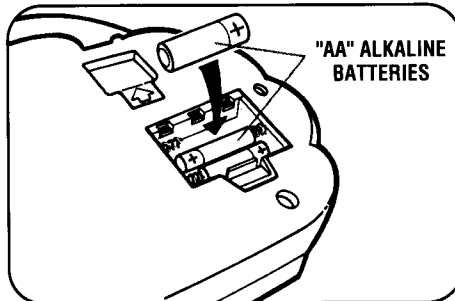

2. Remove and discard the exhausted batteries. Place 3 fresh "AA" alkaline batteries into compartment as shown.
3. Replace battery compartment cover, and retighten screw.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if stored for a long period of time.



Questions? Call: **1-800-PLAYSKL**™

For future reference, our toll-free consumer service number is also located on this product.