



Twirlin' Copter™

Instructions


Ages 3 & Up




Questions? Call: **1-800-PLAYSKL**

For future reference, our toll-free consumer service number is also located on this product.

Includes fully assembled copter and two copter propellers.
Product and colors may vary.

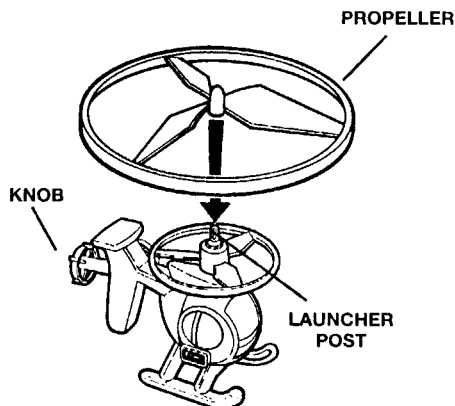

1. Place propeller onto launcher post at top of copter as shown.

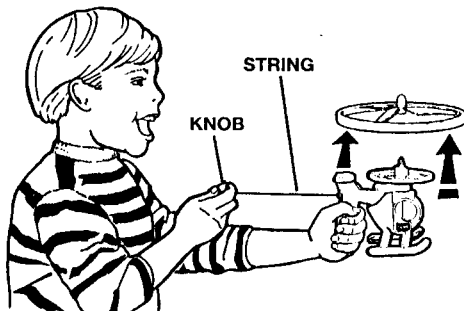

2. Hold copter straight and level. Pull string at back of copter to launch propeller. The faster the knob is pulled, the higher the propeller will fly.

NOTE TO PARENTS: It is best to launch copter propeller with arm held straight and level. Do not aim copter at eyes or face.

©1992 Playskool, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved. **MADE IN U.S.A.**
1051 P/N 43329000

1051



CUT HERE

PLAYSKOOL TWIRLIN' COPTER™ ADDITIONAL PROPELLER OFFER

ITEM	PRICE (Includes Postage & handling)	# OF SETS	AMOUNT ENCLOSED
PROPELLERS (set of two)	\$1.50		
Rhode Island Residents add 7% sales tax:			
TOTAL AMOUNT ENCLOSED: \$			

Available while supplies last.

Make check or money order (no cash or stamps, please) payable to: **Playskool Direct, Inc.**

Mail to: **Playskool Consumer Affairs**
P.O. Box 5839
Pawtucket, RI 02862-5839

Name: _____ Telephone Number _____

Address: _____

City: _____ State _____ Zip _____

(If you are moving in the next 4 weeks, please use new address.)

Allow 6-8 weeks for delivery. Orders must be received by 12/31/94.

©1992 Playskool, Inc. All Rights Reserved.

Product and colors may vary.