



5528


Twirlin' Tunes™ CD Player

Thank you for purchasing this Playskool® toy!

This product is a toy and does not play real compact discs.

Batteries included.

When batteries need replacement, we recommend alkaline batteries. Phillips screwdriver needed to replace batteries (not included).

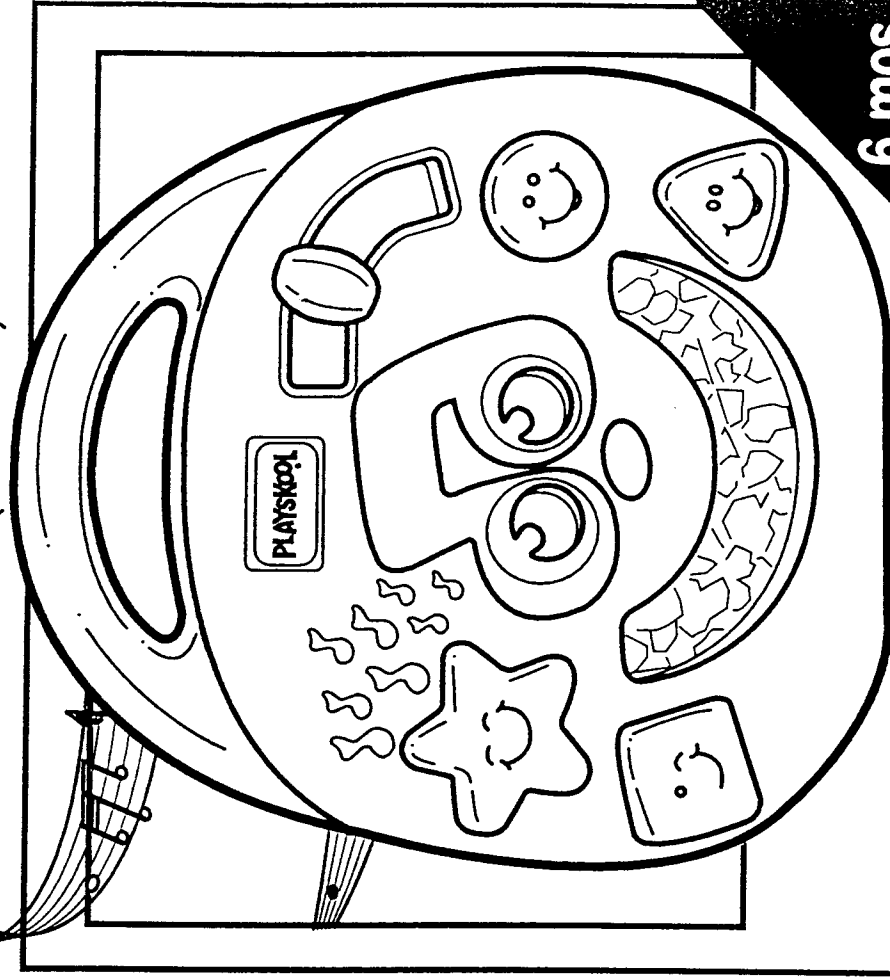

**6 mos.
& UP**

I N F A N T

PLAY INSTRUCTIONS:

- Slide the button to make Twirlin' Tunes™ CD Player play 1 of 16 bouncy songs and make the shimmering disk spin around at the same time!
- Pressing the button will also activate the songs. This lets younger babies activate the music, even though they are still developing the coordination to slide the button. Each time the button is pressed, a song will play. However, the disk will not spin around when you press the button. (Sliding the button while the song is playing will make the disk spin.)
- The songs are arranged in a cycle and always play in the same order.
- At the completion of each song, the toy automatically shuts off until child slides or presses the button again.


Songs Include:

1. Cockles and Mussels (Molly Malone)
2. Old MacDonald Had a Farm
3. London Bridge
4. My Bonnie Lies Over the Ocean
5. Polly Wolly Doodle
6. La Cucaracha
7. Pop! Goes the Weasel
8. She'll Be Comin' Round the Mountain
9. Jack and Jill
10. Hickory Dickory Dock
11. Mary Had A Little Lamb
12. Frère Jacques (Are You Sleeping?)
13. Jenny Lind Polka
14. The Cancan
15. Oh! Susanna
16. The Mulberry Bush

Music: © 1998 Hasbro, Inc. New musical arrangements by Tim Lightbody.

CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

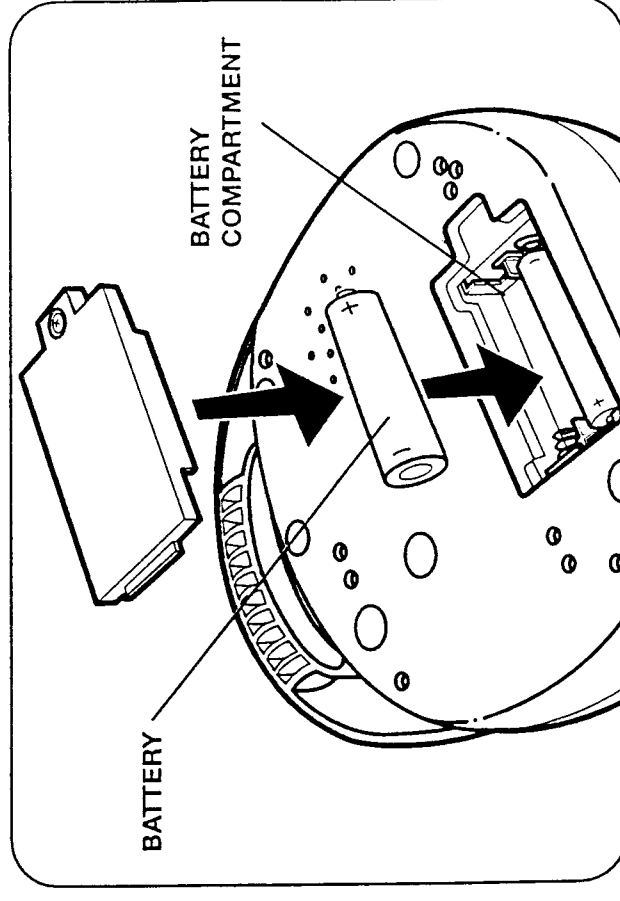

TO REPLACE BATTERIES:

1. Twirlin' Tunes™ CD Player is equipped with 2 "AA" batteries. When they run out, use a Phillips screwdriver (not included) to loosen screw securing battery compartment door and remove door (screw is designed to remain attached to door).
2. Remove and discard batteries. Insert 2 new "AA" batteries (not included). (We recommend Energizer® alkaline batteries.) Replace battery door and tighten screw with screwdriver.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.

© 1999 Hasbro, Inc. Pawtucket, RI 02862. All Rights Reserved.
MADE IN CHINA. P/N 4806810100

