

Upsy Baby

TM
DOLL





Kenner

© CPG PRODUCTS CORP., 1985 by its Div.,
KENNER PRODUCTS, CINCINNATI, OHIO 45202

Patent Pending

1. Before making the doll stand up, she must be in the correct position. To do this, first put her legs in the correct position. Pull the string several times while holding her and listen for the sound to stop. If there is no sound, then her legs are probably already in the correct position.

2. The doll's legs are in the correct position if she is able to stand without support, as shown in illustration A. If she falls when attempting to stand her up, follow the directions in illustration B, to put her legs in the correct position.

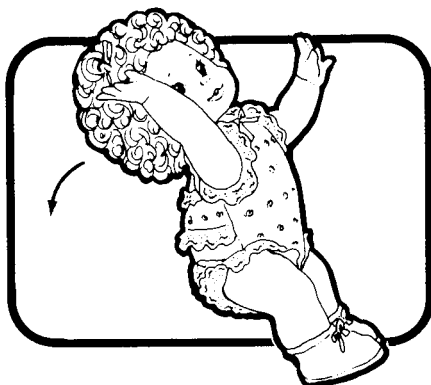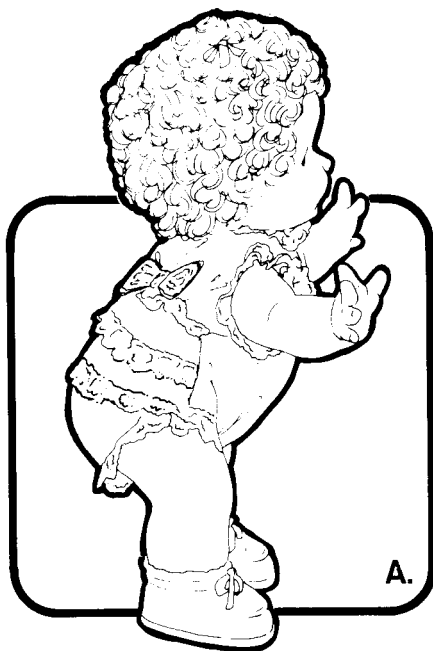

B.



If the doll falls forward, rotate legs one click towards doll's back.



If the doll falls backward, rotate legs one click towards doll's front.



(NOTE: If the doll fails to stand up make sure her arms move freely and her clothing is not caught in the arm, leg or neck joints.)

3. Now you are ready to make your doll stand by herself. Pull the string in back of the doll all the way out several times, until you feel a strong resistance.
4. Be sure the head is in the correct position. Do this by laying the doll on her stomach, and then turn her head slightly to the right.
5. The doll should be laying on her stomach on a smooth flat surface, (i.e. table or counter-top) making sure you position the arms over her head. (She will not stand on some textured surfaces i.e. rugs, carpets, sidewalks, etc.)
6. Press the button under her left arm, and remove your hand quickly. (You will have to feel with your thumb through the doll's dress to locate the button.) (illustration D)



button (under dress)

If, after reading the instructions, you still need assistance with your doll, please call:
1-800-543-4663.
Ohio residents call collect
1-513-579-4641.



Washing Instructions:

To clean the doll's outfit, machine wash using warm water and tumble dry delicate. To clean the hair, rub gently with a damp cloth. Be careful not to soak the hair as it will lose its style. **DO NOT IMMERSE THE DOLL IN WATER.**

WE REALLY DO CARE!

We make each toy with tender loving care. If there is a problem with your toy as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to:

KENNER PRODUCTS
Consumer Affairs Dept.
1014 Vine Street
Cincinnati, OH 45202