 


# Wonderfalls™

 
**CAUTION:** When toy is used in crib, the crib sides should be raised and the crib mattress should be in one of the lower positions.

**CAUTION:** To avoid head entrapment: Do not attach lower strap on toy to mesh sided cribs and playpens.

Thank you for purchasing this Playskool® toy!  
Includes: toy, 3 crib straps, and instructions.

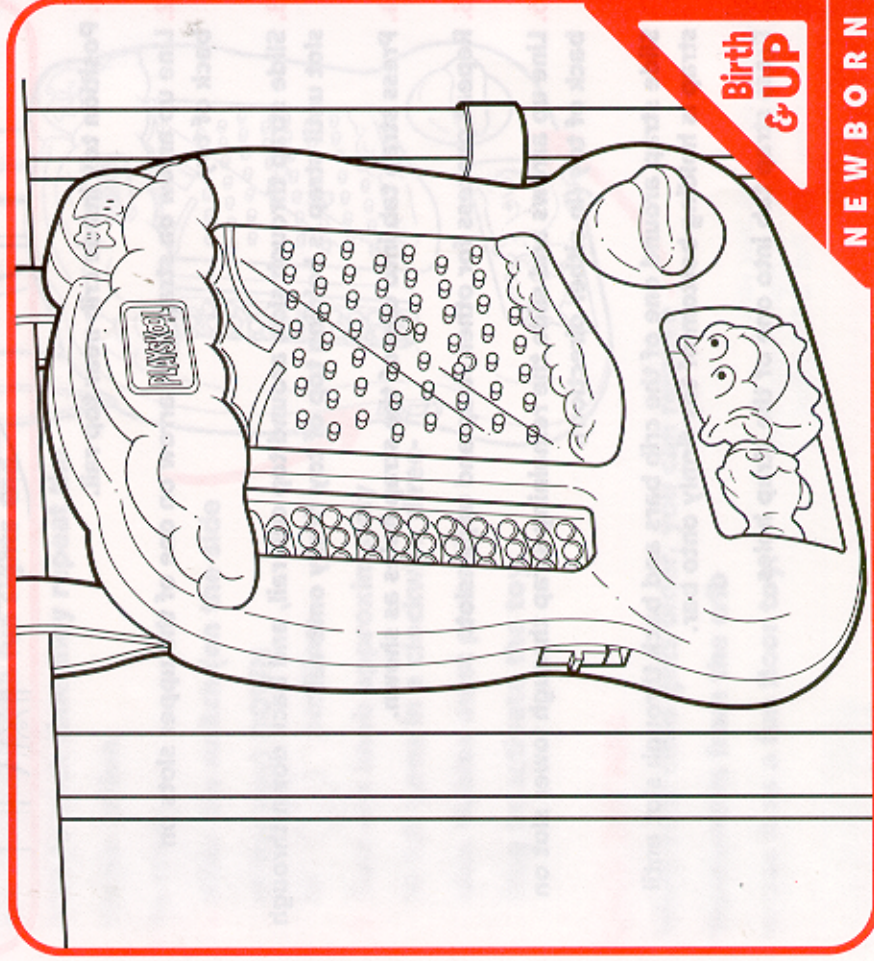

## TO ATTACH TOY TO CRIB:

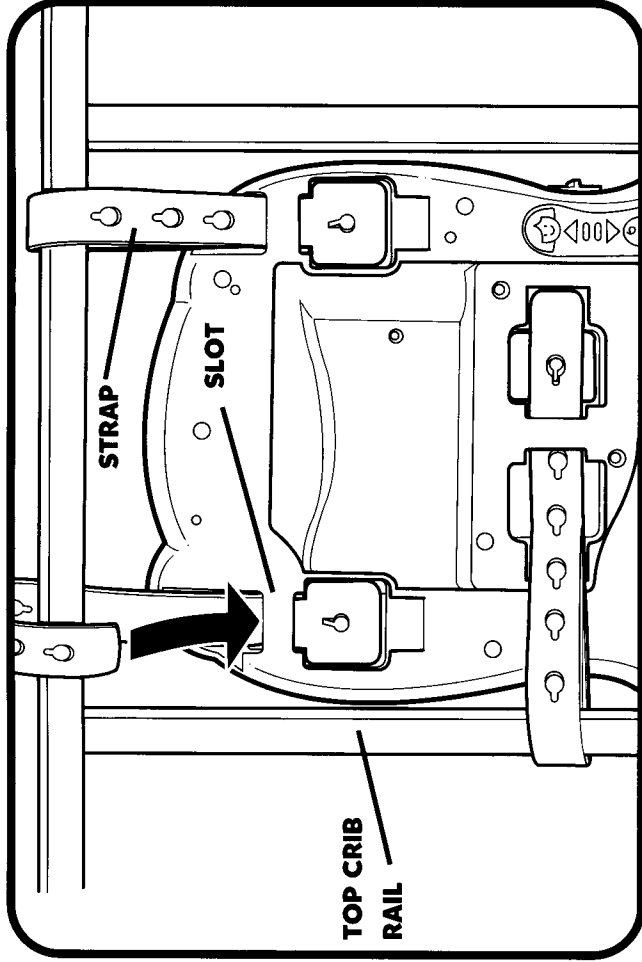

1. Position toy inside crib near top rail.
2. Line up arrow on strap with arrow on one of the upper slots on back of toy.
3. Slide strap through slot, around top crib rail, and back down through slot until strap is holding top of toy firmly onto rail.
4. Press strap tab into one of the strap holes as shown.
5. Repeat process for other strap and upper slot.
6. Line up arrows and slide the remaining strap through lower slot on back of toy (in either direction).
7. Slide strap around one of the crib bars and back through slot until strap is holding bottom of toy firmly onto bar.
8. Press strap tab into one of the strap holes.

## TO OPERATE TOY:

### Watch-Me Mode:

 
- Plays continuously for approximately 6 minutes. Great for babies who have not yet developed the coordination to activate the toy on their own.
- To start:
  1. Slide the switch (on the side of the toy) **UP** to  position.
  2. Turn the knob approximately 10 full turns in a clockwise direction to wind up the toy.

### Child-Activated Mode:

- Each time babies gently press down on the frog, the toy runs for approximately 45 seconds. Babies are delighted to practice their developing hand coordination and are rewarded with fun sights and sounds each time they repeat the simple action.

- To start:

1. Slide the switch (on the side of the toy) **DOWN** to  position.
2. Turn the knob approximately 10 full turns in a clockwise direction. Babies must press the frog to activate the toy.

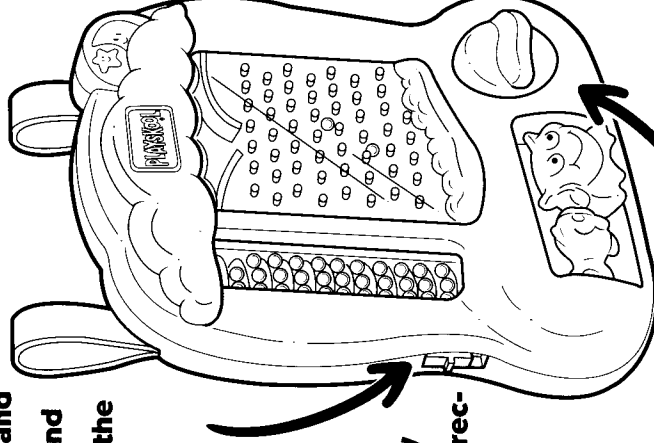

## FLOOR TOY FUN:

When your child gets older, you can remove Wonderfalls from the crib to use it as a fun floor toy.