 


Instructions

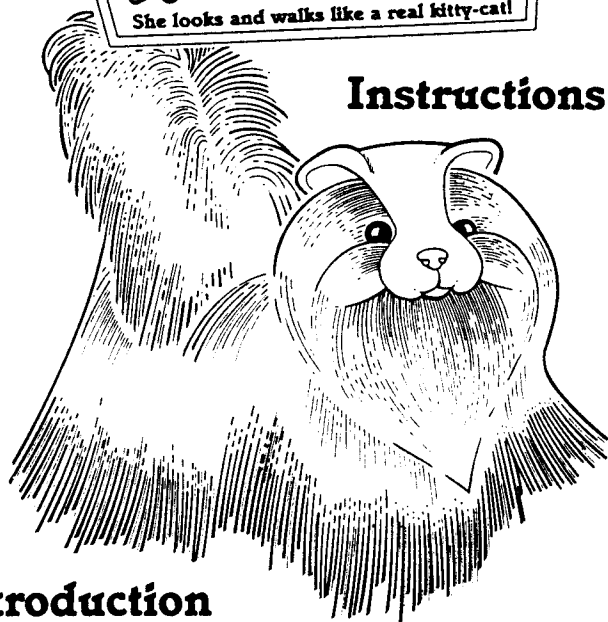

Introduction


Yo-Yo My Walking Kitty is fun to take for a walk – she looks and walks like a real kitty-cat. Her head turns from side to side, and she walks forward and backward!

Battery Cautions

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.


How To Take Yo-Yo For A Walk

1. Hold leash in one hand with control switch in the palm of your hand.

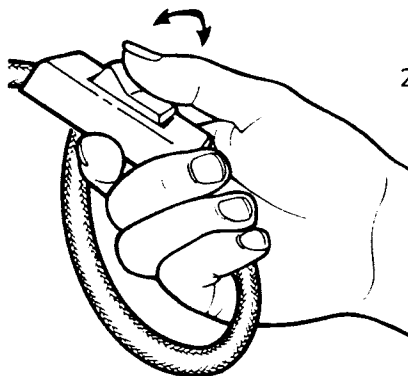



2. Press down on one side of the switch to make Yo-Yo walk forward. Press down on the other side of the switch to make her walk backward. **Note: Yo-Yo will only move when you press down on the switch.**

stop Yo-Yo, remove your finger from the switch.

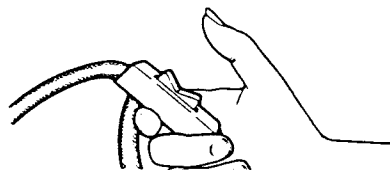



How To Insert Batteries

1. Loosen screw on battery compartment door with a Phillips® screwdriver.

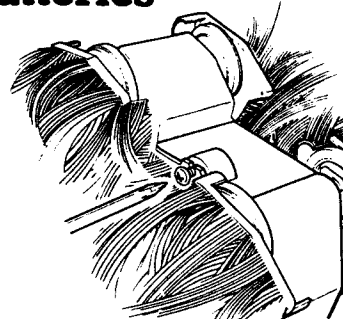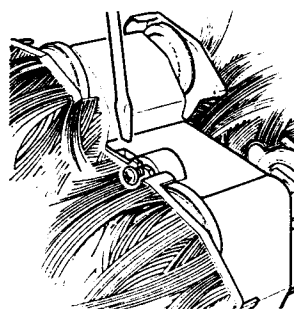

2. Insert flat head screwdriver into slot. Press it against tab and lift up until battery compartment door is lifted out of compartment.

3. Insert 4 "D" size batteries in the order (1-4) shown in the illustration, and in the position (+ or -) shown inside the battery compartment.

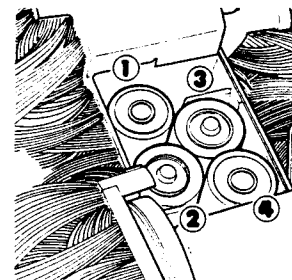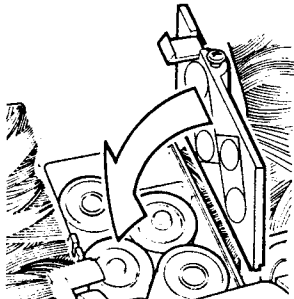

4. Replace door in compartment and snap tab into place. Tighten screw.

Where Yo-Yo Likes To Walk

- Yo-Yo walks best on flat floors and pavement. Do not walk her on grass, sand, or gravel, or through mud or water. She does not walk up or down stairs.

Special Moves

- You can make Yo-Yo beg by pulling up on her leash and depressing the remote control switch in either direction.
- Yo-Yo can be guided in any direction you want – gently pull on the leash as she walks to guide her in the direction you want her to walk.

NOTE: If you have any questions about how Yo-Yo is working, please call this toll-free number (1-800-255-5516) and we'll be happy to help you.

Washing and Grooming Yo-Yo

- Wash Yo-Yo with a damp cloth and mild soap. Let damp plush dry before grooming.

Cautions

- Do not submerge Yo-Yo in water.
- Always watch where you are going when you are walking with Yo-Yo.
- Do not sit or ride on Yo-Yo.
- Do not push Yo-Yo along floor. Always use remote control switch to move Yo-Yo.

8475
P/N 42385900

©1991 Hasbro, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved.

