

# Rock IT!



 **x3 1.5VAAA**  
ALKALINE BATTERIES  
REQUIRED NOT INCLUDED



Get the free FURBY app!

 Available on the  
App Store

Works with iPad®,  
iPod touch® & iPhone®  
- iOS 4.2 or later  
required.

AGES  
**6+**

Not all functions of the app work with older devices.

## KEEP THE PARTY GOING!

# Furby

## PARTY ROCKERS

PARTY ROCKERS creatures are born  
with attitude and won't let anyone change them.  
But you should know, they LOVE parties...

woo-hoo!  
IT'S A PARTY!



Play some tunes!



Pull some tails!



Talk, sing,  
make noise...

The more you rock **PARTY ROCKERS**, the wilder they get!

Put **PARTY ROCKERS** and **FURBY** together  
for an **AWESOME** party!

FURBY and  
PARTY ROCKERS  
each sold separately.



- Keep FURBY PARTY ROCKERS away from bathtubs, pools, oceans and all wet, watery places.
- Did your FURBY PARTY ROCKERS creature get some taco sauce on its fur? Just wipe it with a clean, damp cloth. Even better, since FURBY PARTY ROCKERS are fussy about their fur, keep them away from food and drinks.

START

YAWN

### WHAT ARE THEY SAYING?

Translate FURBISH  
with the app.

Check out the complete FURBISH™ dictionary at  
[www.furby.com](http://www.furby.com)

### NEED PARTY SNACKS?

Feed PARTY ROCKERS  
from the app.

### ...AND KEEP ON ROCKING IT!




FURBY and PARTY ROCKERS each sold separately.

# FURBY PARTY ROCKERS HELPFUL HINTS:

WHAT'S WRONG?	WHY?	WHAT SHOULD I DO?
Your FURBY PARTY ROCKERS creature is acting weird!	Your FURBY PARTY ROCKERS creature may need new batteries.	Press the REFRESH BUTTON, and power up your creature with some fresh batteries.
Your FURBY PARTY ROCKERS creature is ignoring its friends. Why the attitude?	Your FURBY PARTY ROCKERS creature can't see the other FURBY PARTY ROCKERS creatures or FURBYs.	FURBYs and FURBY PARTY ROCKERS like to see each other when they're together, so make sure they're face-to-face.
The music is playing - why isn't your FURBY PARTY ROCKERS creature doing anything?	Your FURBY PARTY ROCKERS creature is too far away from its friends.	Team huddle! FURBYs and FURBY PARTY ROCKERS have their own idea about personal space: bring them closer together.
	Your FURBY PARTY ROCKERS creature can't hear the music.	Crank those tunes!

**NOTE:** If these solutions do not resolve the issue, please contact Hasbro Customer Service at 1-800-327-8264. In the U.K. please call 00800 22 42 72 76.

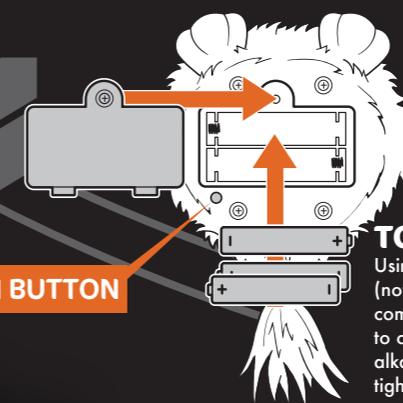

## TO INSERT BATTERIES:

Using a Phillips/cross head screwdriver (not included), loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 3 x 1.5V AAA alkaline batteries. Replace cover and tighten screw.

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
- TO AVOID BATTERY LEAKAGE**
  - Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
  - Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
  - Remove exhausted or dead batteries from the product.
  - Remove batteries if product is not to be played with for a long time.
  - Do not short-circuit the supply terminals.
  - RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in a household waste bin.



# FURBY APP HELPFUL HINTS:

Works with iPad®, iPod touch® & iPhone® - iOS 4.2 or later required. Not all functions of the app work with older devices.

WHAT'S WRONG?	WHY?	WHAT SHOULD I DO?
Your FURBY PARTY ROCKERS creature isn't responding to the FURBY app.	Your FURBY PARTY ROCKERS creature can't hear it.	Move your FURBY PARTY ROCKERS creature closer to the device.
The FURBY app on your iPad®, iPod touch® or iPhone® isn't reacting to your FURBY PARTY ROCKERS creature.	The device is too far away from your FURBY PARTY ROCKERS creature.	Move your FURBY PARTY ROCKERS creature closer to the device.

**NOTE:** Hasbro is not responsible for any content distributed through the App Store, except for Hasbro-generated content. Please refer to Apple Inc.'s terms and conditions for further information. **Questions: Call 1-800-327-8264. In the U.K. please call 00800 22 42 72 76.**



A3189/A3187 Asst. Product and colors may vary. iPad, iPod touch and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. ®\* and/or TM\* & © 2012 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. Manufactured by Hasbro SA, Rue Emile-Boéchat 31, 2800 Delémont CH. Represented by Hasbro Europe, 2 Roundwood Ave, Stockley Park, Uxbridge, Middlesex, UB11 1AZ, UK. U.S. Patent Nos. 6160986, 6514117, 6959166, 6773344, 6356867 & Pat. Pend., Reg. Des. Nos. EC001334866-0005 & BR 30 2012 001772-6 & CN Reg. Des. App. PN:7323080001