

IMPORTANT! PLEASE READ INSTRUCTIONS BEFORE USING YOUR ALPHIE™ BOOSTER PACK.

AGES
3+



 
 
 
Alphie™ Booster Pack

Letters

Includes:
25 double-sided
cards, a cartridge
and instructions.

Before you begin, make
sure ALPHIE is turned on.

1. Insert cartridge with
label facing up.
2. Insert Card
3. Press the button on
ALPHIE's head and
follow his suggestions.

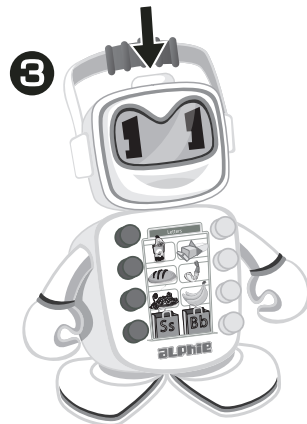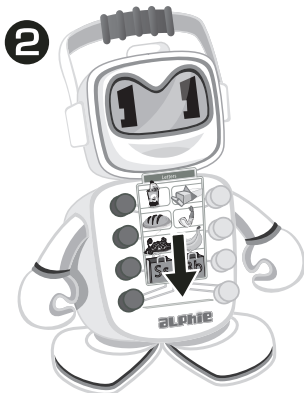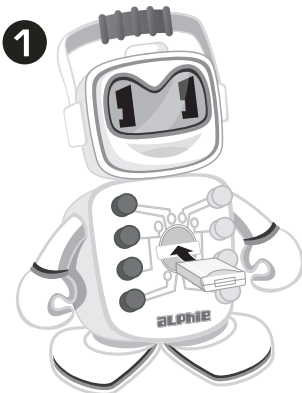

NOTE: Remove card by pulling straight up. Do not pull towards you. If you bend the card, ALPHIE will not be able to read it next time you try to play.

 
ALPHIE™ BOOSTER PACKS WILL ONLY WORK WITH AN ALPHIE™ TOY PURCHASED IN THE SAME COUNTRY.

ALPHIE Troubleshooting Guide

ALPHIE doesn't seem to be reading the card and/or responds with,
"Hmmm... I don't know that card. I think I need a matching memory cartridge."

Pull straight up to remove the booster card and make sure you have the correct memory cartridge inserted. Then, reinsert the booster card straight down.

If you are sure you have the correct memory card and corresponding cartridge inserted, and ALPHIE still is not responding, turn the power switch to the "Off" position to reset ALPHIE. Turn him back on and ALPHIE should now be ready to play.

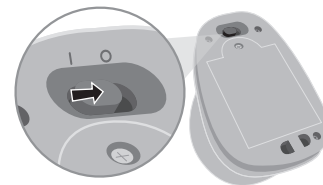

(Bottom of foot view)

Alphie is not recognizing the correct answer.

Hold on to Alphie's hand while firmly pressing on the answer button. Sometimes Alphie's buttons need to be pressed a little harder. Once you've played with Alphie for a while, you should get the hang of it.



© 2010 Hasbro. All Rights Reserved.

™ TM & ® denote U.S. Trademarks.

18514/19524Asst.

P/N 7081210000

