


AGES 4+
77423 Asst.

FurReal Friends

Baby Bird

INSTRUCTION MANUAL

 NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.



Product and colors may vary.
© 2008 Hasbro. All Rights Reserved.
TM & © Hasbro U.S. Trademarks. U.S. Pat. No. 6,811,467.
PIN 6549530000

Use your 2-year, 180-day return at
www.furrealfriends.com

Questions? Call 1-800-944-3733

Thank you for purchasing this FURREAL FRIENDS® toy! For maximum play value, please read and follow these instructions carefully.

 
POWERED BY
POWERFUEL
BATTERIES INCLUDED x3

Replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

Note to the consumer: This toy is packaged in "TRY ME" mode. When you bring the toy home, activate its full range of features by moving the toy's TRY-ME/OFF/ON switch to the "ON" position.


GETTING STARTED

To activate your toy bird, slide the TRY-ME/OFF/ON switch to the "ON" position. Your toy bird is now ready to play!

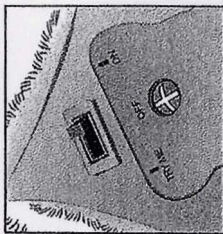

Tongue Sensor

 When you depress your toy bird's tongue sensor (for example, by giving it its bottle), she will move and make bird sounds.

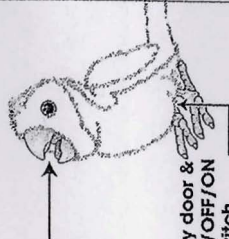

A sensor is a part of the toy that responds to your touch!

Battery door & TRY-ME/OFF/ON switch

PLAYING WITH YOUR TOY BIRD

Your toy bird responds to your touch by moving her beak, tilting her head, flapping her wings, and making lots of bird sounds. The more you "feed" your toy bird, the happier she will be!

 
If you stop playing with your toy bird for a few moments, she will go into "Hang-Out Mode." She will make random bird sounds. After about a minute, your toy bird will stop moving and will need to be woken up again: do this by giving her the bottle. When you give your toy bird her bottle, she will make "eating" sounds. Take the bottle away, and she will chirp for more!

Note: The toy uses battery power whenever its switch is in the "ON" position. When you're not playing with the toy, move its switch to the "OFF" position; this will help conserve battery life.




TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries (not included). Replace door and tighten screw.

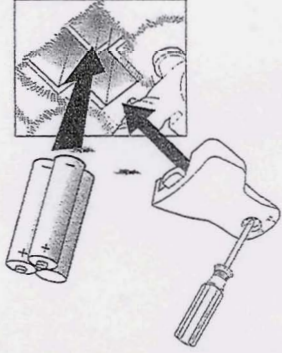

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

 IMPORTANT: BATTERY INFORMATION



CAUTION:

- To clean the toy, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.
- Do not put the toy in the washing machine.
 - Do not submerge the toy in water.
 - Do not use detergent or stain removers on the toy's fur.
 - Do not get the toy wet; to remove stains, use only a slightly damp cloth on the toy's fur.
 - To prevent staining the toy's fur, wipe off dirt immediately.
 - If the toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace the batteries.
 - Avoid spilling food or beverages on the toy.
 - Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
 - Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.

CLEANING INSTRUCTIONS

- ### FCC STATEMENT
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC STATEMENT