



1-2-3 High Chair™



 
Dear Parent,

Thank you for choosing the 1-2-3 High Chair, a versatile product that offers three chairs in one! For infants too young to sit up independently, it provides a comfortable recline position with head and back support. As baby grows, it can be used as a standard high chair, complete with an adjustable tray and built-in footrest. Then, when baby becomes a toddler, the high chair becomes a toddler chair for sitting at the table, looking at books and other activities. The Playskool 1-2-3 High Chair is the perfect place for baby... right from the start!

If you have any questions, comments, or need additional information concerning this product or its parts, please call our Playskool Consumer Service hotline at 1-800-PLAYSKL (1-800-752-9755), Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

All written inquiries should be mailed to: Playskool Consumer Service Department,
P.O. Box 200,
Pawtucket, Rhode Island 02862-0200

Maximum Weight: 50 Lbs.
Tool Required: Phillips screwdriver.



For future reference, our toll-free consumer service number is also located on this product.

Newborn Recliner: Birth - 6 Mos. (Max. Weight: 20 Lbs.)

High Chair: 6 Mos. - 4 Yrs. (Max. Weight: 50 Lbs.)

Toddler Chair: 18 Mos. - 4 Yrs. (Max. Weight: 50 Lbs.)

PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

SAFETY CAUTIONS


WARNING:

- ALWAYS keep child in view while in high chair. Never leave the child unattended.
- The child should be secured in the high chair at all times by the restraining system, either in the reclining or upright position.
- The tray is not designed to hold child in the chair.
- It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.
- DO NOT hang or tie toys or other objects on the high chair.
- DO NOT use high chair as an infant carrier or car seat. Use seat only in the frame provided.

CAUTION:

- Remove child from high chair before adjusting height or moving into or out of recline position. When making adjustments to the tray, always make sure that all parts of the child's body are clear of moving parts.
- DO NOT press tray against child.
- DO NOT allow children to play with or hang onto high chair because of tip-over potential.
- DO NOT allow child to climb into high chair unassisted.
- High chair should be used by one child at a time.


PARTS LIST

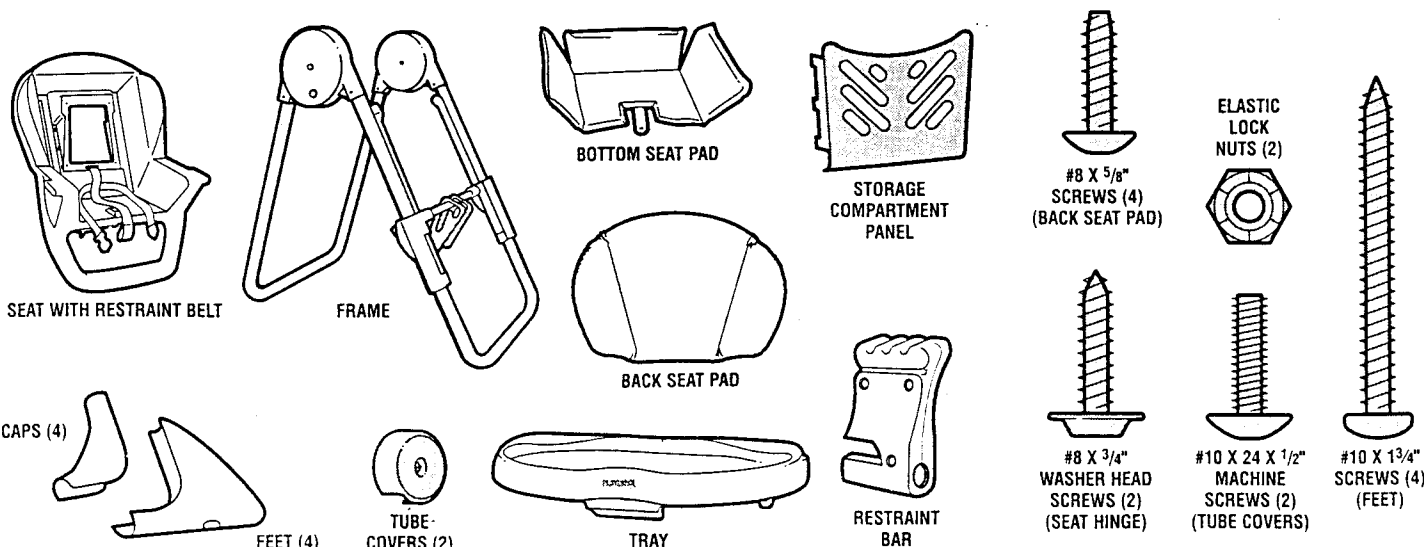

SCREWS SHOWN ACTUAL SIZE


To order parts for this product, please consult the REPLACEMENT PARTS ORDER FORM.

HOW TO ASSEMBLE THE PLAYSKOOL 1-2-3 HIGH CHAIR

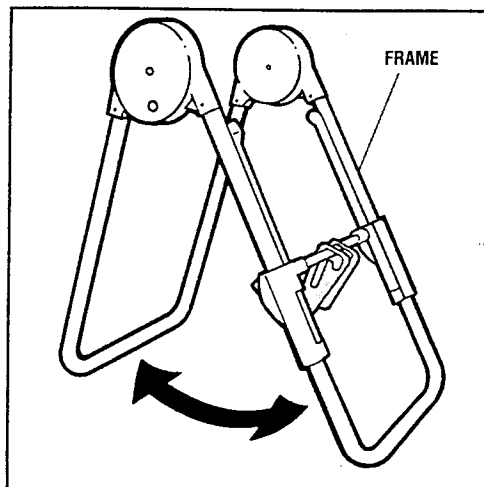


To prevent a tip-over hazard, feet (and caps) must be installed before using chair.


- Unfold frame so that legs are separated and locked into open position.

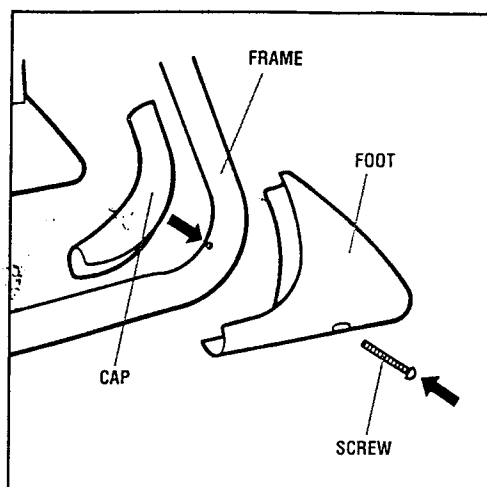


- Secure feet and caps to bottom corners of frame with #10 x 1 3/4" screws (one screw per corner). Install exactly as shown, with flat side of foot facing down.

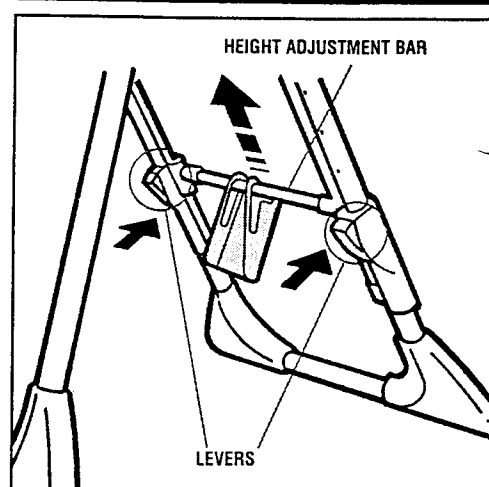


- Press both levers on height adjustment bar at the same time and move bar up to highest set of holes on frame legs. Release levers and make sure bar locks into *both* top holes on frame legs.

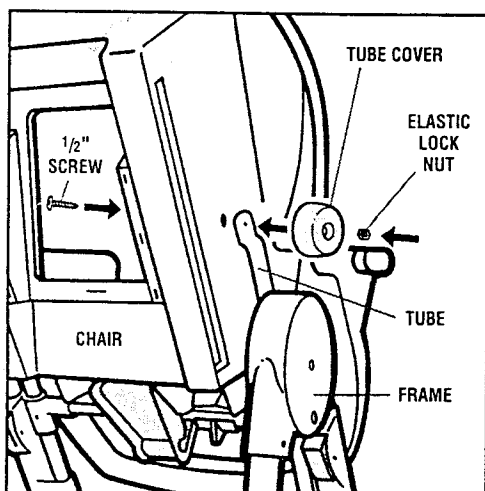

- Place seat on top of height adjustment bar.
- Insert elastic lock nuts into tube covers. Align holes in side of seat with hole in tube. From inside seat, insert a #10 x 24 x 1/2" machine screw through holes. Holding lock nut inside tube cover, tighten screw into lock nut as shown. Repeat for other side.

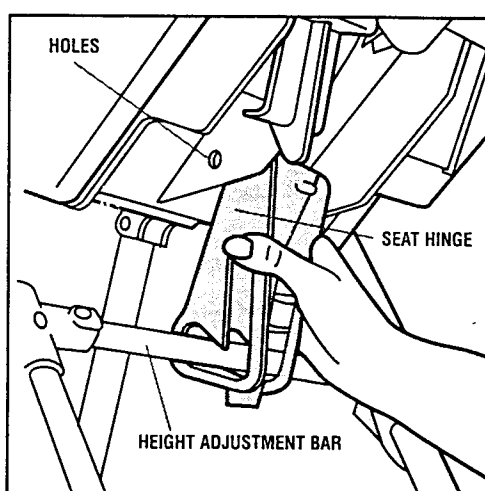

- Lift front of seat, then grasp seat hinge and push it up so that the tabs on its sides snap into holes on bottom of seat.

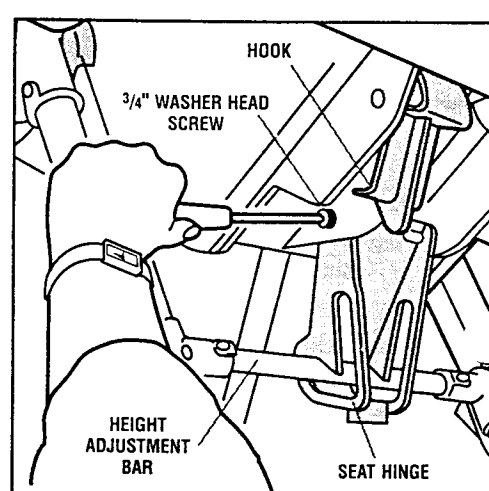

- Secure seat hinge to seat with two #8 x 3/4" washer head screws as shown. Lift front of seat and push seat hinge back to allow seat to swing down. Push front of seat in to snap hook onto height adjustment bar and lock seat in place (listen for snap).

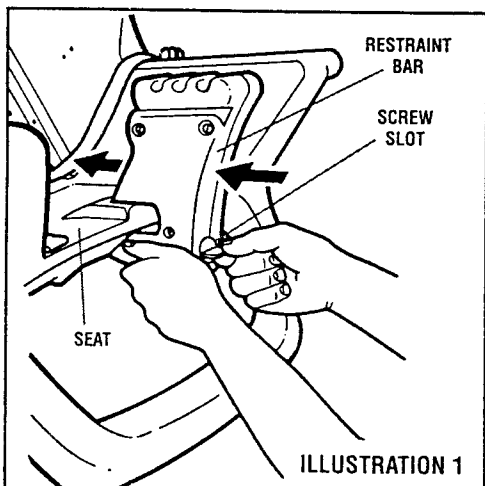


ILLUSTRATION 1



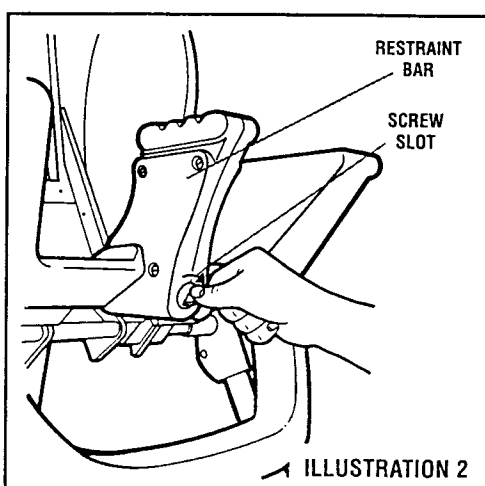


ILLUSTRATION 2


- Insert coin into screw slot on restraint bar and turn screw clockwise so that slot is horizontal, as shown. Hold screw slot in horizontal position and begin to slide restraint bar onto seat (ILLUSTRATION 1). Once started, release screw slot and slide restraint bar the rest of the way onto seat.
IMPORTANT: Restraint bar *must snap* into place and **screw slot must be vertical** to ensure correct installation.
- To remove restraint bar, insert a coin into the screw slot and rotate the screw 1/4 turn clockwise so that slot is horizontal (ILLUSTRATION 2). Slide out restraint bar.

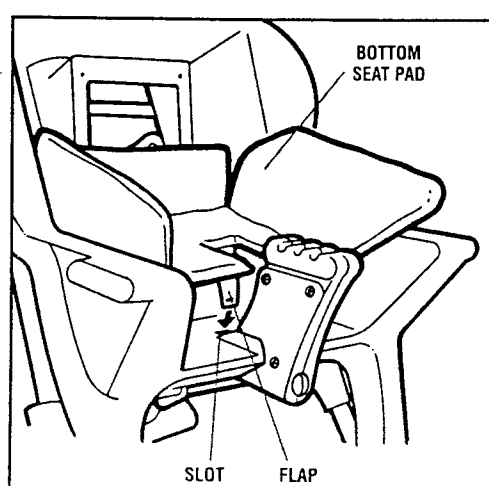


- Place bottom seat pad onto seat. To secure, push flap on pad through slot in seat (behind restraint bar). Fit flap onto post on underside of seat.

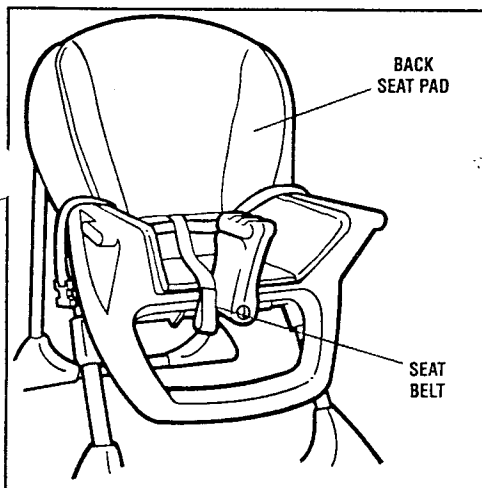

- Be sure seat belt is accessible before back seat pad installation. Place back seat pad onto seat. Align holes in pad with holes in back of seat.

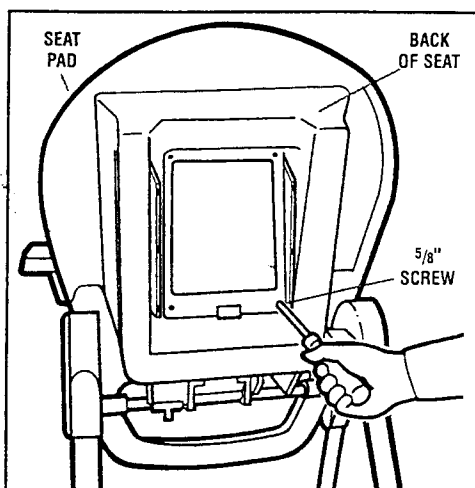

- Secure pad to seat with four #8 x 5/8" screws as shown.

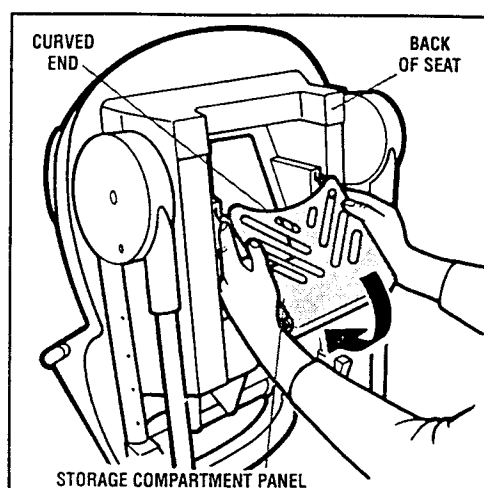

- Position storage compartment panel so that curved end is at top. With panel angled out as shown, insert top hooks into top slots, then swing panel down and snap tabs into remaining slots.

HOW TO USE THE PLAYSKOOL 1-2-3 HIGH CHAIR

- Place your child in high chair. With crotch belt positioned between baby's legs, slide waist belt through loop in crotch belt and fasten buckle (Illustration 1).

Adjust fit of waist belt so that it is snug around baby's waist (Illustration 2):

- To **tighten fit**, slide inner belt length (1) through buckle (this creates a loop of slack belt length). Grasp end of outer belt length (2) and firmly pull it to slide the loop of slack belt length through buckle.
- To **loosen fit**, push outer belt length (2) through buckle to slightly loosen the belt that's looped around buckle. Grasp outer belt length (3) where it loops back out of buckle, and work it through buckle (be careful not to pull inner belt length).

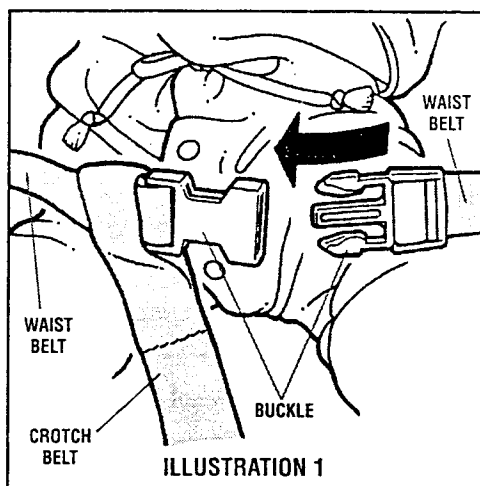


ILLUSTRATION 1


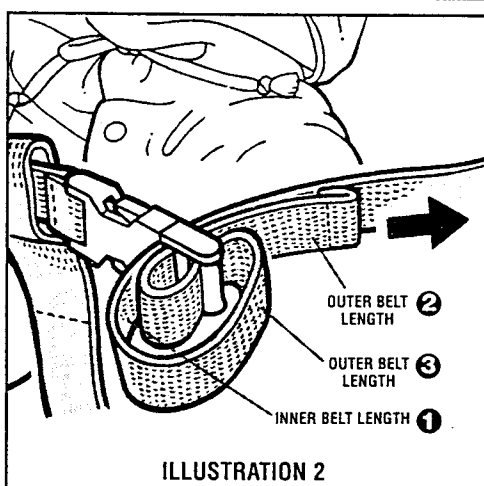


ILLUSTRATION 2

WARNING: Avoid serious injury. Always use seat belt.

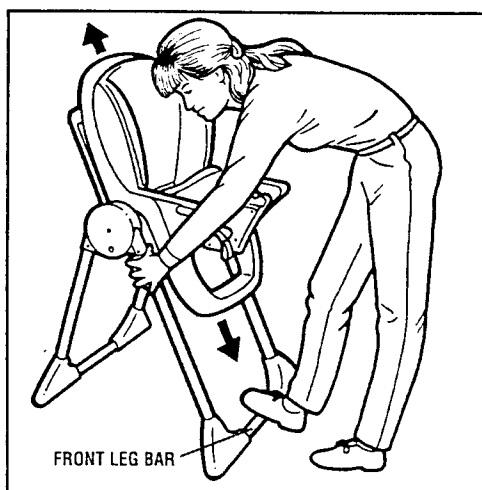

HEIGHT ADJUSTMENT

The 1-2-3 High Chair seat can be adjusted to six different heights. To adjust, place your foot on front leg bar. Press both levers on the height adjustment bar at the same time and move seat up or down to desired height. Release levers and make sure bar locks into both holes on frame legs. **PULL UP AND DOWN ON SEAT TO MAKE SURE BAR IS ENGAGED.**

- Do not adjust seat height with child in seat.

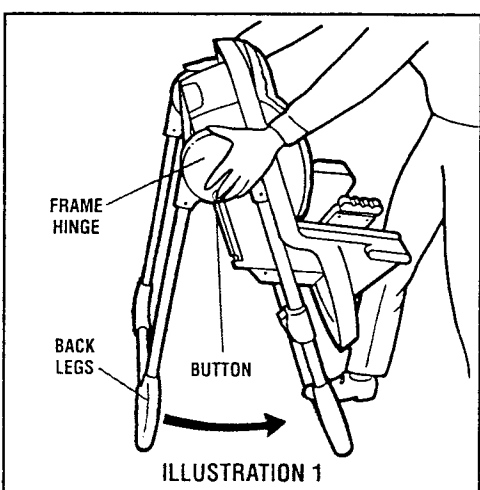


ILLUSTRATION 1




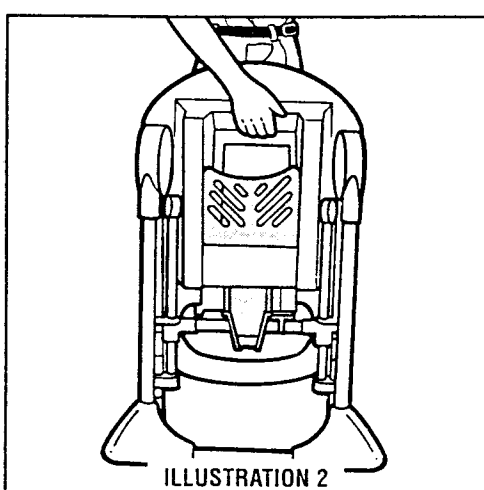


ILLUSTRATION 2

FOLDING AND STORING YOUR 1-2-3 HIGH CHAIR

- Place seat in an upright position (not reclined). Adjust seat to lowest height. Press both buttons on frame hinges at the same time and move back legs to the front of chair until chair is locked in the folded position (Illustration 1). To carry chair, grasp back of seat above storage compartment, with front of chair facing toward you, as shown (Illustration 2).




1. NEWBORN RECLINER Birth - 6 Mos. (Max. Weight: 20 Lbs.)

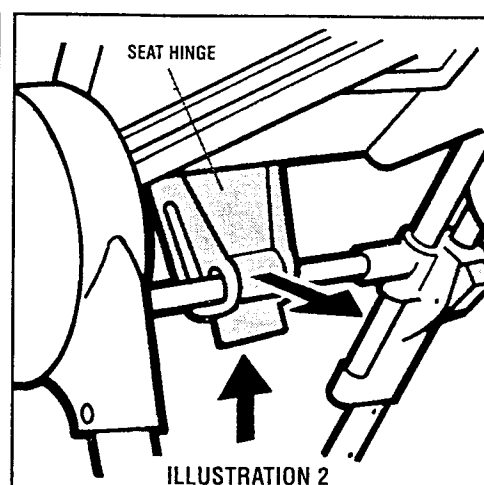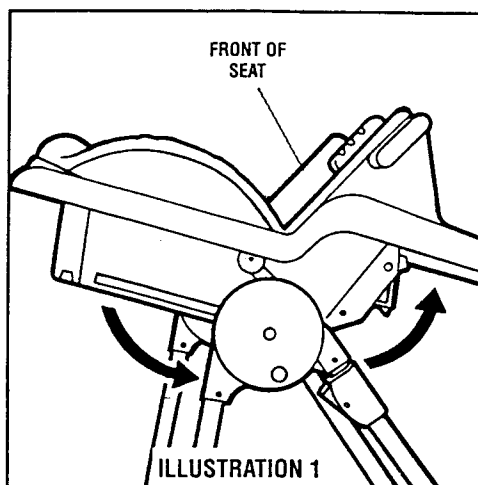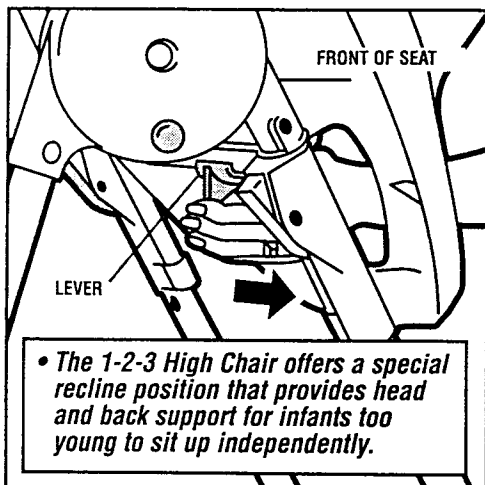

- To place the seat in the recline position, the seat must first be adjusted to its highest position (see Height Adjustment).
- Pull lever on left underside of seat to release the hook.

- Lift front of seat up and tilt it back so that seat locks into a position facing upward (ILLUSTRATION 1).
- To return seat to upright position, lift up front of seat, then push seat hinge in to snap hook onto height adjustment bar.
- Do not adjust seat to recline position with child in seat.

2. HIGH CHAIR 6 Mos. - 4 Yrs. (Max. Weight: 50 Lbs.)

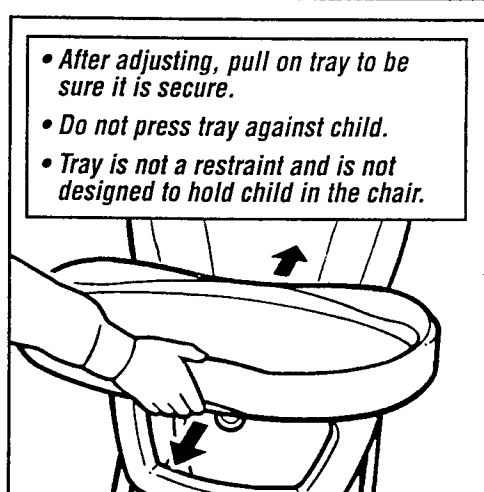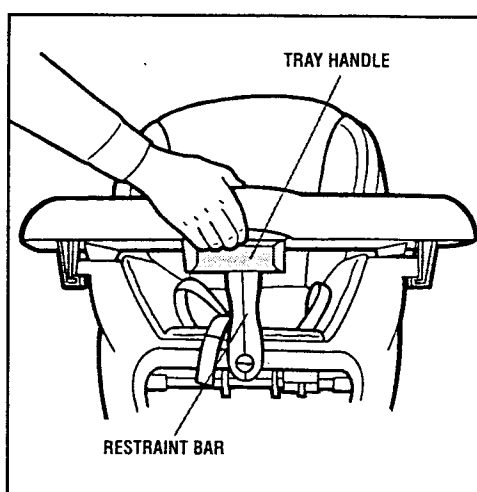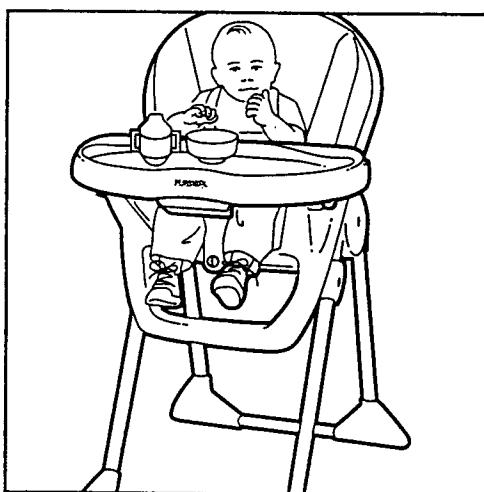


- To use this innovative product as a standard high chair, the seat should be in the upright position as shown, and the tray should be used as explained.

TRAY PLACEMENT AND ADJUSTMENT

- Squeeze tray handle and slide tray over armrests. Be sure tray rail slides into grooves on restraint bar.

- Tray can be moved in or out to three different positions by squeezing tray handle. To remove tray, squeeze tray handle and slide tray out.

3. TODDLER CHAIR 18 Mos. - 4 Yrs. (Max. Weight: 50 lbs.)

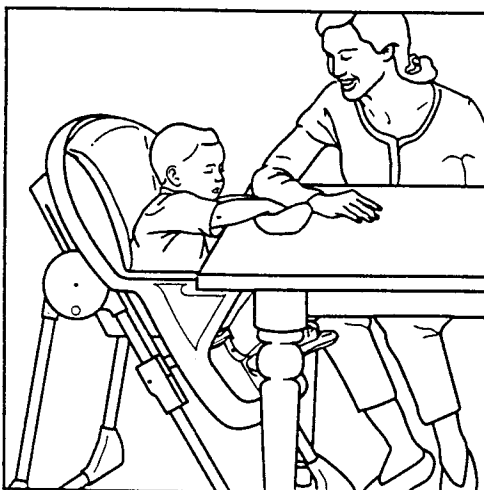

WARNING: NEVER LEAVE CHILD UNATTENDED IN CHAIR. ALWAYS KEEP CHILD IN VIEW.

- To use this product as a toddler chair, the seat should be in an upright position with tray removed. Adjust chair to its lowest position. For younger children, be sure to use the restraint bar and seat belt.

CLEANING

 
- All parts of high chair are surface washable and can be cleaned with a damp cloth and solution of mild detergent and water. Do not use abrasives or solvents. Do not immerse tray in water.
- The bottom of the seat can be cleaned of debris by removing the bottom seat pad. Do not machine wash seat pads.

MAINTENANCE NOTES

- IF exposed to inclement weather, dry off high chair with a soft cloth to assure longer life.
- PERIODICALLY check high chair for loose hardware or torn material. Replace or repair as needed.




1-2-3 High Chair™




For future reference, our toll-free consumer service number is also located on this product.

TO REPLACE BACK SEAT PAD AND/OR SEAT BELT

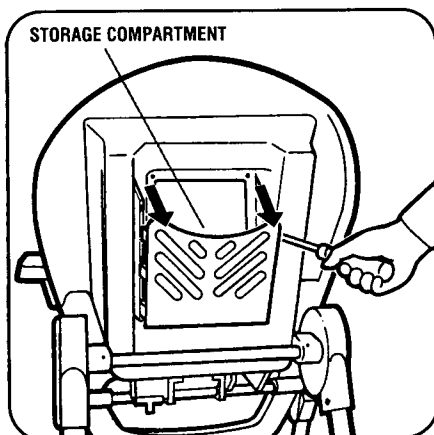


1. With a screwdriver, pry tabs on storage compartment panel out of slots in seat. (Note: The tabs will break; a replacement panel is included.)

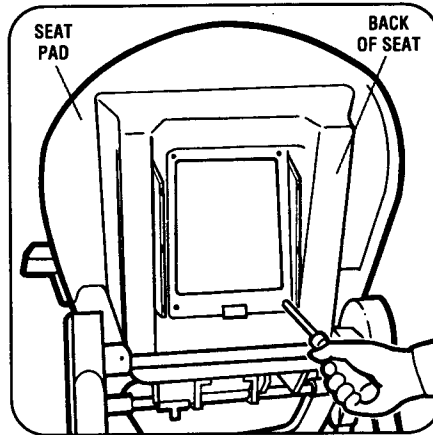


2. Using a Phillips® screwdriver, remove 4 screws from seat.
3. Remove back seat pad.


NOTE: IF YOU ARE NOT REPLACING SEAT BELT, SKIP STEPS 4 AND 5

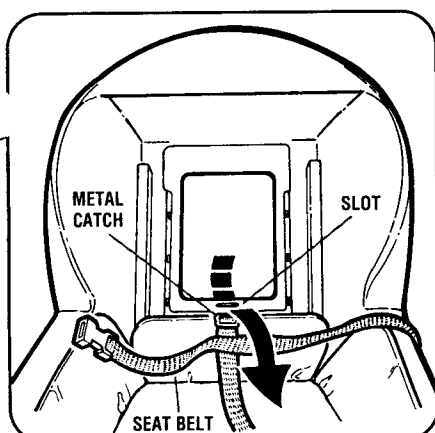


4. Slide metal catch through slot in seat to remove seat belt.

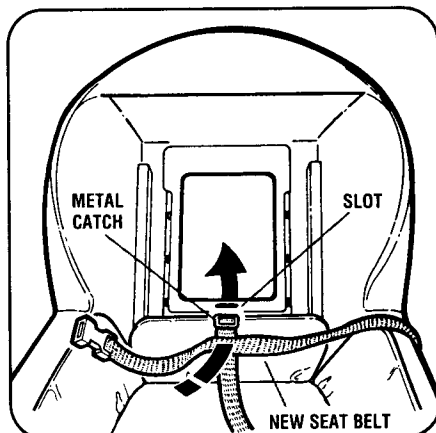


5. Insert metal catch on new seat belt through slot in seat, and tug belt to ensure it's securely in place.

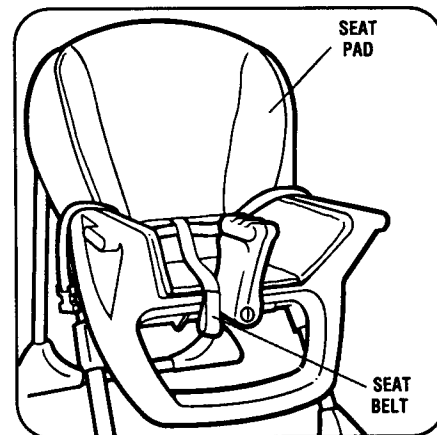

6. Be sure seat belt is accessible before back seat pad is replaced. Place back seat pad onto seat.

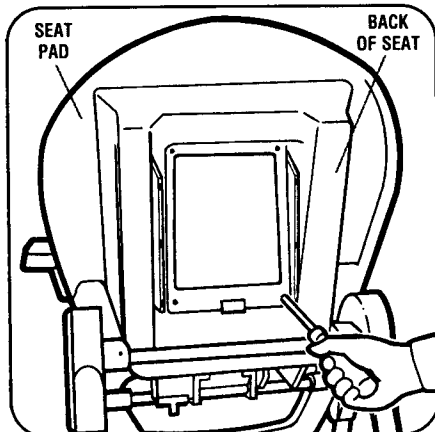

7. Align holes in back of pad with holes in back of seat. Replace screws to secure pad to seat.

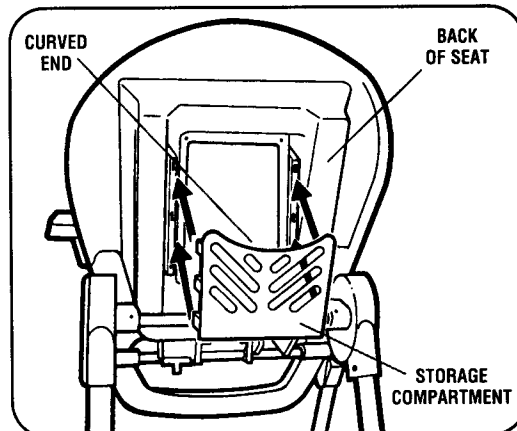

8. Position storage compartment panel with curved end on top. Align tabs with slots on seat and snap panel onto seat.

©1994 Playskool Baby, Inc., Northvale, NJ 07647 USA, a subsidiary of Hasbro, Inc. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office. U.S. Patent No. 5,238,292. Other patents pending. **MADE IN USA.**

107, 108, 730, 731 P/N 45429100